



Kit 1083

TOYOTA Hilux, 2-dr Pickup, 98-04



TOYOTA Hilux, 2-dr Pickup extended, 98-04

TOYOTA Hilux, 4-dr Pickup double cab, 98-04

 
 
**480R
754**

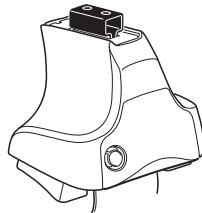

480

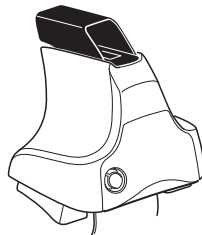  

750

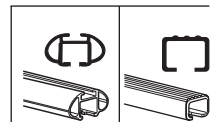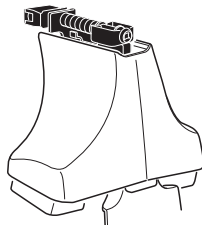  

THULE[®]
SWEDEN

TOYOTA Hilux, 2-dr Pickup, 98-04

 xx kg
xx lbs

+

 3,5 kg / xx lbs

=

Max.
30kg/66 lbs

TOYOTA Hilux, 2-dr Pickup extended, 98-04
TOYOTA Hilux, 4-dr Pickup double cab, 98-04

 xx kg
xx lbs

 
+

 7 kg / 15,4 lbs

=

Max.
60kg/132 lbs








80 km/h
50 Mph


130 km/h
80 Mph

40 km/h
25 Mph

 km/h
Mph




+

 


Kit XXXX





 

 x1

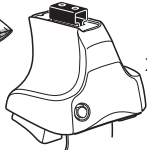  x4

 
 x4

 x4

 x4

480R/754

 x1

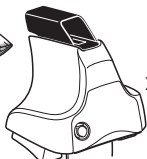
 x4

 x4

 x4


480



 
 x1

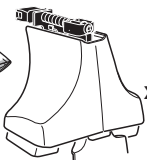 x4

 x4

    750



				
 x2	 x2	 x2	 x2	 x2
 x2		 x2	 x2	
 x2		 x4		
 x4		 x4		



 **211** x4

 
 
 
 
 
 **224** x2

 **212** x2


 **07** x4

 x1


Kit

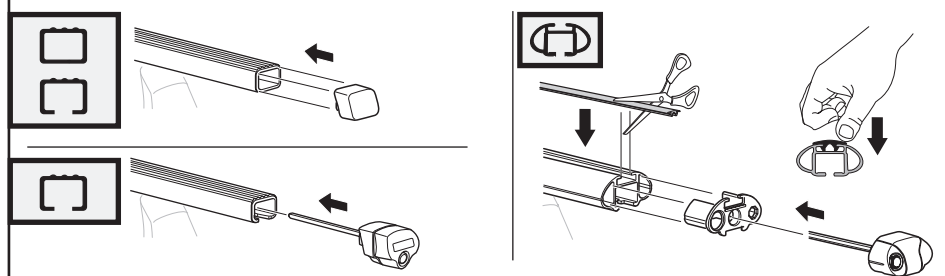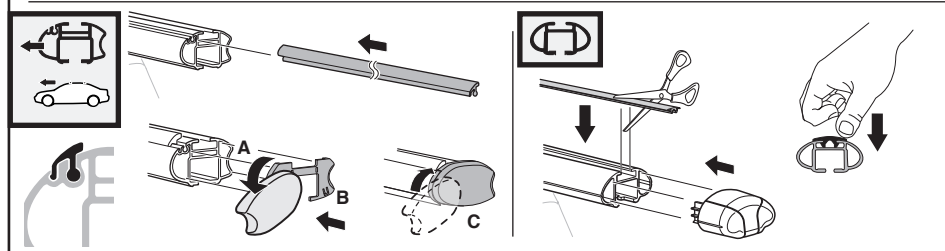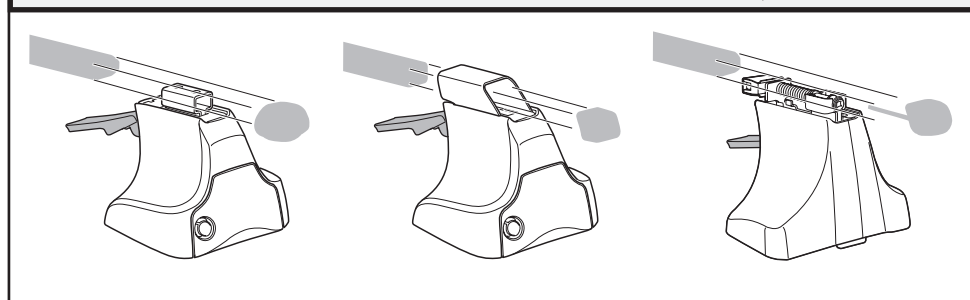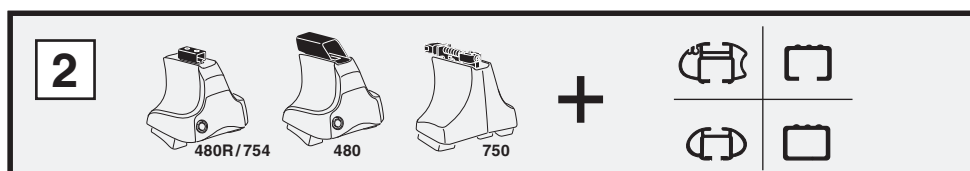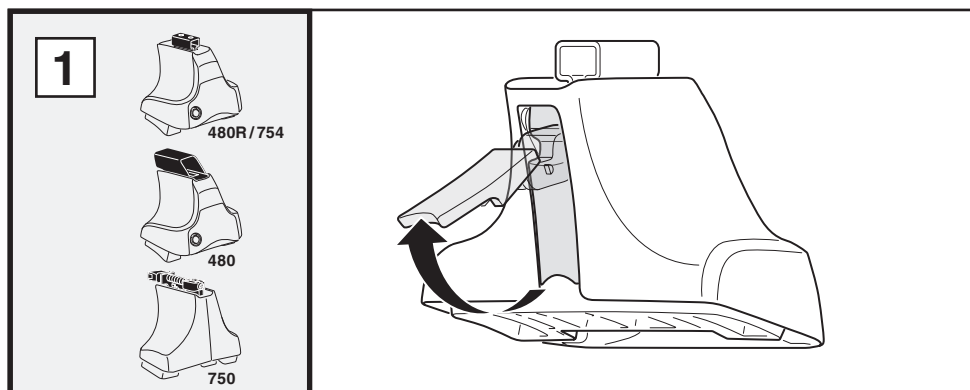

3


 


754

 

750

  1

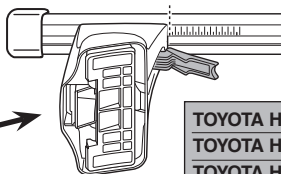


2



X

TOYOTA Hilux, 2-dr Pickup, 98-04	33,5
TOYOTA Hilux, 2-dr Pickup extended, 98-04	33,5
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	33,5

 1

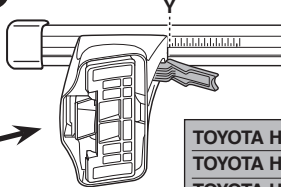

2



Y

TOYOTA Hilux, 2-dr Pickup, 98-04	—
TOYOTA Hilux, 2-dr Pickup extended, 98-04	33,5
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	33,5

 


480R



480

1




2




X inch X mm

TOYOTA Hilux, 2-dr Pickup, 98-04	38 7/8"	986 mm
TOYOTA Hilux, 2-dr Pickup extended, 98-04	38 7/8"	986 mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	38 7/8"	986 mm

 1



2

 


Y inch Y mm













TOYOTA Hilux, 2-dr Pickup, 98-04	—	—
TOYOTA Hilux, 2-dr Pickup extended, 98-04	38 7/8"	986 mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	38 7/8"	986 mm

4












 
TOYOTA Hilux, 2-dr Pickup, 98-04

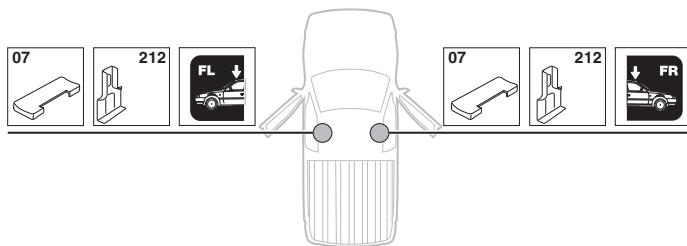

            
TOYOTA Hilux, 2-dr Pickup extended, 98-04

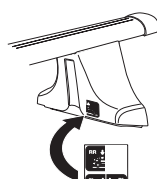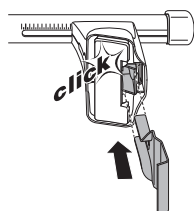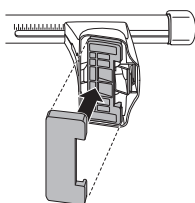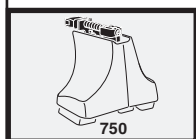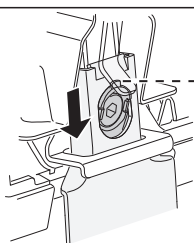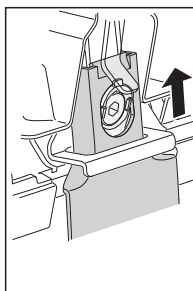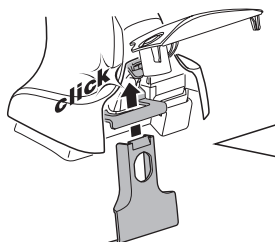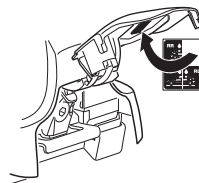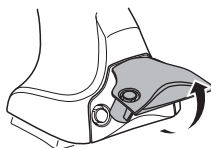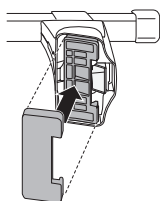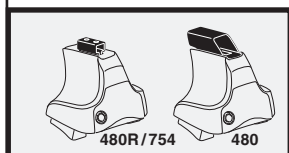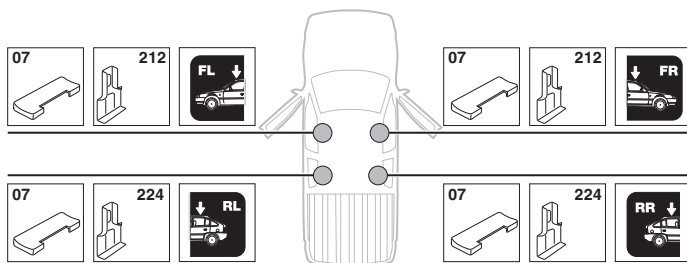

            TOYOTA Hilux, 4-dr Pickup double cab, 98-04

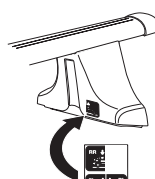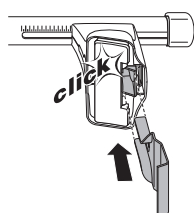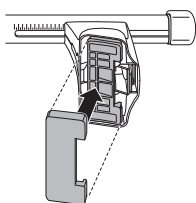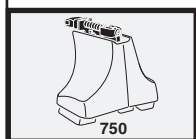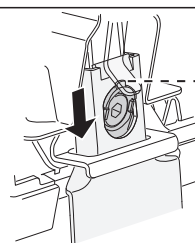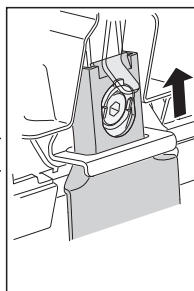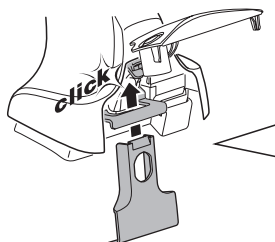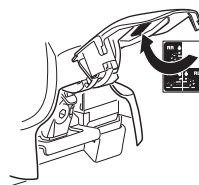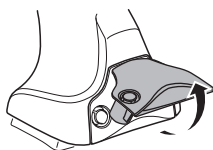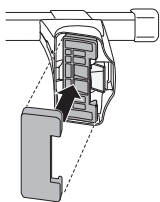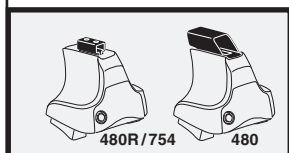
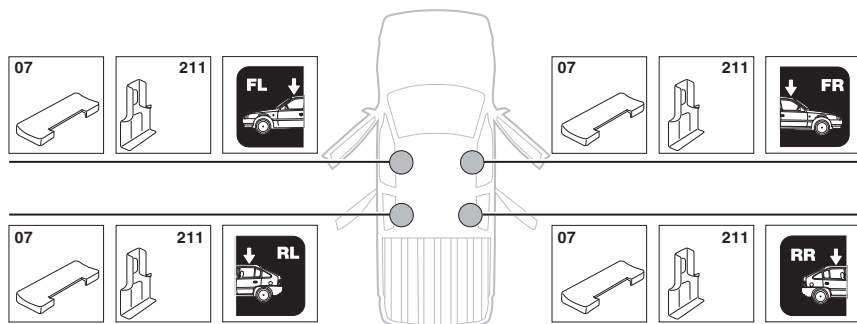


5




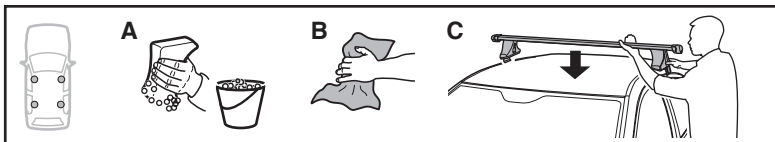 


	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 2-dr Pickup, 98-04	230 mm	–	9"	–
TOYOTA Hilux, 2-dr Pickup extended, 98-04	230 mm	600 mm	9"	23 5/8"

  TOYOTA Hilux, 2-dr Pickup, 98-04

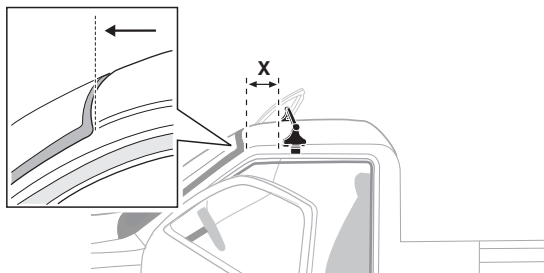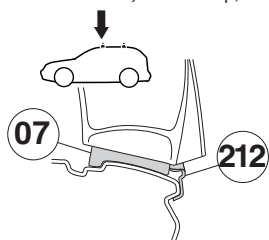

    TOYOTA Hilux, 2-dr Pickup extended, 98-04

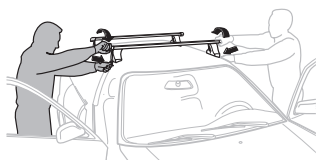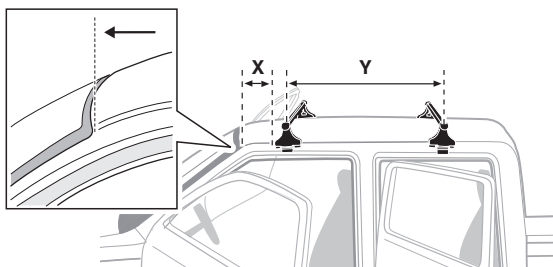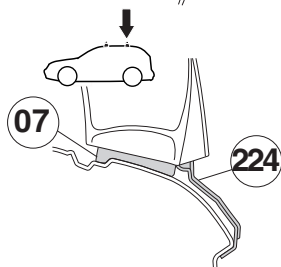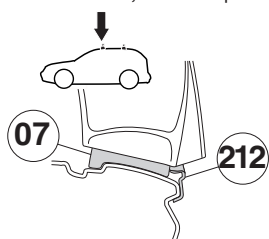

GB/US

Tighten alternately
D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciēt pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ

Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.

SK

Dotahujte striedavo

SLO

Privijajte izmenično.

HR

Naizmjenično zategnite

HU

Egymástól függetlenül szorítandó

GR

Σφιγγετε εναλλάξ

TR

Dönüşümlü sıkın

中文

交替拧紧

한국어

변갈아 가며 조이십시오.

 
日本語

交互に締め付けてください。

ไทย





ขันในแบบสลับ

5

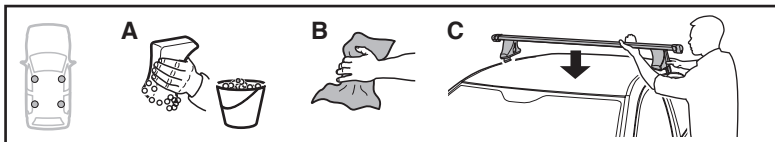

	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	300 mm	700 mm	11 ³ / ₄ "	27 ¹ / ₂ "

    TOYOTA Hilux, 4-dr Pickup double cab, 98-04

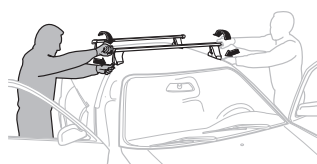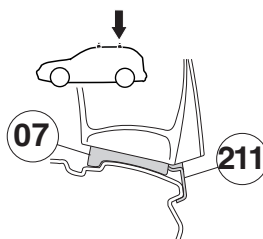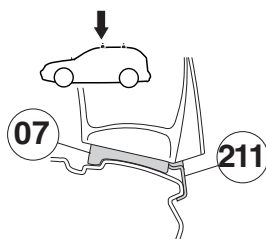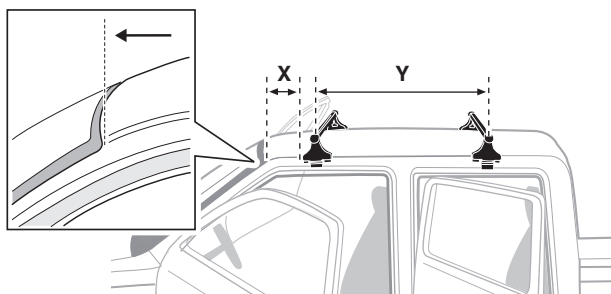

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Serrare alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťla багажника dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egy mástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขั้วในแบบสลับ

 
 
 
 
 
6





480R/754



480

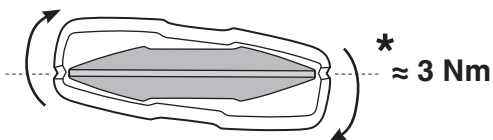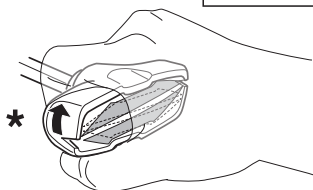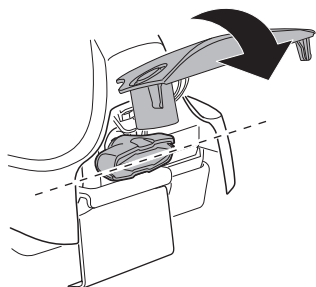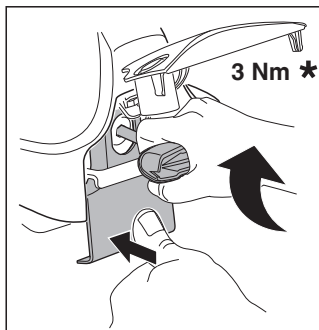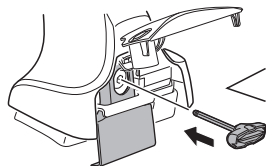

750

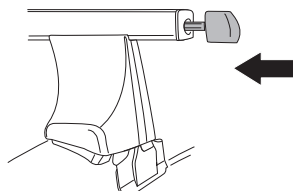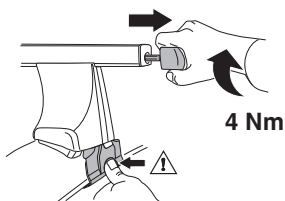  


i




1



 
2

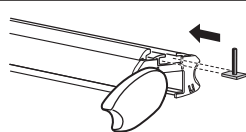


i

 

1

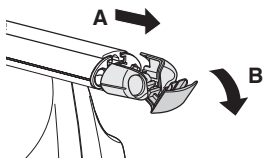 


2

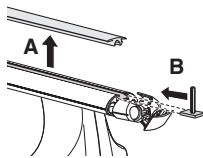 


i








 1

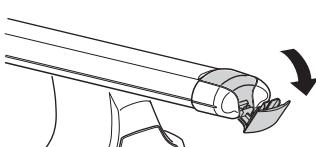

2

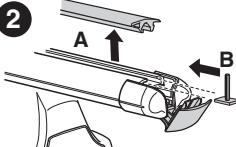 

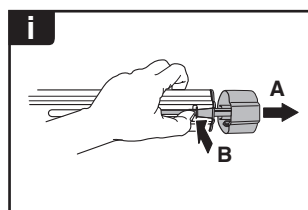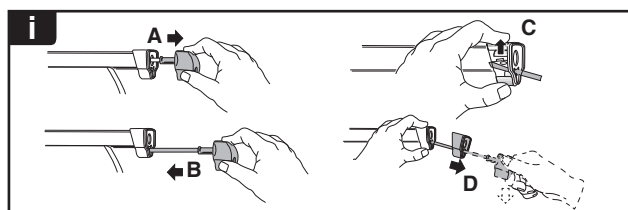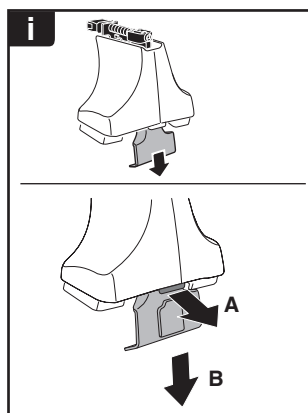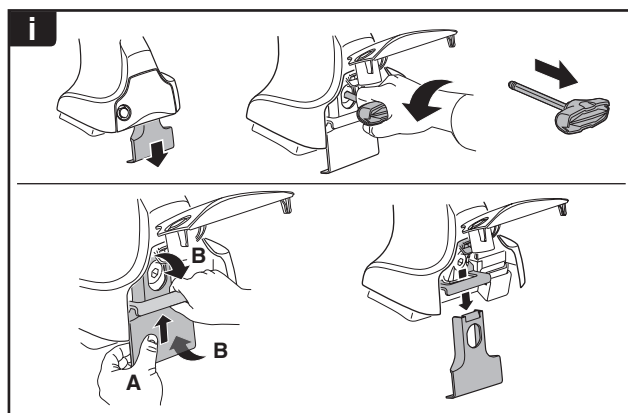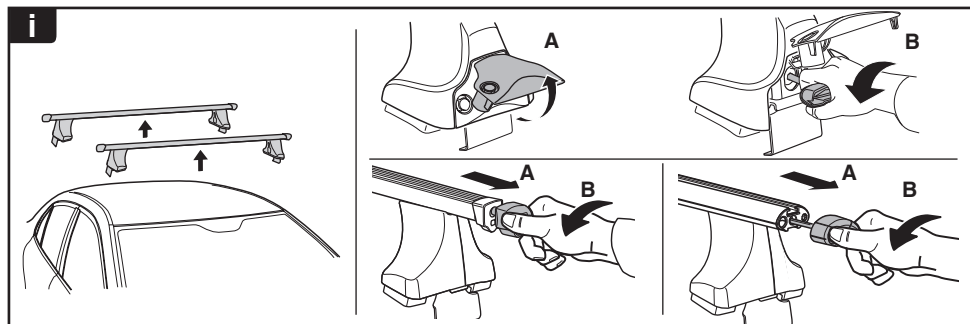     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**






		544 (x4)
		596 (x6)
		588 (x8)
NA		510 (x10)
EUR		452 (x12)
ASIA		





www.thuleprofessional.com

customer.service@thule.com

info@thule.com

        NA  **Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA**
WW  **Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN**

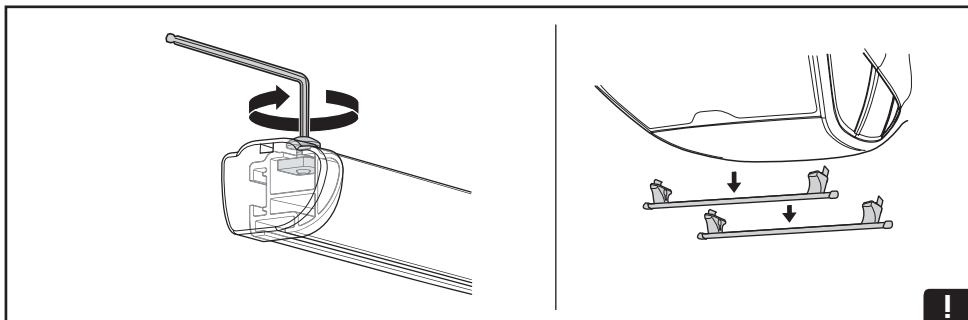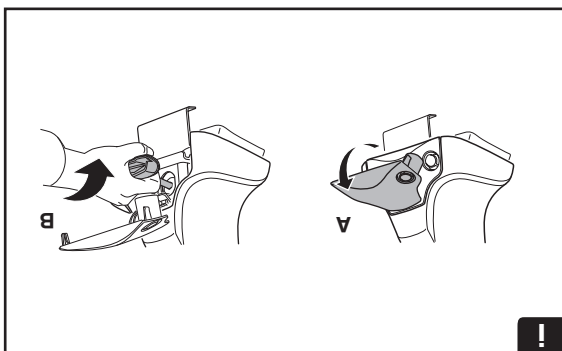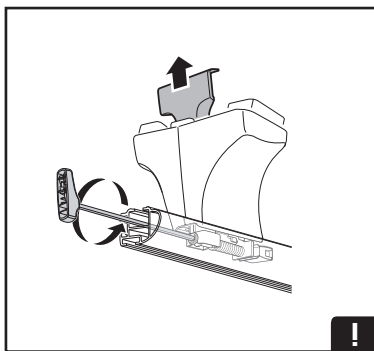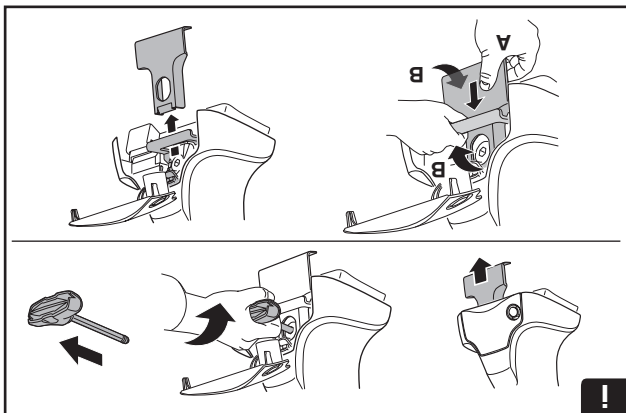
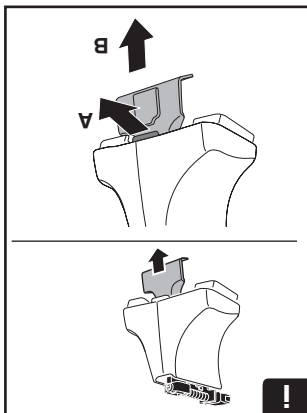


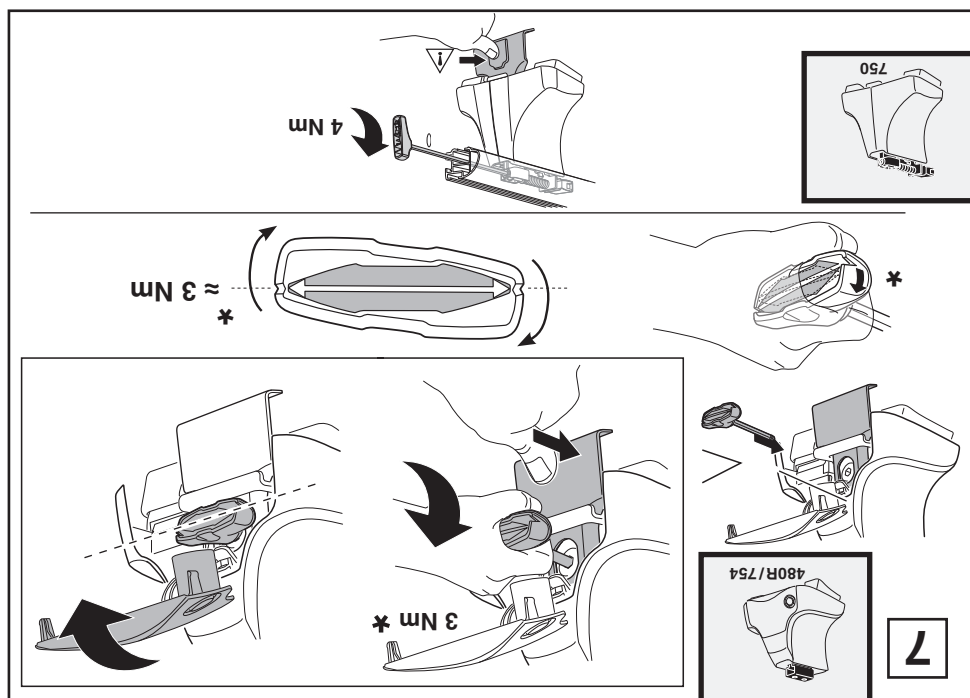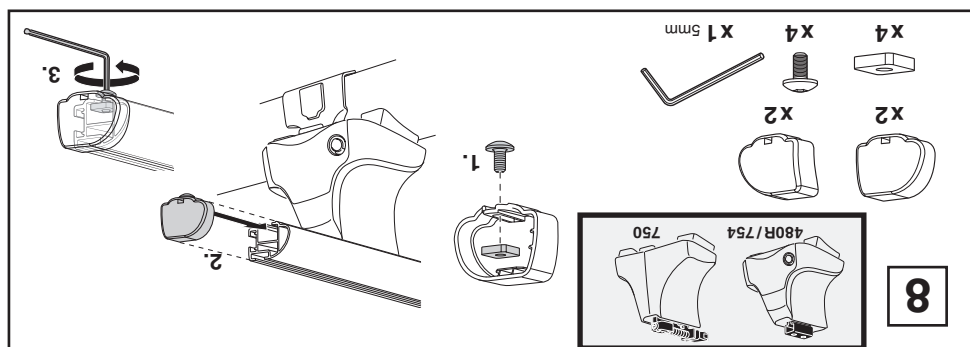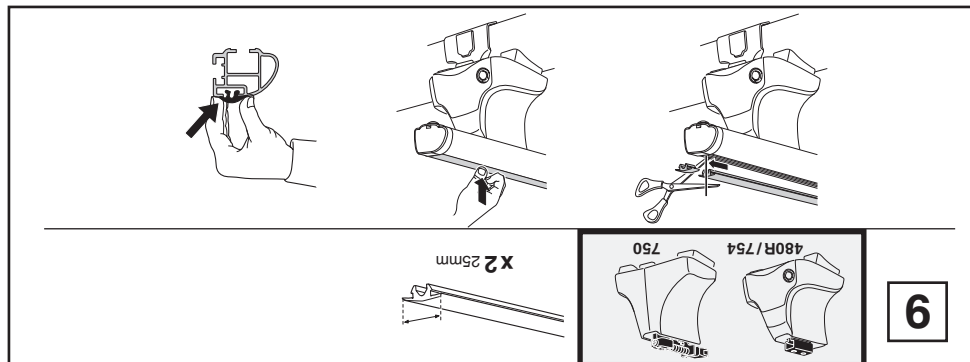




Tighen alternately
 Die Schrauben abwechselnd
 anziehen
 Serer alternativalment chaque
 Afwisselend aan de linker- en d
 rechterkant aandraaien
 Alterare il serraggio delle viti
 Appare alternadamente
 Draai af wisselend
 Kierrä vuorotellen
 Pindulidage vaheldwisi
 Pleviciset pamitus
 Uuskiekkien pakotamis
 Silyu dokrejat napravlenienn
 Zamyivajitsja poverennenn

  한국어 변갈아가며 조이십시오.
日本語 交互に締め付けてください。

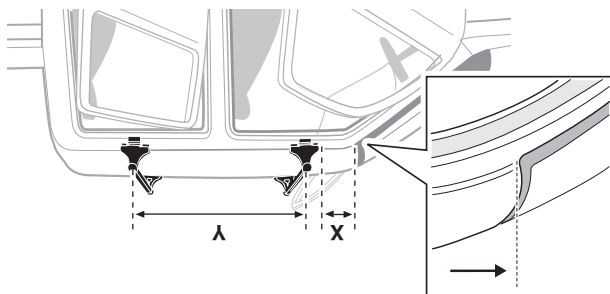
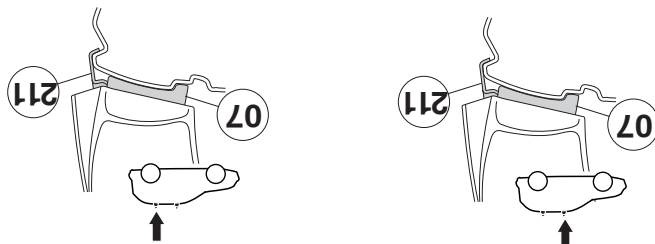


TOYOTA Hilux, 4-dr Pickup double cab, 98-04


	X inch	Y mm	X mm	700 mm
	11 3/4"	Y mm	300 mm	TOYOTA Hilux, 4-dr Pickup double cab, 98-04
	27 1/2"	Y mm	300 mm	

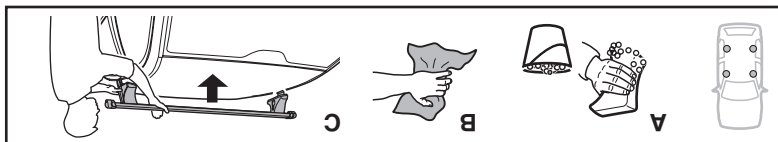 


9

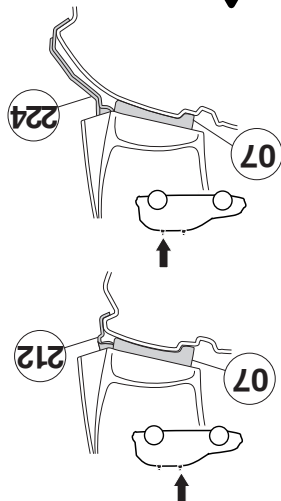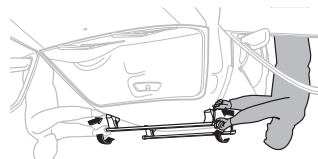  

 
TOYOTA Hilux, 2-dr Pickup extended, 98-04

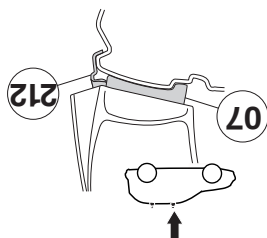

TOYOTA Hilux, 2-dr Pickup, 98-04

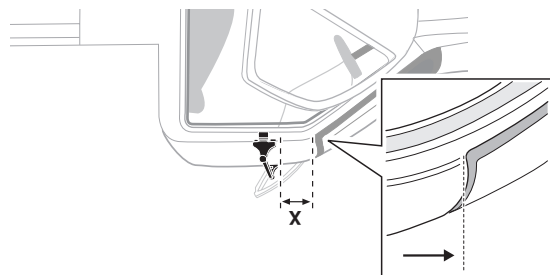 


















TOYOTA Hilux, 2-dr Pickup, 98-04	230 mm	600 mm	9"	23 5/8"
TOYOTA Hilux, 2-dr Pickup extended, 98-04	230 mm	600 mm	9"	23 5/8"

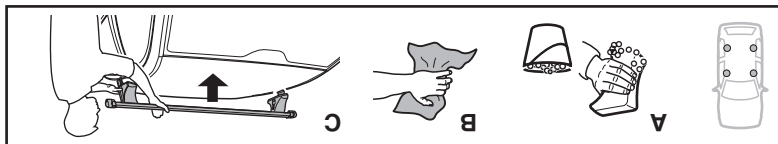 








6

GB/US Tighen alternately
D Die Schrauben abwechselnd
anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de
I Alternare il serraggio delle viti
E Serrare alternativamente
PT Apretar alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pļauklēt paņēmus
LT Užskinkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

                 
CZ Pokrýtá bagazníka dokręcaj
SK dokręcaj naprzemiennie.
SLO Dotahujte striedavo
HR Natrzanje izmjenično.
HU Egymásról fuggelentül
GR Zfityete evadaf
TR Donusmli skın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
Українська

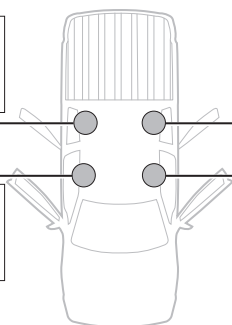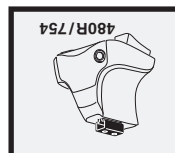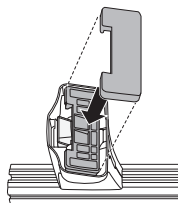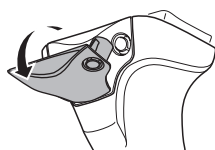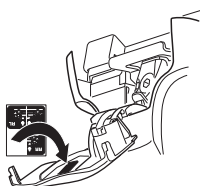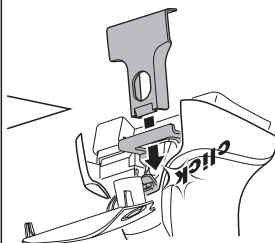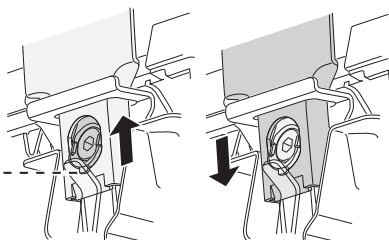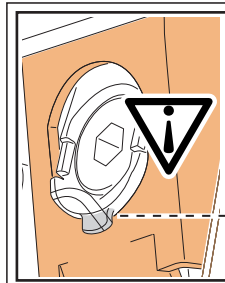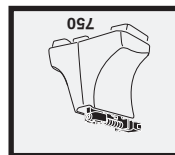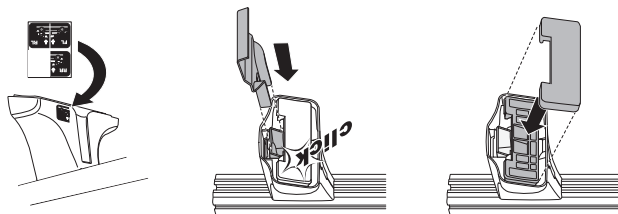

      
 
TOYOTA Hilux, 4-dr Pickup double cab, 98-04

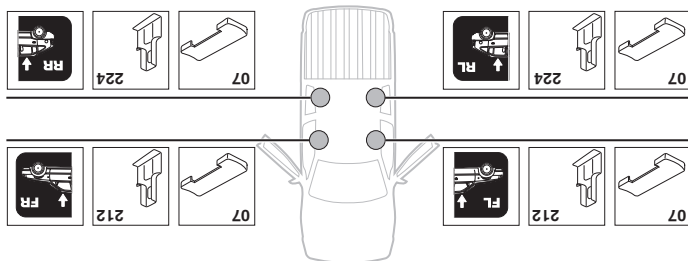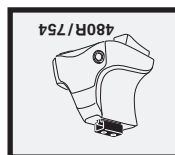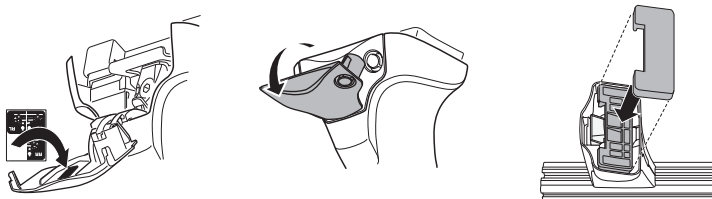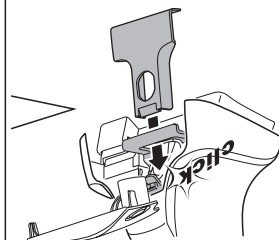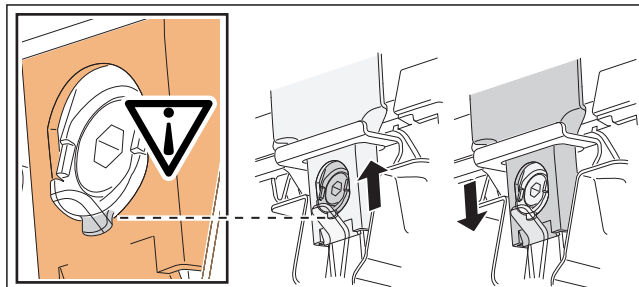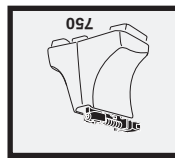
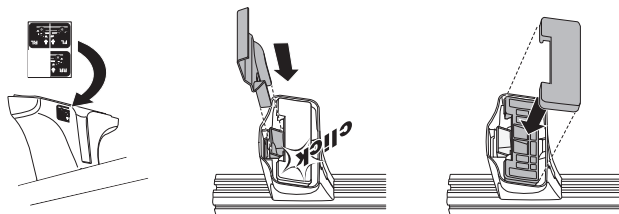


 TOYOTA Hilux, 2-dr Pickup extended, 98-04


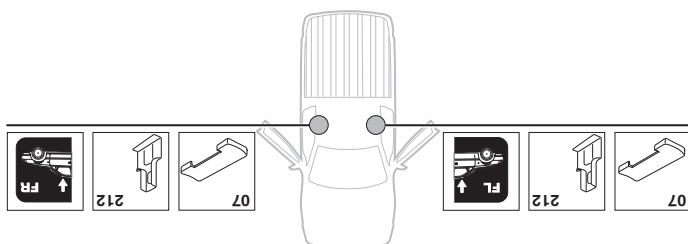


TOYOTA Hilux, 2-dr Pickup, 98-04






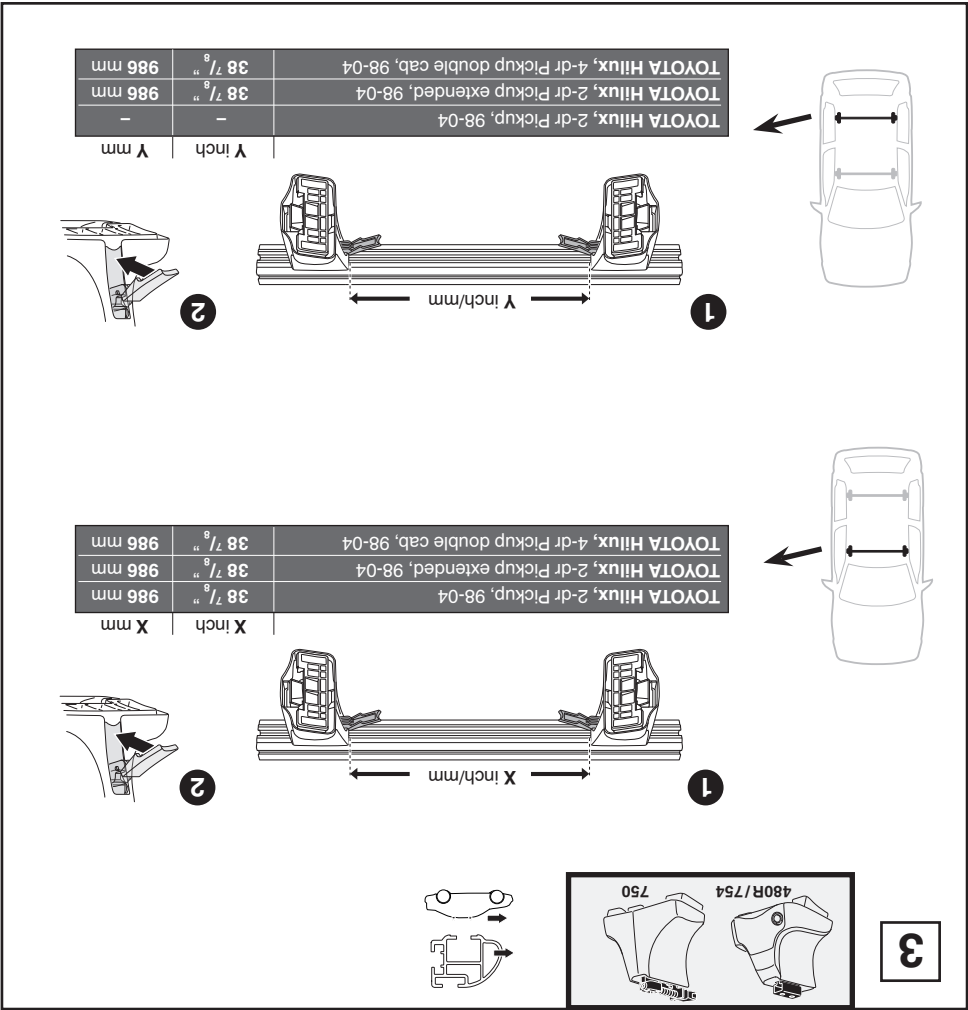 
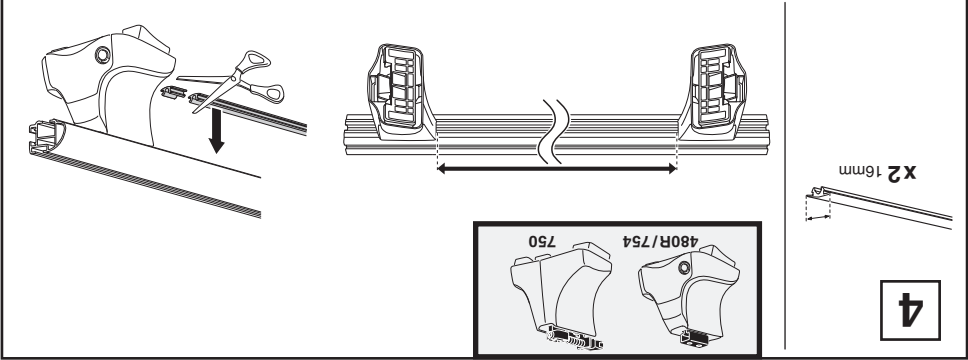 


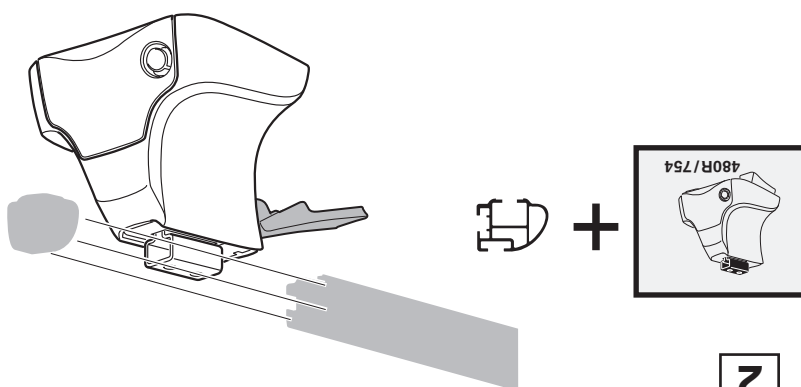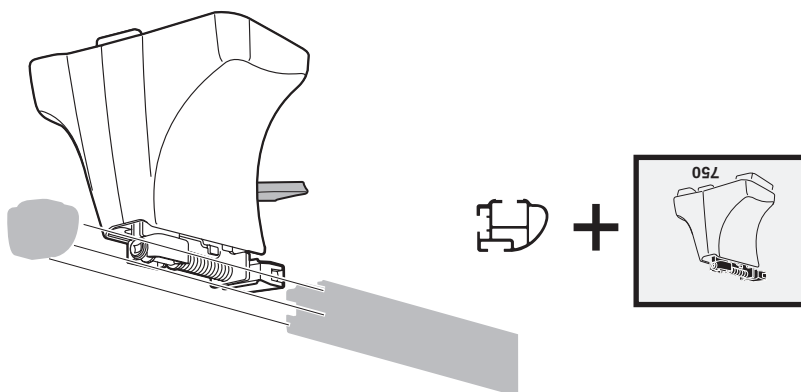  

2

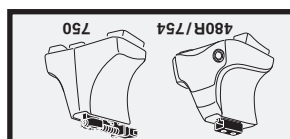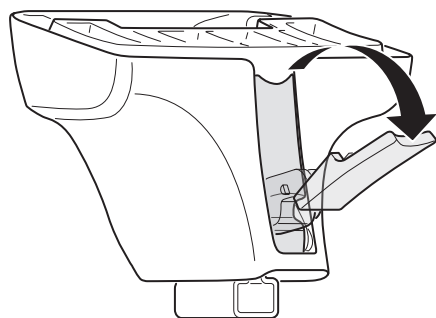  

1

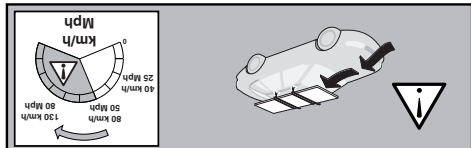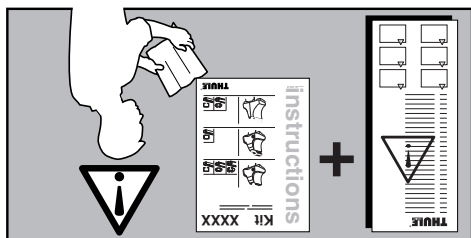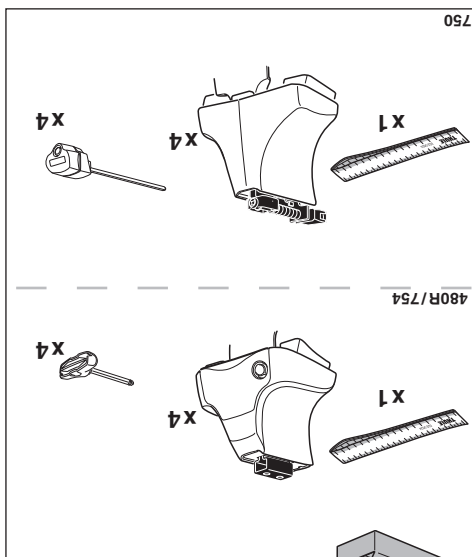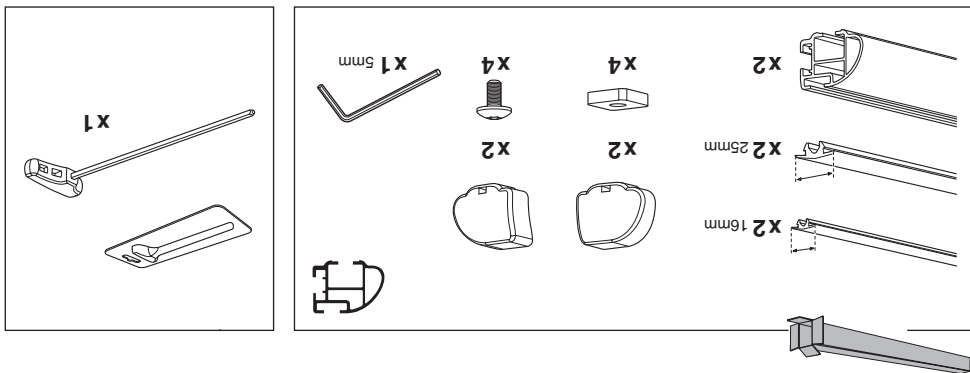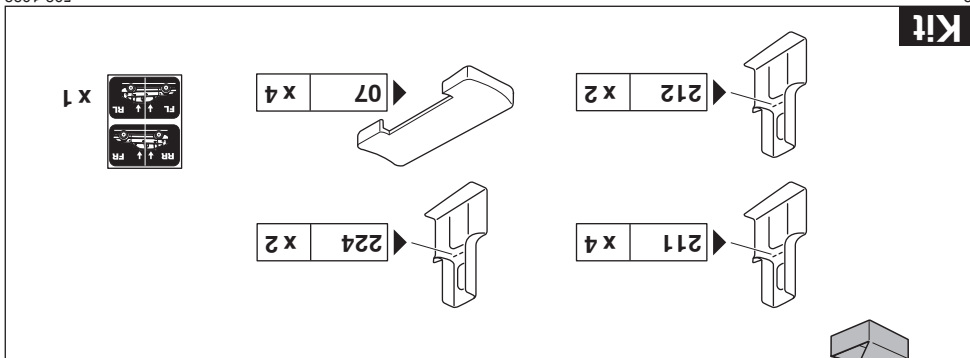       

instructions

Kit 1083

TOYOTA Hilux, 2-dr Pickup, 98-04
 TOYOTA Hilux, 2-dr Pickup extended, 98-04
 TOYOTA Hilux, 4-dr Pickup double cab, 98-04



Herbály Autó www.herbalyauto.hu

PROFESSIONAL

ISO 11154-E

THULE
 SWEDEN

  750

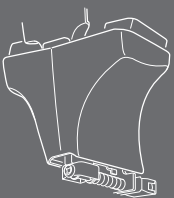

480R
 754

