

Thule Rapid System Kit 1014

> Instructions


BMW 3-Series Compact, 3-dr Coupé, 94-00 / *95-00

BMW 3-Series, 4-dr Sedan, 91-97 / *92-98



BMW 3-Series Touring, 5-dr Estate, 96-99

BMW 3-Series, 5-dr Wagon, *96-99

*North America

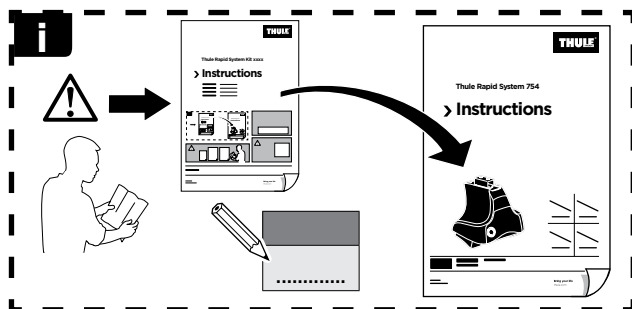

	xx kg xx lbs	+		7 kg 15,4 lbs
BMW 3-Series Compact , 3-dr Coupé, 94-00 / *95-00				
				Max. 60 kg 132 lbs
BMW 3-Series , 4-dr Sedan, 91-97 / *92-98				
BMW 3-Series Touring , 5-dr Estate, 96-99				
BMW 3-Series , 5-dr Wagon, *96-99				
				Max. 75 kg 165 lbs

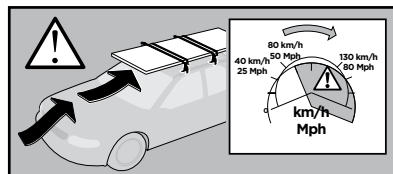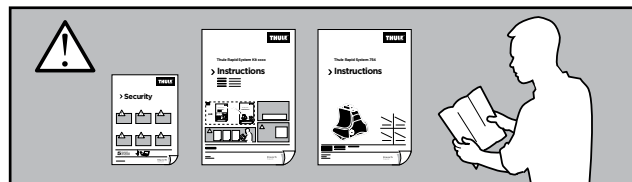

ISO 11154-E

141014


C.20121022
519-1014-02

Herbály Autó www.herbalyauto.hu



Bring your life
thule.com




14 x2



16 x4




71 x2



222 x4






x1



x1



1

	X (scale)	X (mm)	X (inch)
BMW 3-Series Compact , 3-dr Coupé, 94-00 / *95-00	26	911	35 ⁷ / ₈
BMW 3-Series , 4-dr Sedan, 91-97 / *92-98	26,5	916	36 ¹ / ₈
BMW 3-Series Touring , 5-dr Estate, 96-99	26,5	916	36 ¹ / ₈
BMW 3-Series , 5-dr Wagon, *96-99	26,5	916	36 ¹ / ₈

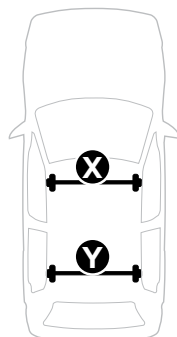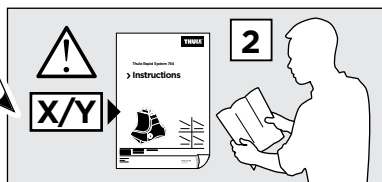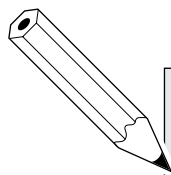


	Y (scale)	Y (mm)	Y (inch)
BMW 3-Series Compact , 3-dr Coupé, 94-00 / *95-00	28	931	36 ⁵ / ₈
BMW 3-Series , 4-dr Sedan, 91-97 / *92-98	23	881	34 ⁵ / ₈
BMW 3-Series Touring , 5-dr Estate, 96-99	22,5	876	34 ¹ / ₂
BMW 3-Series , 5-dr Wagon, *96-99	22,5	876	34 ¹ / ₂

2

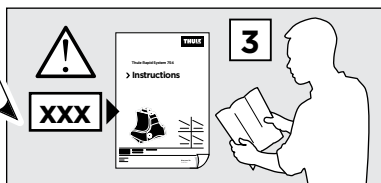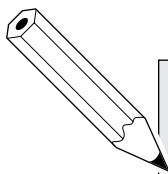


BMW 3-Series Compact, 3-dr Coupé, 94-00 / *95-00

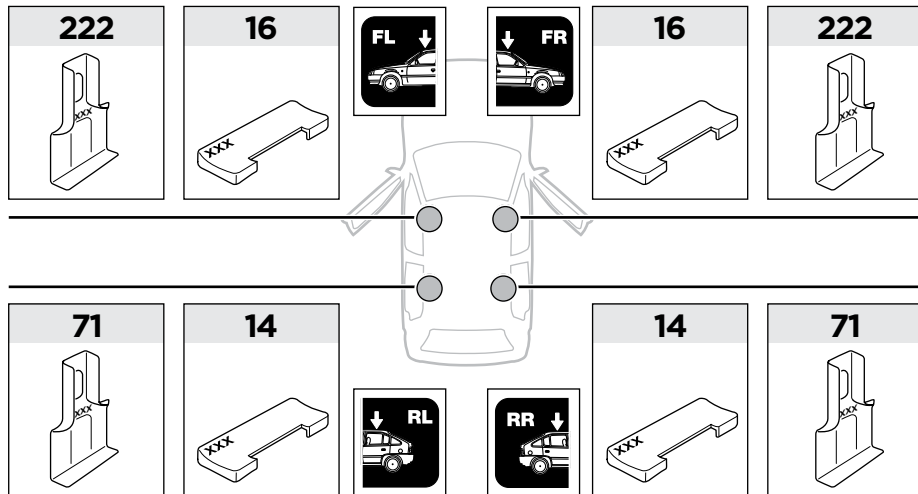



BMW 3-Series, 4-dr Sedan, 91-97 / *92-98

BMW 3-Series Touring, 5-dr Estate, 96-99


BMW 3-Series, 5-dr Wagon, *96-99

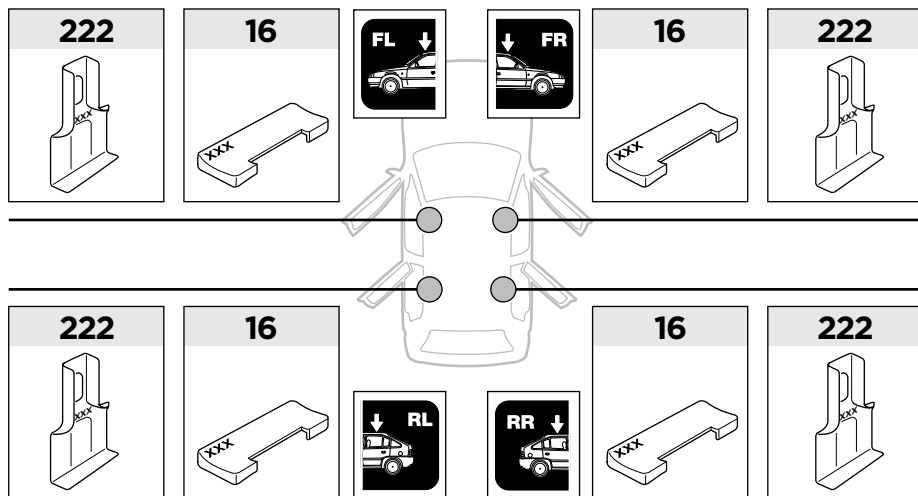

3

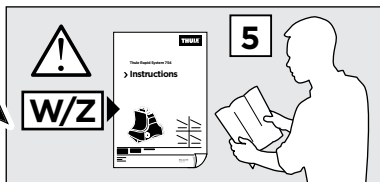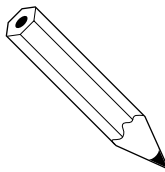

	Z (mm)	Z (inch)
BMW 3-Series Compact, 3-dr Coupé, 94-00 / *95-00	720	28 ³/₈

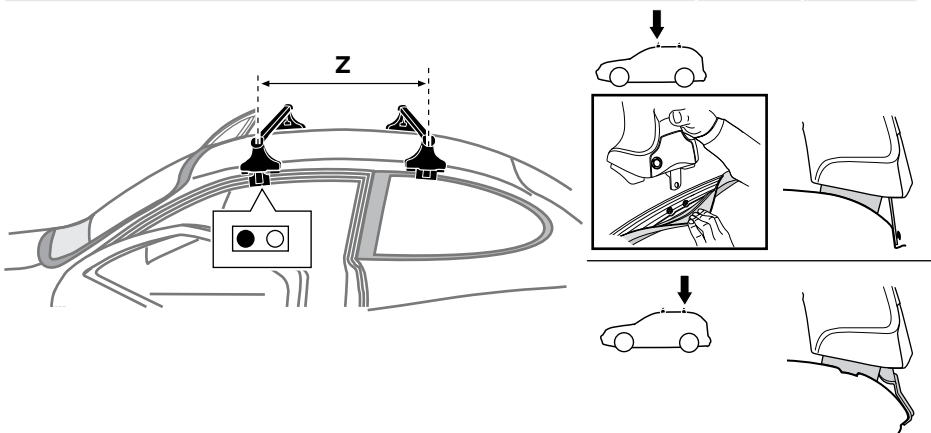

BMW 3-Series, 4-dr Sedan, 4-dr Sedan, 91-97 / *92-98		
BMW 3-Series Touring, 5-dr Estate, 96-99		
BMW 3-Series, 5-dr Wagon, *96-99		

