
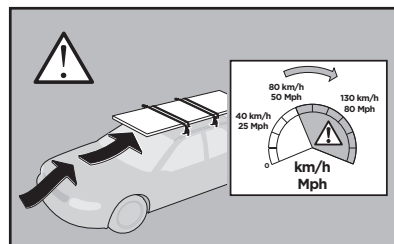
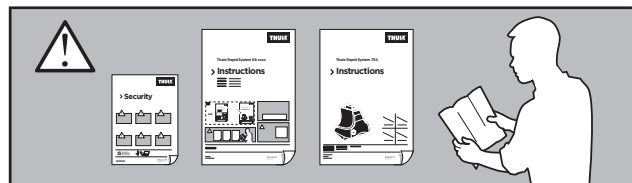
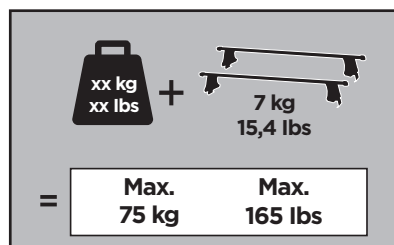


Thule Rapid System Kit 1092

> Instructions

MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02

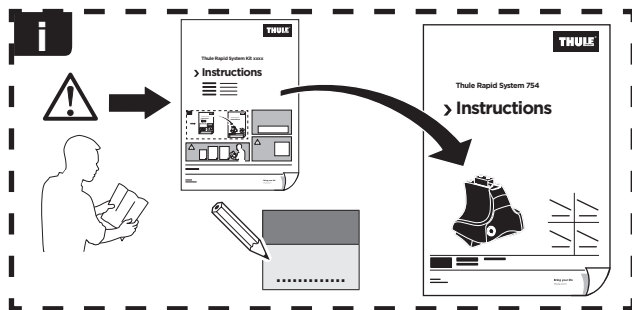

ISO 11154-E

141092


C.2013/0107
519-1092-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



23 x2



24 x2




218 x2



219 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02	29,5	946	37 1/4

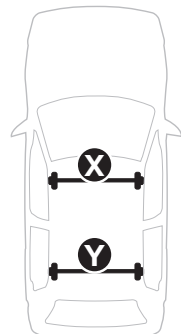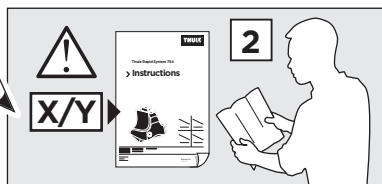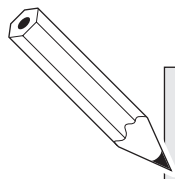



	Y (scale)	Y (mm)	Y (inch)
MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02	28	931	36 5/8

2

MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02

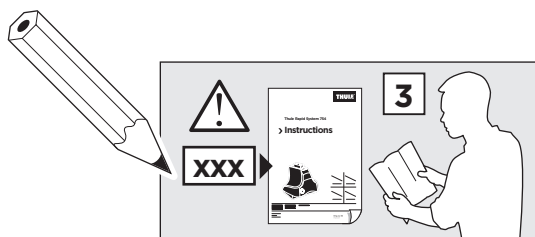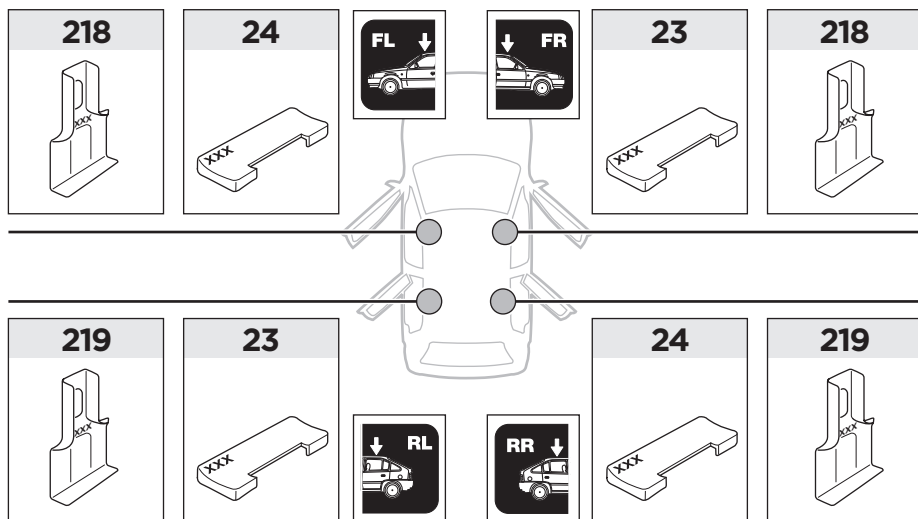

3

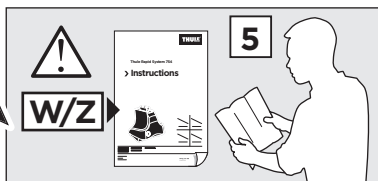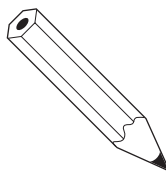

	W (mm)	Z (mm)	W (inch)	Z (inch)
MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02	190	630	7 1/2	24 3/4

