
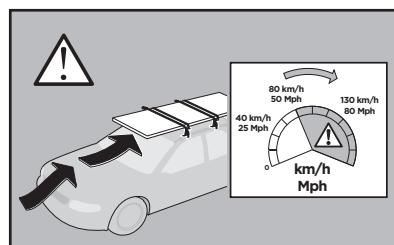
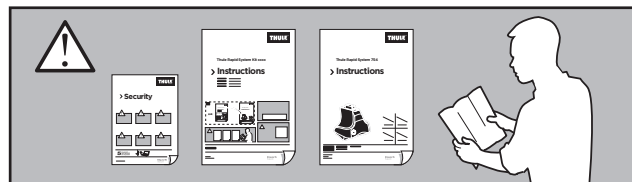
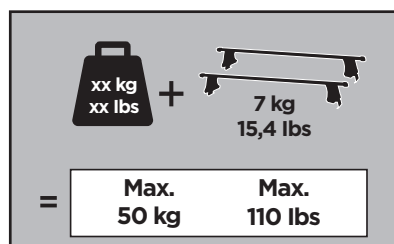


Thule Rapid System Kit 1099

> Instructions


FIAT Panda, 5-dr Hatchback, 03-

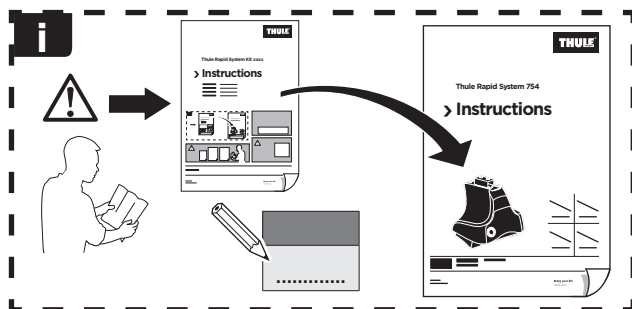

ISO 11154-E



16 x4



160 x4




x1



x1 M6






x4 M6





x1

1


	X (scale)	X (mm)	X (inch)
FIAT Panda, 5-dr Hatchback, 03-	29	941	37

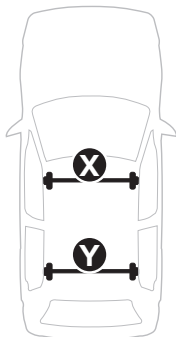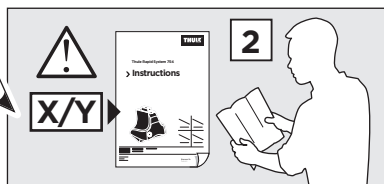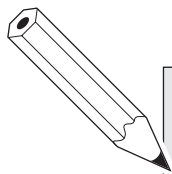

	Y (scale)	Y (mm)	Y (inch)
FIAT Panda, 5-dr Hatchback, 03-	26	911	35 ⁷ / ₈

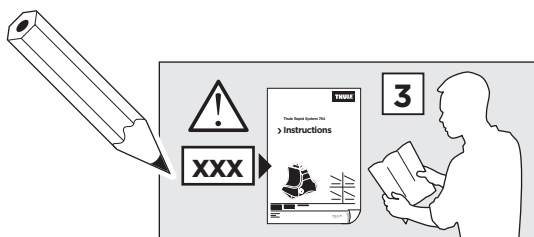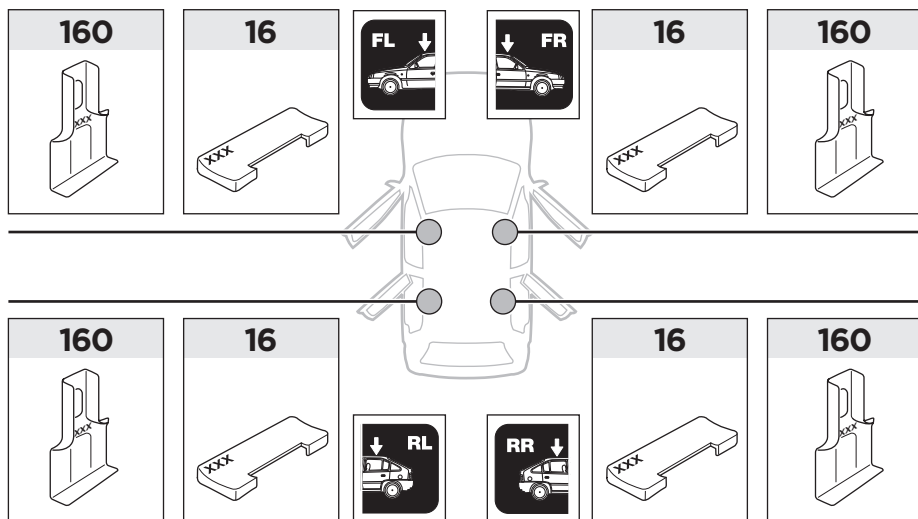2**FIAT Panda, 5-dr Hatchback, 03-**

3

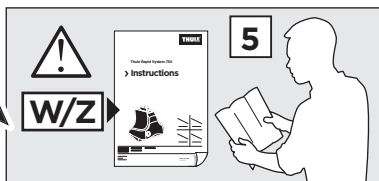

	W (mm)	Z (mm)	W (inch)	Z (inch)
FIAT Panda, 5-dr Hatchback, 03-	750	1015	29 1/2	40

