







Thule Rapid System Kit 1171

> Instructions

JAGUAR S-type, 4-dr Sedan, 99-03, 04-08 / *00-03, 04-08

*North America

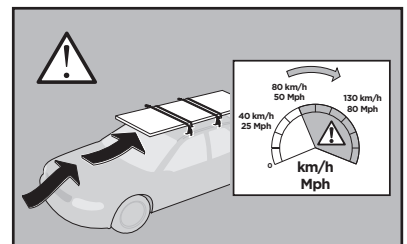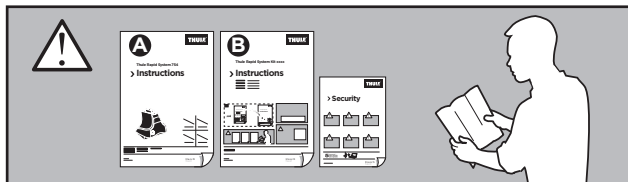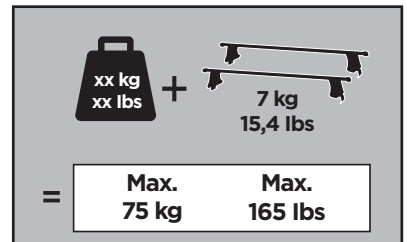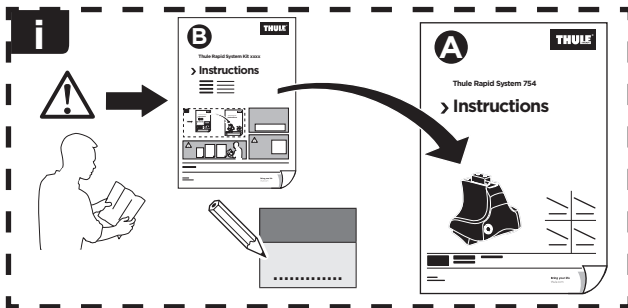


ISO 11154-E

141171
C.20130703
519-1171-03



Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

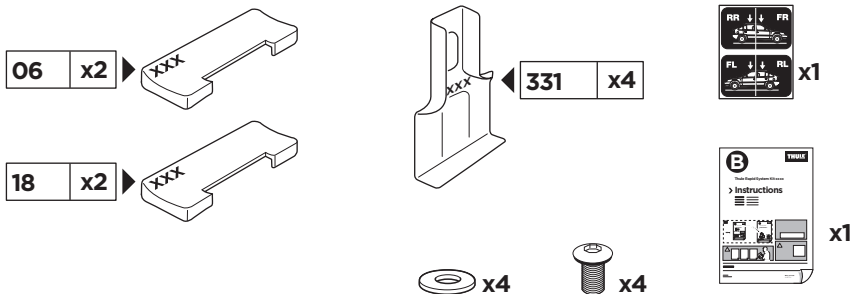

1



	X (scale)	X (mm)	X (inch)
JAGUAR S-type, 4-dr Sedan, 99-03, 04-08 / *00-03, 04-08	31	961	37 ⁷ / ₈

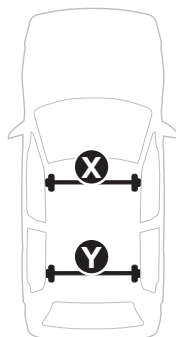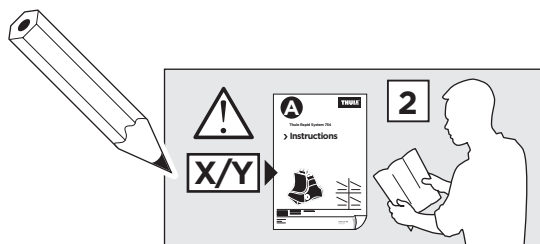

	Y (scale)	Y (mm)	Y (inch)
JAGUAR S-type, 4-dr Sedan, 99-03, 04-08 / *00-03, 04-08	34,5	996	39 ¹ / ₄

2

JAGUAR S-type, 4-dr Sedan, 99-03, 04-08 / *00-03, 04-08

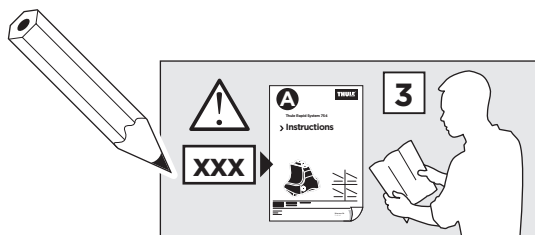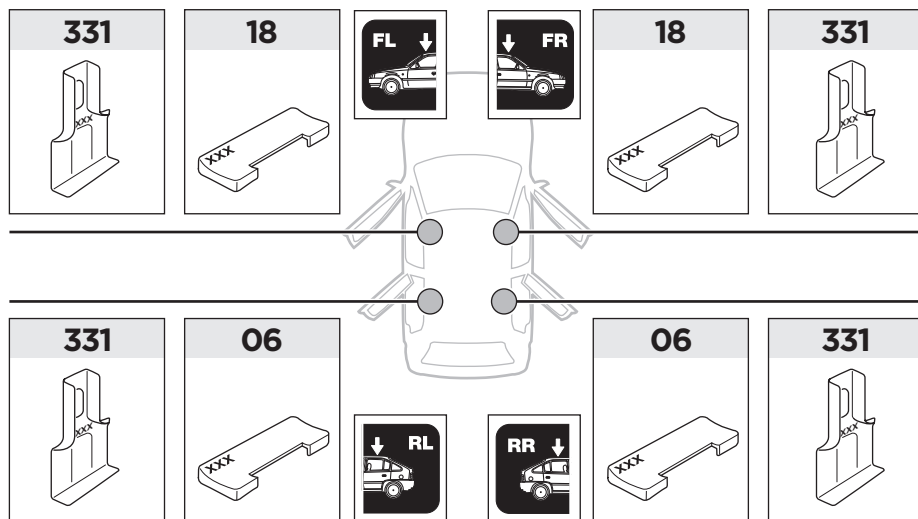

3

