
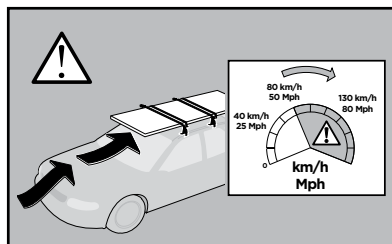
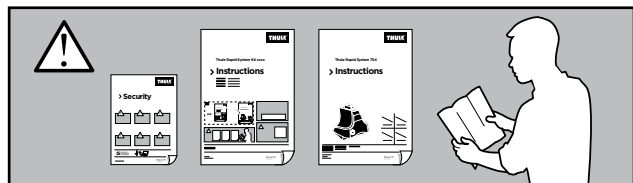
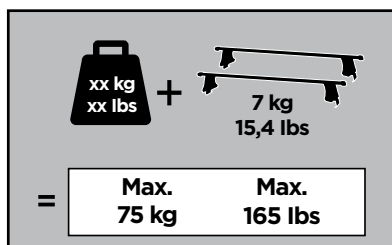


Thule Rapid System Kit 1180

> Instructions

AUDI TT, 3-dr Coupé, 98-06 / *00-06

*North America

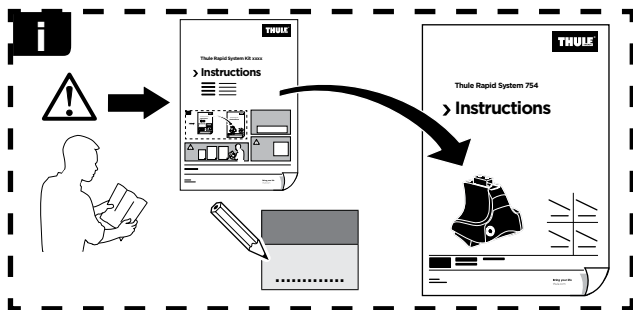



ISO 11154-E

141180


C.20121018
519-1180-02

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

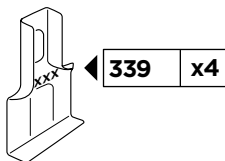




x1



x1

1



	X (scale)	X (mm)	X (inch)
AUDI TT, 3-dr Coupé, 98-06 / *00-06	40	1051	41 ³ / ₈

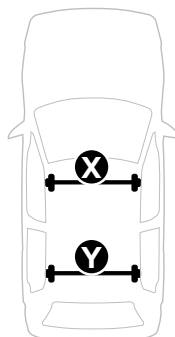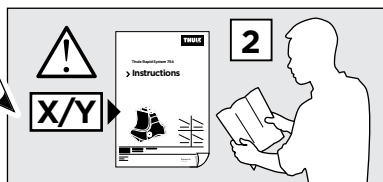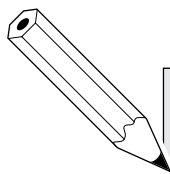



	Y (scale)	Y (mm)	Y (inch)
AUDI TT, 3-dr Coupé, 98-06 / *00-06	40,5	1056	41 ⁵ / ₈

2

AUDI TT, 3-dr Coupé, 98-06 / *00-06

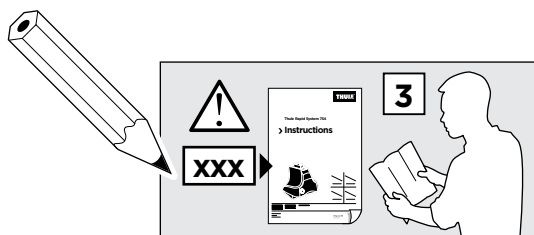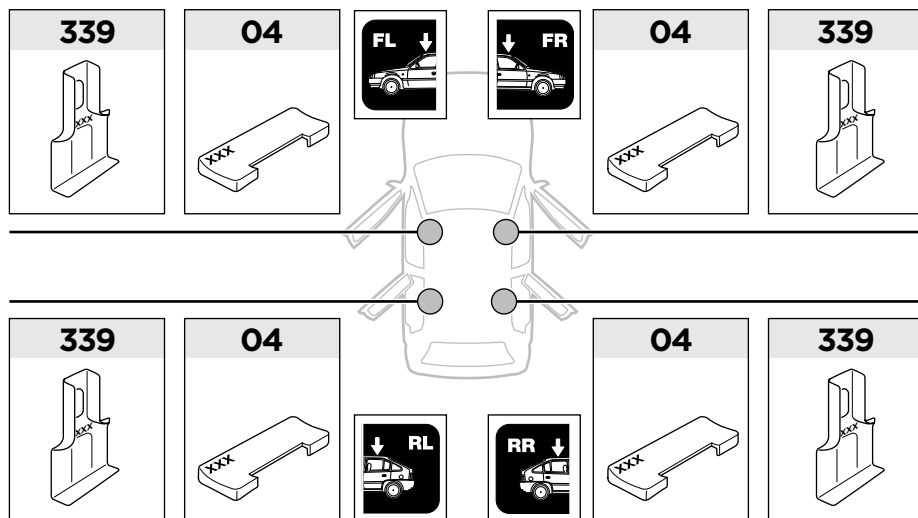

3

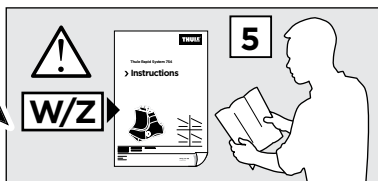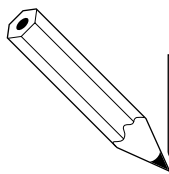

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI TT, 3-dr Coupé, 98-06 / *00-06	90	620	3 1/2	24 3/8

