
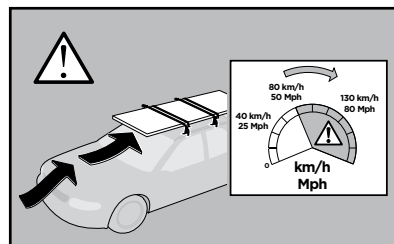
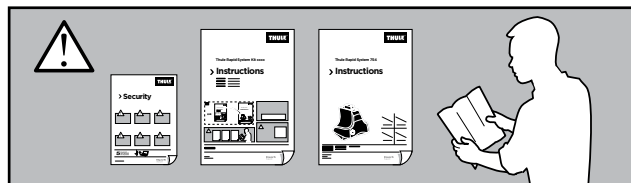
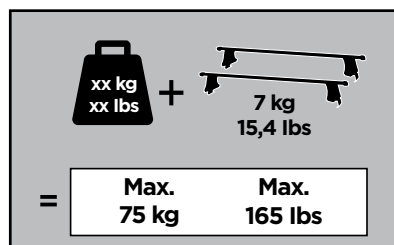


## Thule Rapid System Kit 1182

# > Instructions

**MITSUBISHI Pajero**, 5-dr SUV, 99-06

**MITSUBISHI Montero**, 5-dr SUV, 99-06

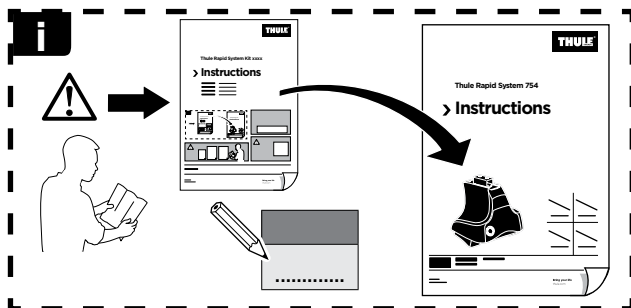



ISO 11154-E

**141182**


C.20121003  
519-1182-01

Herbály Autó [www.herbalyauto.hu](http://www.herbalyauto.hu)

**Bring your life**  
[thule.com](http://thule.com)

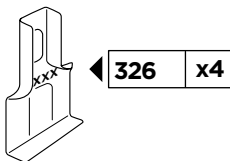



x1



x1

1

|                                             | X (scale)   | X (mm)      | X (inch)      |
|---------------------------------------------|-------------|-------------|---------------|
| <b>MITSUBISHI Pajero</b> , 5-dr SUV, 99-06  | <b>44,5</b> | <b>1096</b> | <b>43 1/8</b> |
| <b>MITSUBISHI Montero</b> , 5-dr SUV, 99-06 | <b>44,5</b> | <b>1096</b> | <b>43 1/8</b> |

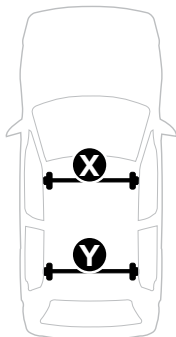
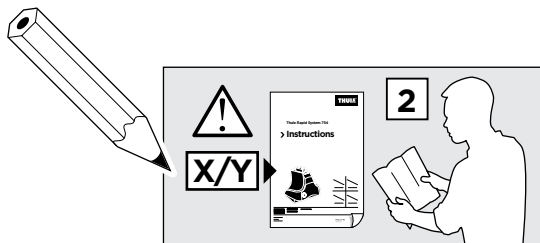


|                                             | Y (scale)   | Y (mm)      | Y (inch)      |
|---------------------------------------------|-------------|-------------|---------------|
| <b>MITSUBISHI Pajero</b> , 5-dr SUV, 99-06  | <b>44,5</b> | <b>1096</b> | <b>43 1/8</b> |
| <b>MITSUBISHI Montero</b> , 5-dr SUV, 99-06 | <b>44,5</b> | <b>1096</b> | <b>43 1/8</b> |



# 2

**MITSUBISHI Pajero**, 5-dr SUV, 99-06

**MITSUBISHI Montero**, 5-dr SUV, 99-06

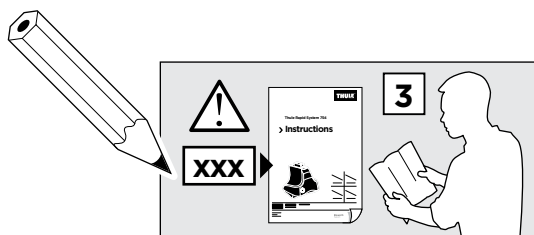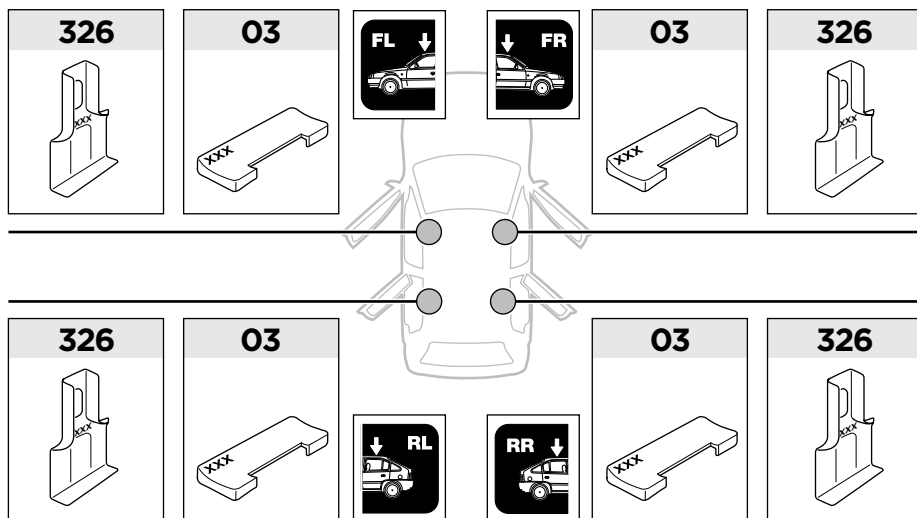

3

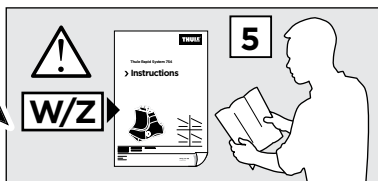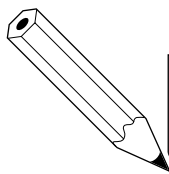

|                                             | W (mm)     | Z (mm)     | W (inch)                            | Z (inch)                            |
|---------------------------------------------|------------|------------|-------------------------------------|-------------------------------------|
| <b>MITSUBISHI Pajero</b> , 5-dr SUV, 99-06  | <b>595</b> | <b>750</b> | <b>23 <sup>3</sup>/<sub>8</sub></b> | <b>29 <sup>1</sup>/<sub>2</sub></b> |
| <b>MITSUBISHI Montero</b> , 5-dr SUV, 99-06 | <b>595</b> | <b>750</b> | <b>23 <sup>3</sup>/<sub>8</sub></b> | <b>29 <sup>1</sup>/<sub>2</sub></b> |

