



Thule Rapid System Kit 1192





> Instructions

CHRYSLER Neon, 4-dr Sedan, 00-04

DODGE Neon, 4-dr Sedan, 00-04 / *00-05

PLYMOUTH Neon, 4-dr Sedan, 00-04 / *00-01

*North America

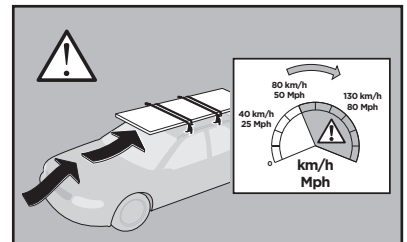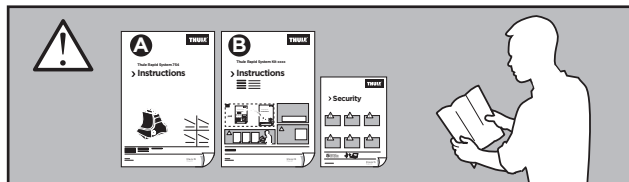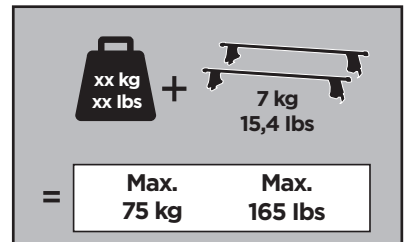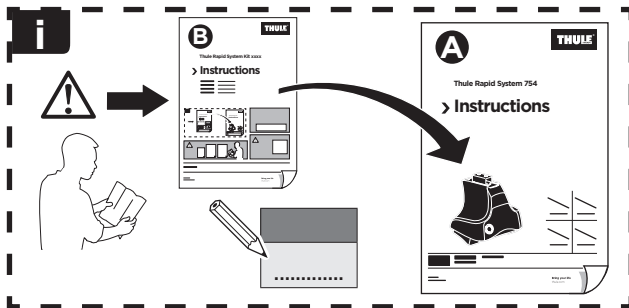

ISO 11154-E

141192


C.20130703
519-1192-02

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com





16 x2



57 x1



62 x1



401 x4



x1






x4



x1

1

	X (scale)	X (mm)	X (inch)
CHRYSLER Neon , 4-dr Sedan, 00-04	20	851	33 1/2
DODGE Neon , 4-dr Sedan, 00-04 / *00-05	20	851	33 1/2
PLYMOUTH Neon , 4-dr Sedan, 00-04 / *00-01	20	851	33 1/2

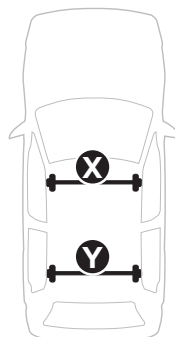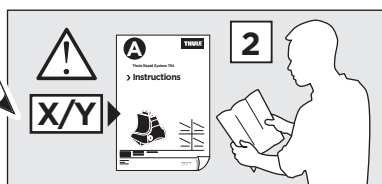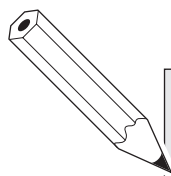



	Y (scale)	Y (mm)	Y (inch)
CHRYSLER Neon , 4-dr Sedan, 00-04	16	811	31 7/8
DODGE Neon , 4-dr Sedan, 00-04 / *00-05	16	811	31 7/8
PLYMOUTH Neon , 4-dr Sedan, 00-04 / *00-01	16	811	31 7/8

2



CHRYSLER Neon, 4-dr Sedan, 00-04

DODGE Neon, 4-dr Sedan, 00-04 / *00-05

PLYMOUTH Neon, 4-dr Sedan, 00-04 / *00-01

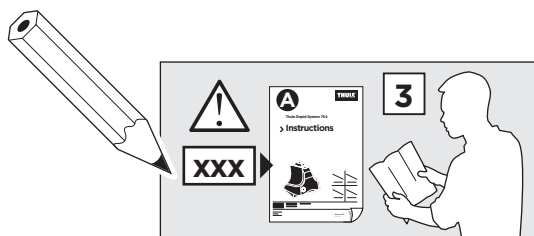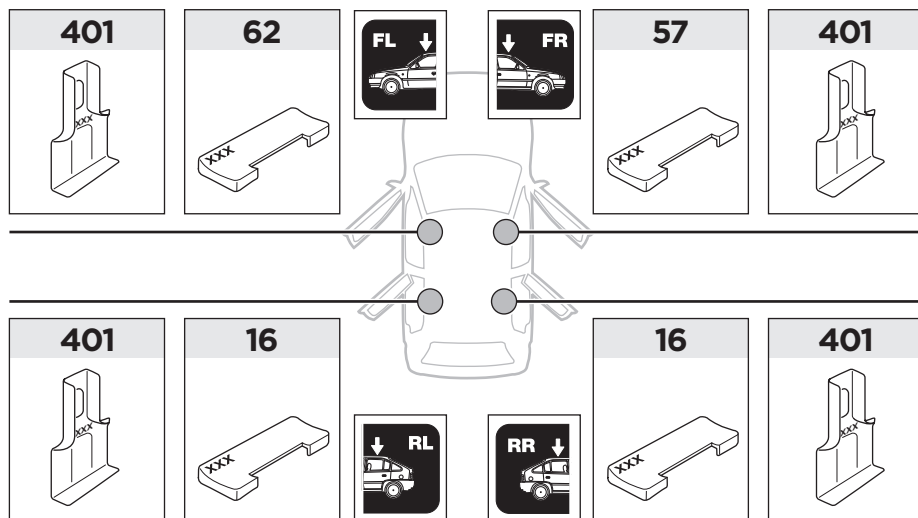

3

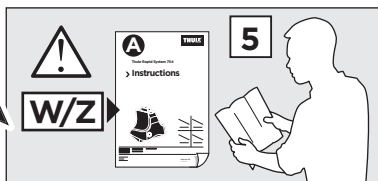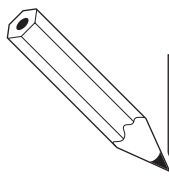

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHRYSLER Neon , 4-dr Sedan, 00-04	210	650	8 1/4	25 5/8
DODGE Neon , 4-dr Sedan, 00-04 / *00-05	210	650	8 1/4	25 5/8
PLYMOUTH Neon , 4-dr Sedan, 00-04 / *00-01	210	650	8 1/4	25 5/8

