
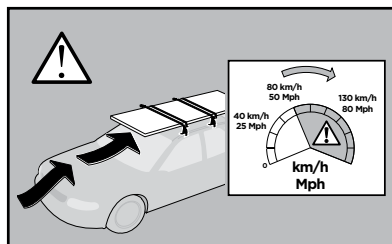
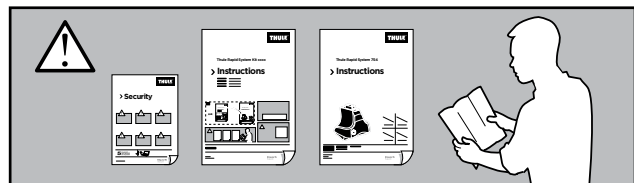
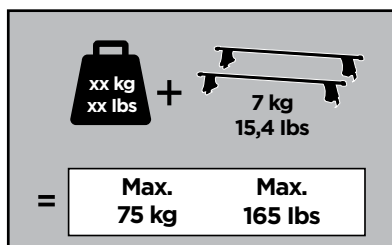


Thule Rapid System Kit 1195

> Instructions

AUDI A2, 5-dr MPV, 00-05*

*Without sunroof

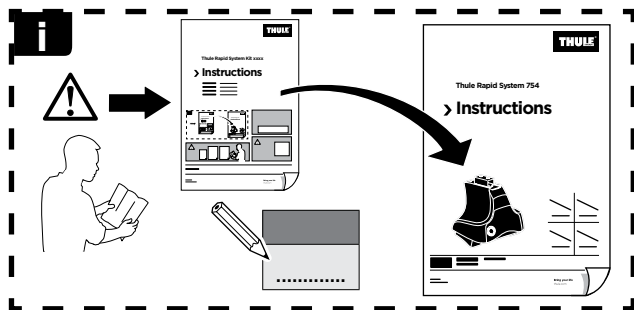



ISO 11154-E

141195


C.20121015
519-1195-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

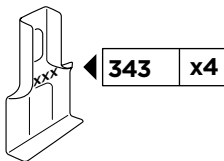



x1



x1

1



	X (scale)	X (mm)	X (inch)
AUDI A2, 5-dr MPV, 00-05	31,5	966	38

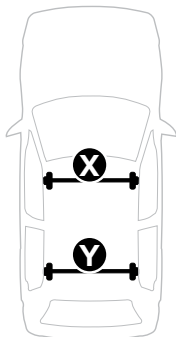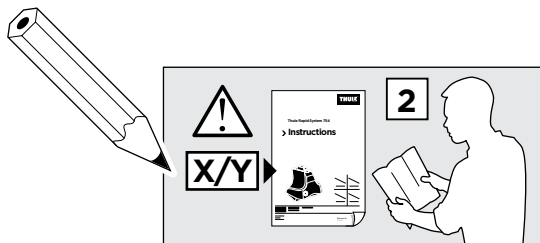



	Y (scale)	Y (mm)	Y (inch)
AUDI A2, 5-dr MPV, 00-05	26	911	35 ⁷ / ₈

2

AUDI A2, 5-dr MPV, 00-05

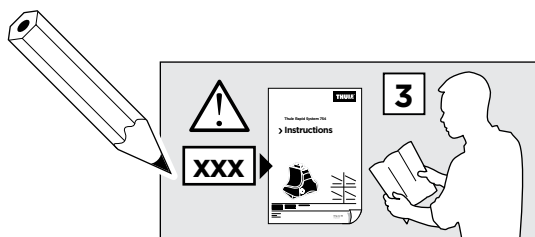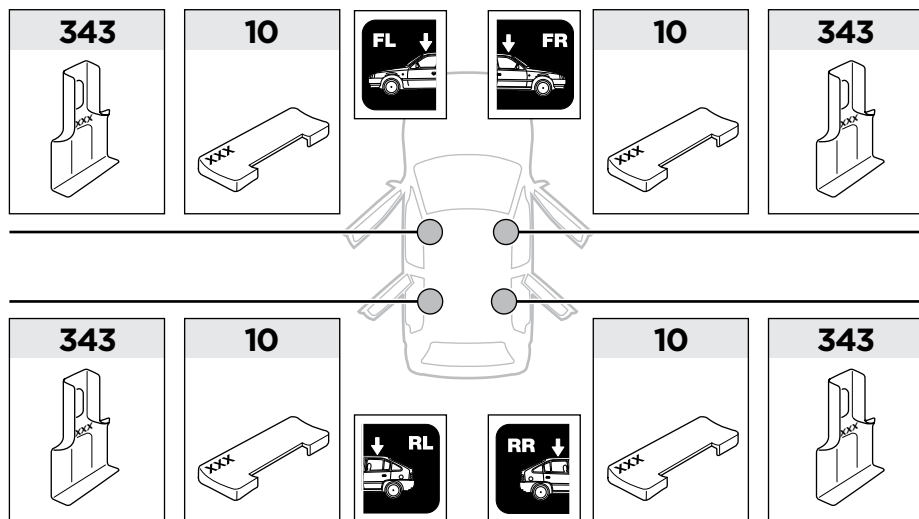

3

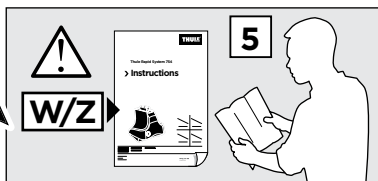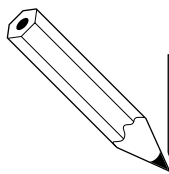

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI A2, 5-dr MPV, 00-05	230	700	9	27 1/2

