
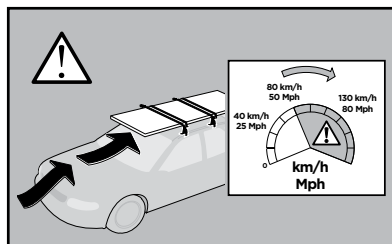
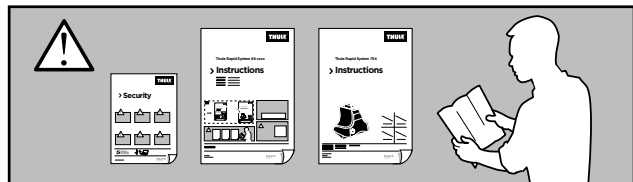
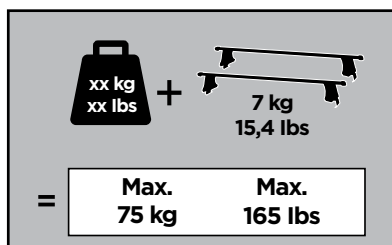


Thule Rapid System Kit 1218

> Instructions

VOLKSWAGEN Passat, 4-dr Sedan, 01-04 / *02-05

*North America

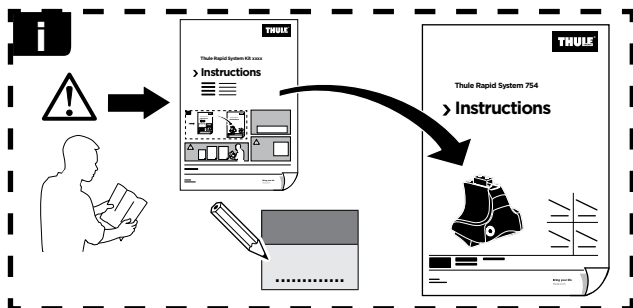



ISO 11154-E

141218


C.20121010
519-1218-02

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com






x1



x1

1



	X (scale)	X (mm)	X (inch)
VOLKSWAGEN Passat , 4-dr Sedan, 01-04 / *02-05	34	991	39

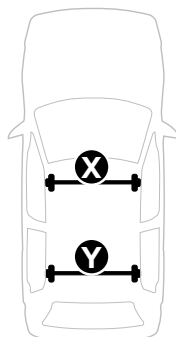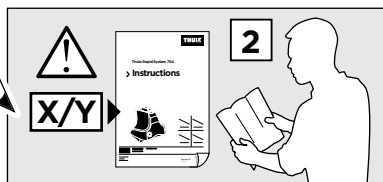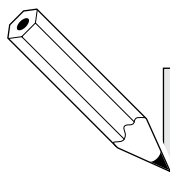



	Y (scale)	Y (mm)	Y (inch)
VOLKSWAGEN Passat , 4-dr Sedan, 01-04 / *02-05	33	981	38 ⁵/₈

2

VOLKSWAGEN Passat, 4-dr Sedan, 01-04 / *02-05

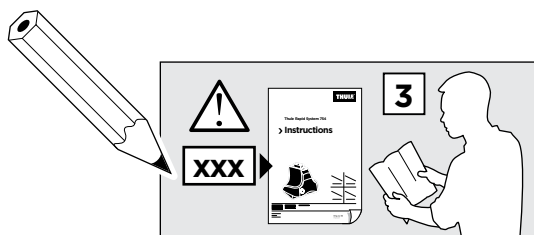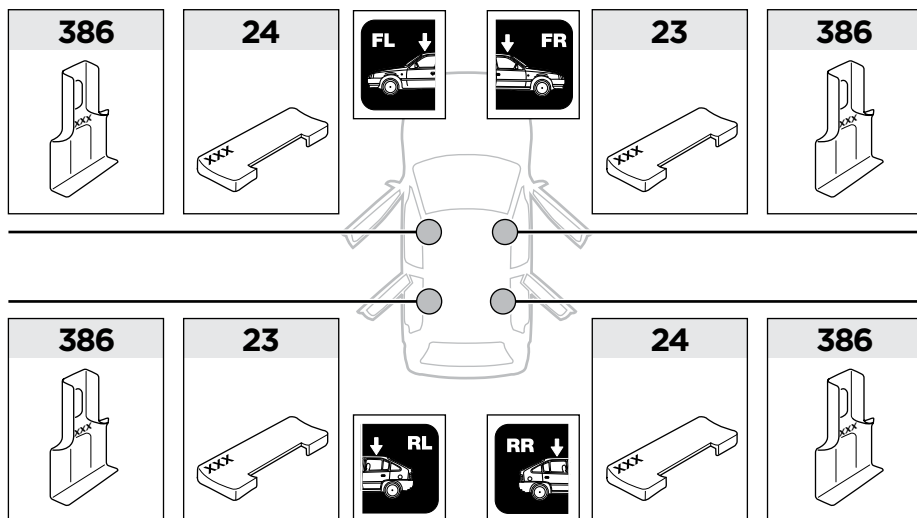

3

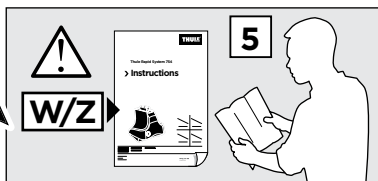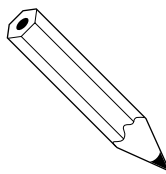

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLKSWAGEN Passat , 4-dr Sedan, 01-04 / *02-05	280	680	11	26 ³/₄

