







Thule Rapid System Kit 1256

> Instructions

TOYOTA Noah, 5-dr MPV, 01–

TOYOTA Voxy, 5-dr MPV, 01– (Asia)

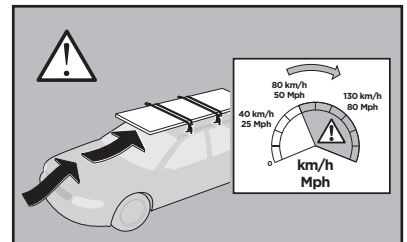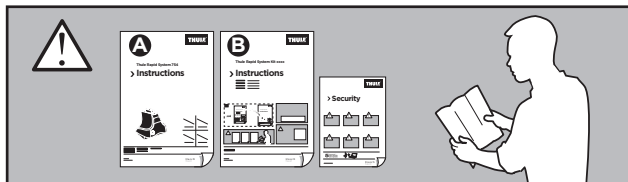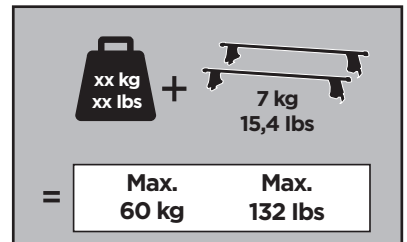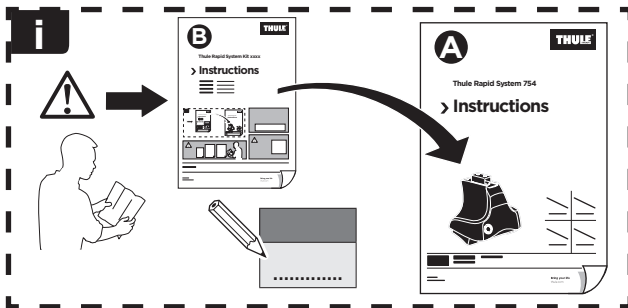


ISO 11154-E

141256
C.20130619
519-1256-02



Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

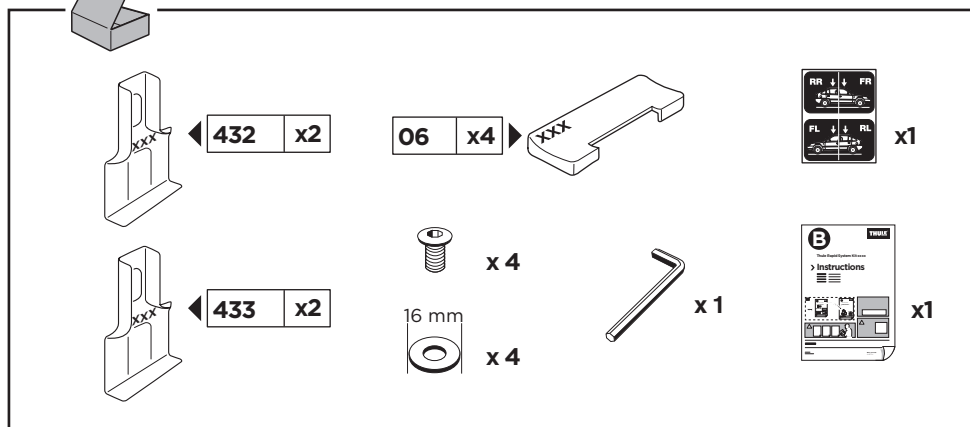

1



	X (scale)	X (mm)	X (inch)
TOYOTA Noah , 5-dr MPV, 01-	35	1001	39 ³ / ₈
TOYOTA Voxy , 5-dr MPV, 01- (Asia)	35	1001	39 ³ / ₈

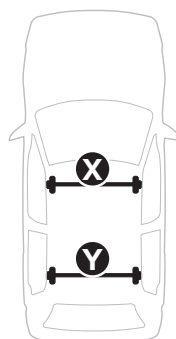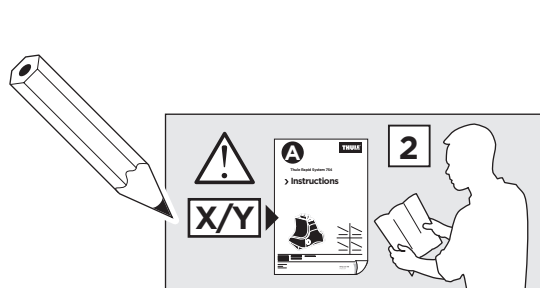



	Y (scale)	Y (mm)	Y (inch)
TOYOTA Noah , 5-dr MPV, 01-	33,5	986	38 ⁷ / ₈
TOYOTA Voxy , 5-dr MPV, 01- (Asia)	33,5	986	38 ⁷ / ₈

2


TOYOTA Noah, 5-dr MPV, 01-
TOYOTA Voxy, 5-dr MPV, 01- (Asia)

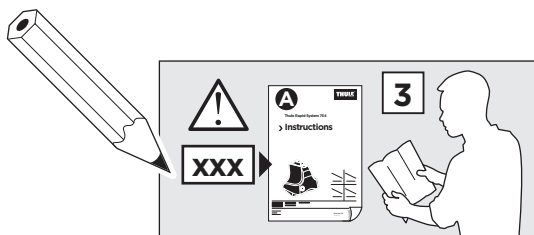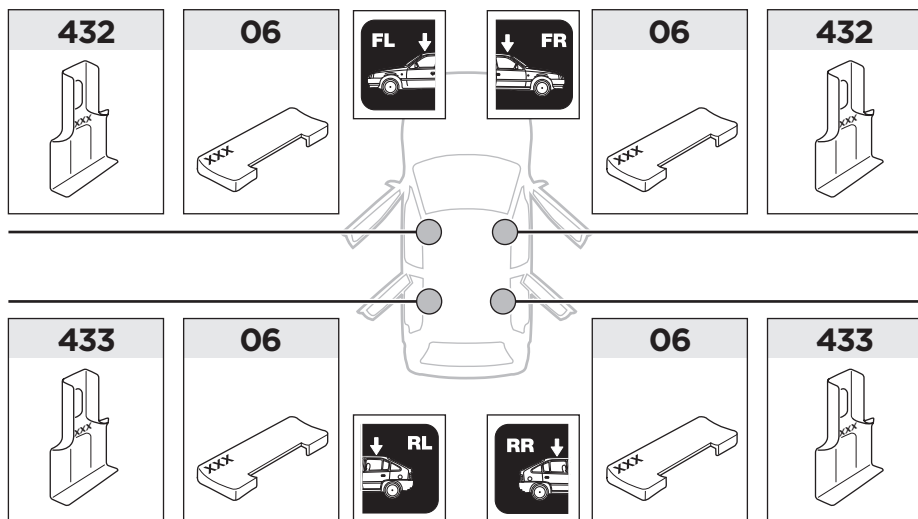

3

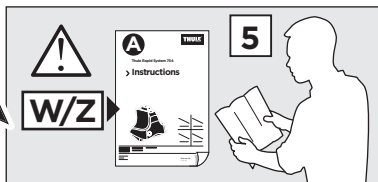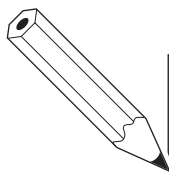

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Noah , 5-dr MPV, 01-	190	650	7 1/2	25 5/8
TOYOTA Voxy , 5-dr MPV, 01- (Asia)	190	650	7 1/2	25 5/8

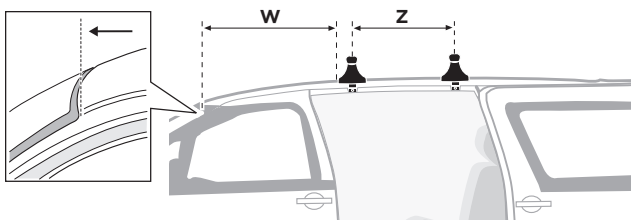

x 1





16 mm

x 4



x 4

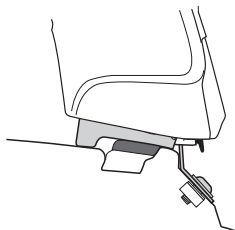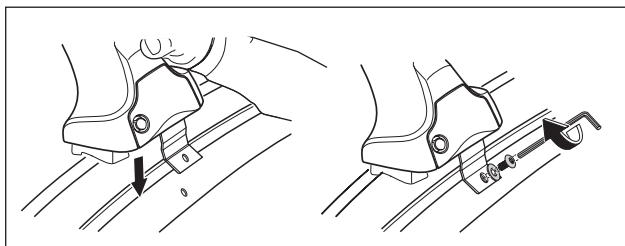

Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA



info@thule.com
Phone: 800-238-2388



www.thule.com