
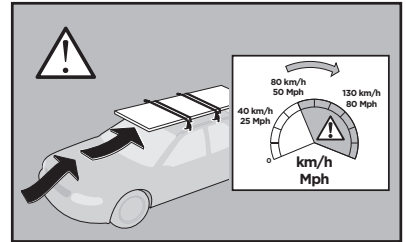
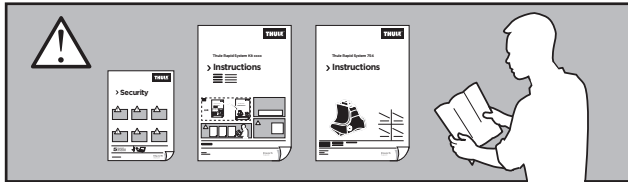
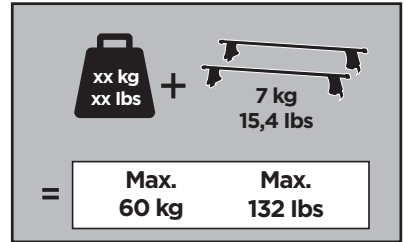


Thule Rapid System Kit 1354

> Instructions

SEAT Altea, 5-dr Hatchback, 04-15


SEAT Toledo, 5-dr Hatchback, 05-12

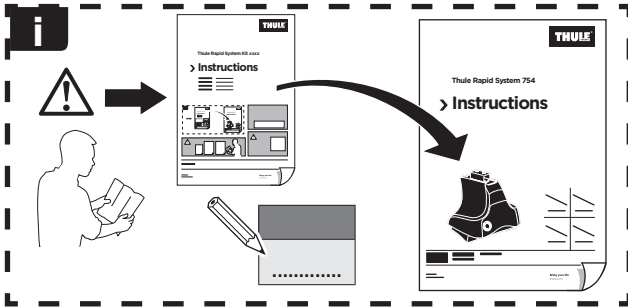

ISO 11154-E



74 x1



75 x1

93 x2




664 x1

665 x1

301 x2





x1



x1

1

	X (scale)	X (mm)	X (inch)
SEAT Altea , 5-dr Hatchback, 04-15	34,5	996	39 1/4
SEAT Toledo , 5-dr Hatchback, 05-12	34	991	39

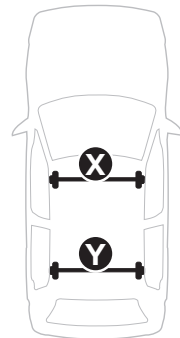
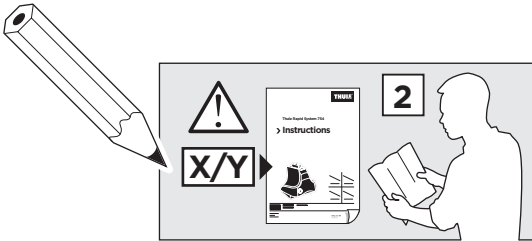


	Y (scale)	Y (mm)	Y (inch)
SEAT Altea , 5-dr Hatchback, 04-15	30,5	956	37 5/8
SEAT Toledo , 5-dr Hatchback, 05-12	30,5	956	37 5/8



2

SEAT Altea, 5-dr Hatchback, 04-15

SEAT Toledo, 5-dr Hatchback, 05-12

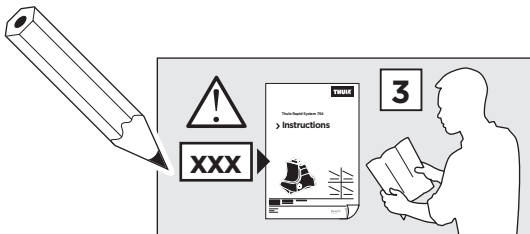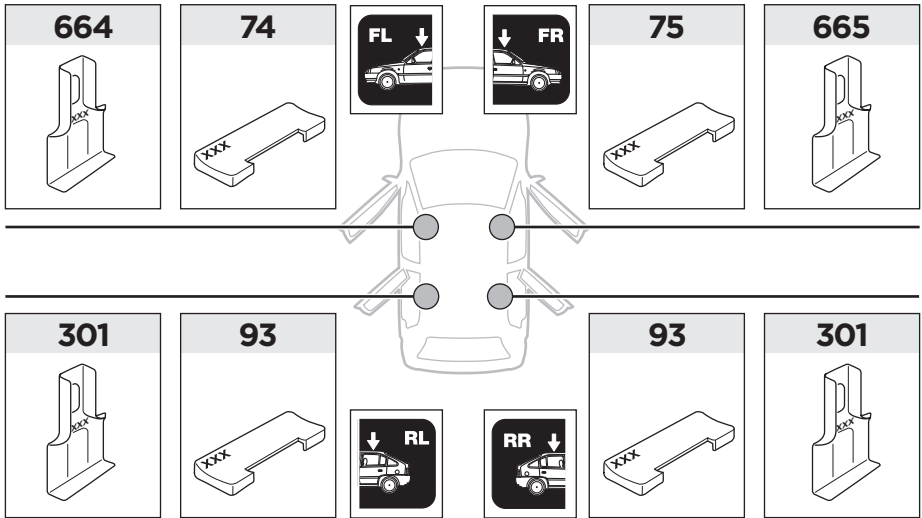

3

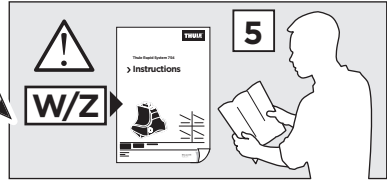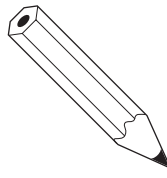

	W (mm)	Z (mm)	W (inch)	Z (inch)
SEAT Altea , 5-dr Hatchback, 04-15	290	700	11 ³/₈	27 ¹/₂
SEAT Toledo , 5-dr Hatchback, 05-12	290	700	11 ³/₈	27 ¹/₂

