
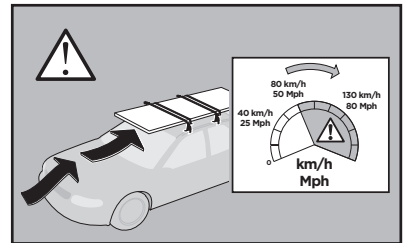
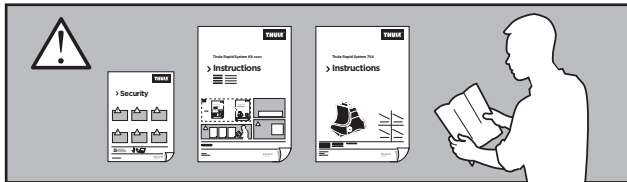
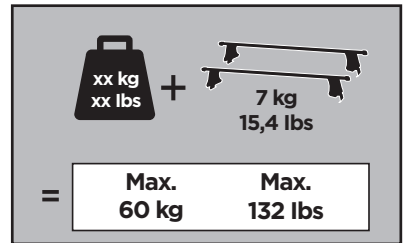


Thule Rapid System Kit 1388


> Instructions

HYUNDAI Sonata, 4-dr Sedan, 05-09 / *06-10

*North America


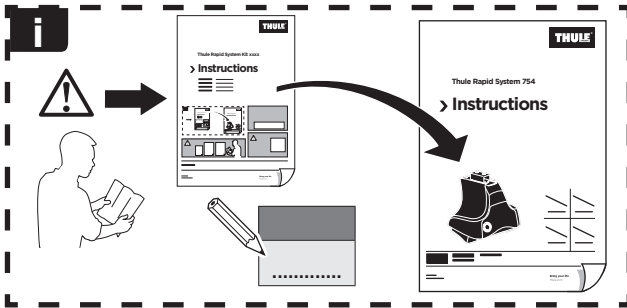


ISO 11154-E

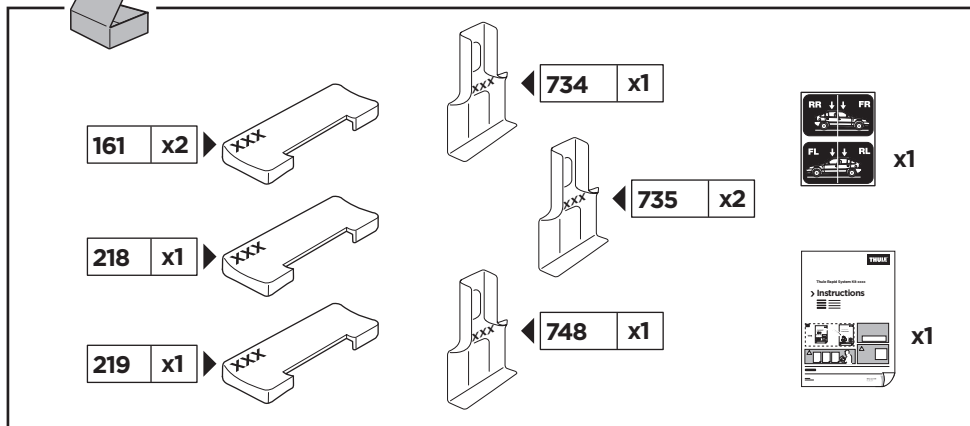

1


	X (scale)	X (mm)	X (inch)
HYUNDAI Sonata, 4-dr Sedan, 05-09 / *06-10	42,5	1076	42 ³/₈

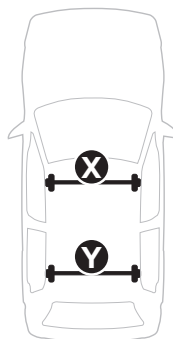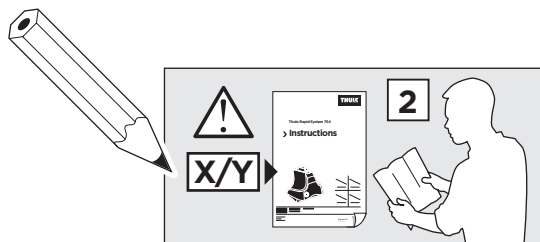


	Y (scale)	Y (mm)	Y (inch)
HYUNDAI Sonata, 4-dr Sedan, 05-09 / *06-10	39	1041	41

2

HYUNDAI Sonata, 4-dr Sedan, 05-09 / *06-10

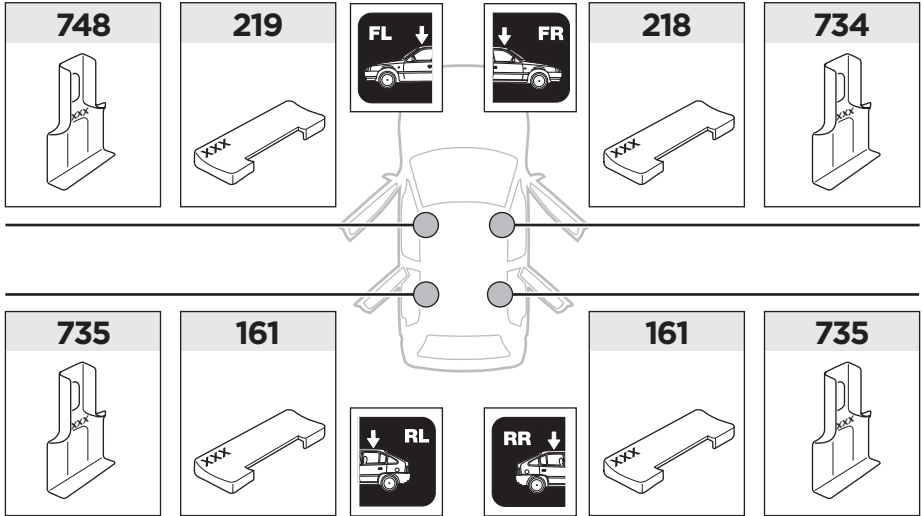

3

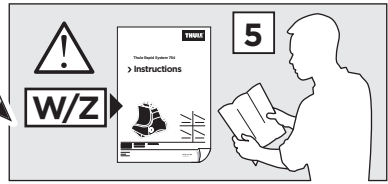

	W (mm)	Z (mm)	W (inch)	Z (inch)
HYUNDAI Sonata , 4-dr Sedan, 05-09 / *06-10	230	670	9	26 ³/₈

