
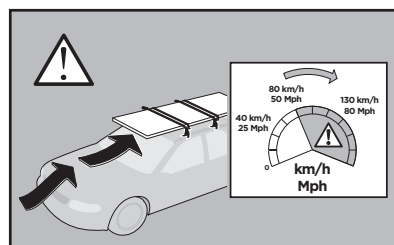
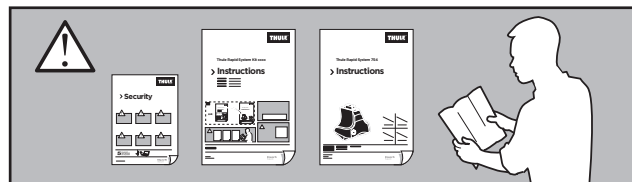
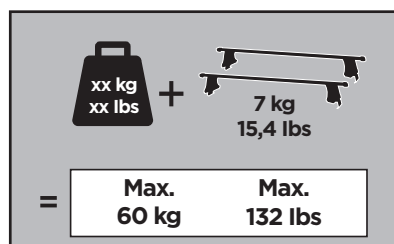


Thule Rapid System Kit 1451

> Instructions

FIAT Bravo, 5-dr Hatchback, 07-14

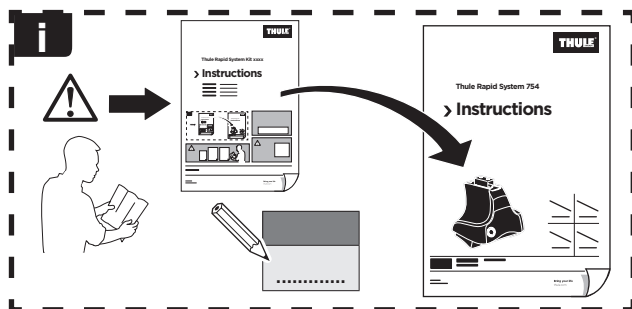




ISO 11154-E

141451

C.20160713
519-1451-02

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



906 x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
FIAT Bravo, 5-dr Hatchback, 07-14	41	1061	41 ³ / ₄

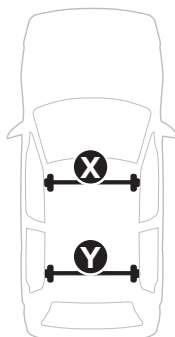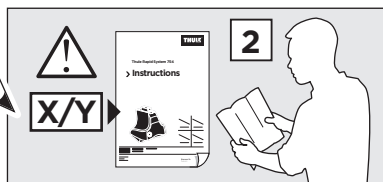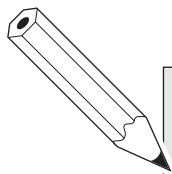



	Y (scale)	Y (mm)	Y (inch)
FIAT Bravo, 5-dr Hatchback, 07-14	37	1021	40 ¹ / ₄

2

FIAT Bravo, 5-dr Hatchback, 07-14

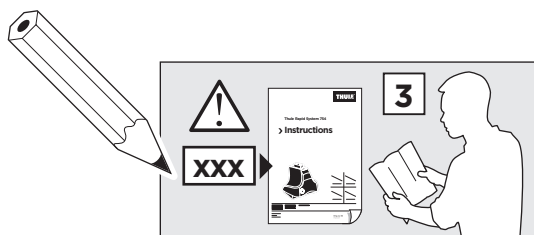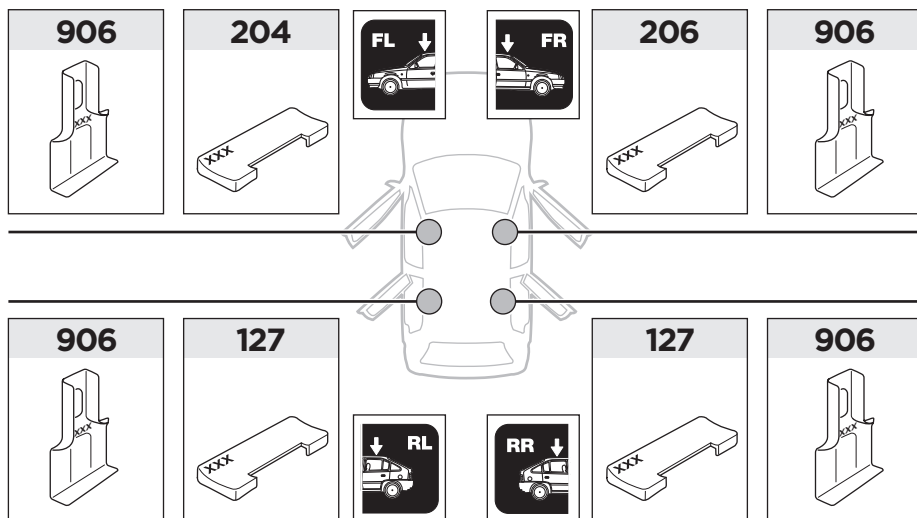

3

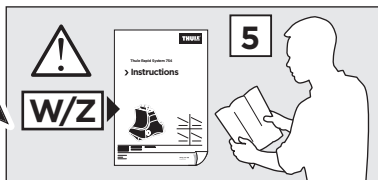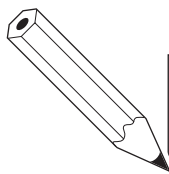

	W (mm)	Z (mm)	W (inch)	Z (inch)
FIAT Bravo, 5-dr Hatchback, 07-14	140	850	5 1/2	33 1/2

