
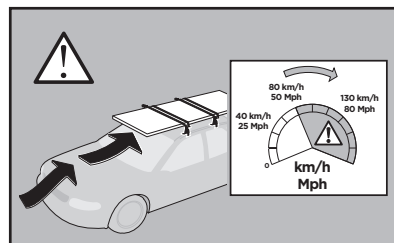
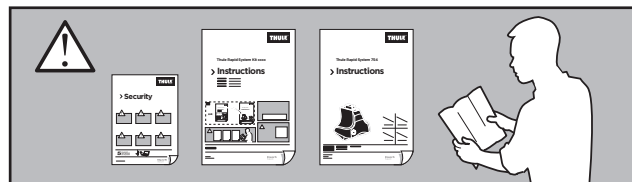
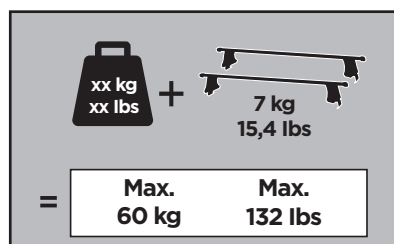


Thule Rapid System Kit 1458

> Instructions

FORD Fusion, 5-dr Hatchback, 06-12


FORD Figo, 5-dr Hatchback, 10-16

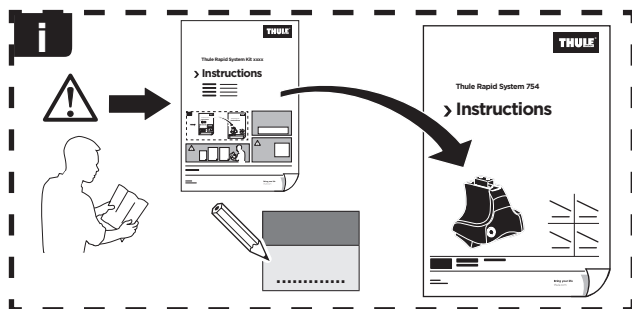

ISO 11154-E



19 x2




153 x2



x1

217 x2






921 x2



x1



1

	X (scale)	X (mm)	X (inch)
FORD Fusion , 5-dr Hatchback, 06-12	35,5	1006	39 ⁵ / ₈
FORD Figo , 5-dr Hatchback, 10-16	33,5	986	38 ⁷ / ₈

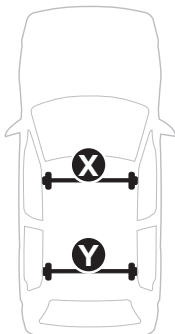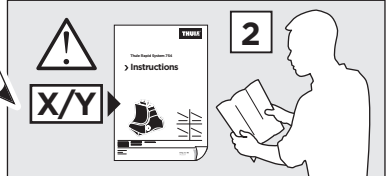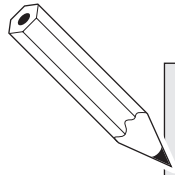


	Y (scale)	Y (mm)	Y (inch)
FORD Fusion , 5-dr Hatchback, 06-12	32,5	976	38 ³ / ₈
FORD Figo , 5-dr Hatchback, 10-16	29,5	946	37 ¹ / ₄


2

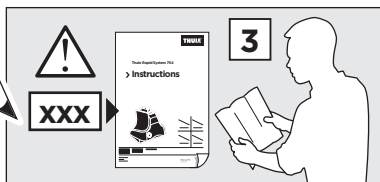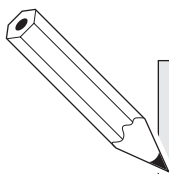



FORD Fusion, 5-dr Hatchback, 06-12

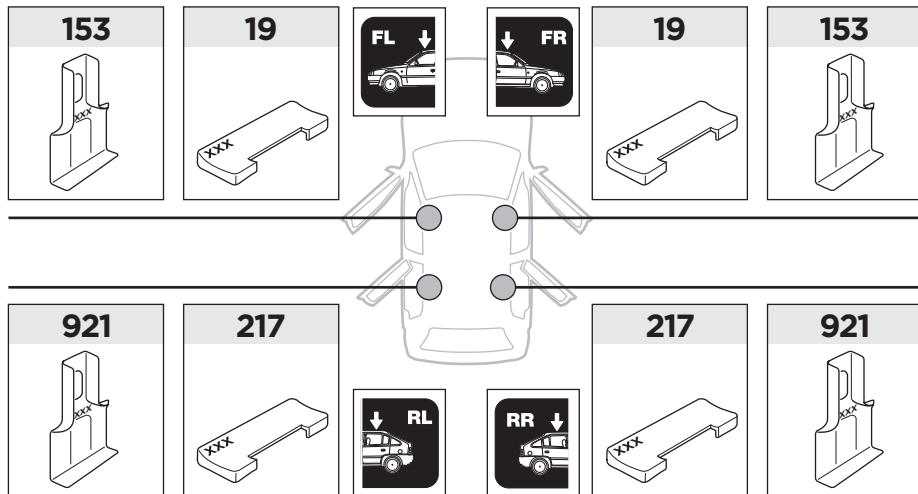

FORD Figo, 5-dr Hatchback, 10-16

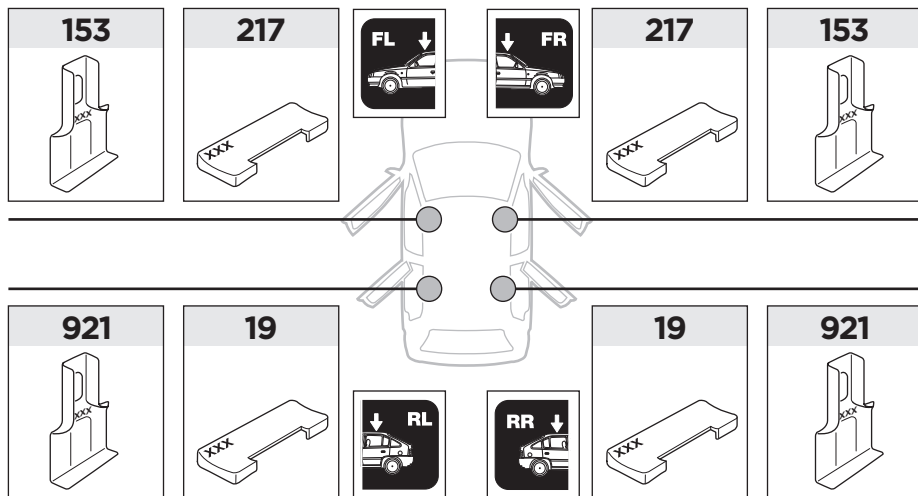

3

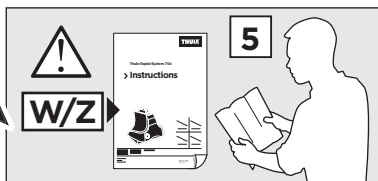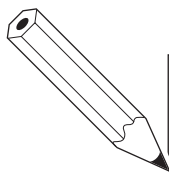

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Fusion , 5-dr Hatchback, 06-12	300	700	11 ³/₄	27 ¹/₂
FORD Figo , 5-dr Hatchback, 10-16	300	700	11 ³/₄	27 ¹/₂

