

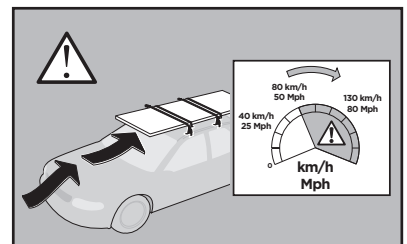
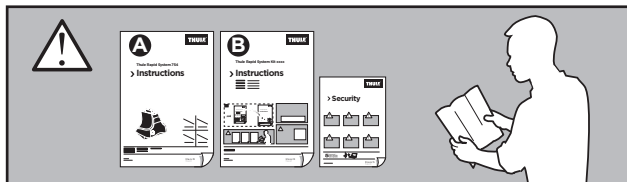


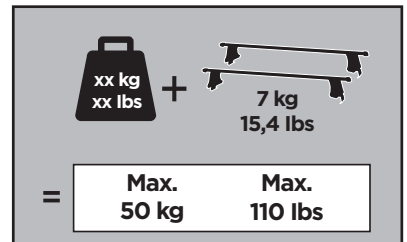

Thule Rapid System Kit 1467

> Instructions

RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-13

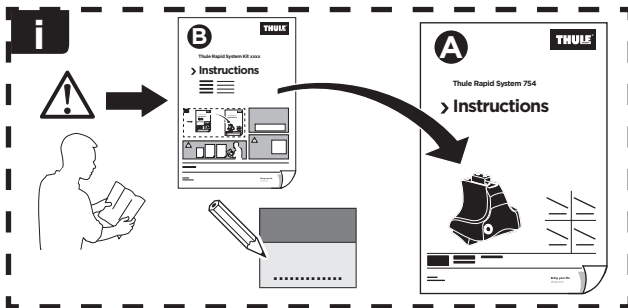

ISO 11154-E


141467
C.20141021
519-1467-02

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



65 x2



178 x2



927 x2



928 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-13	31,5	966	38

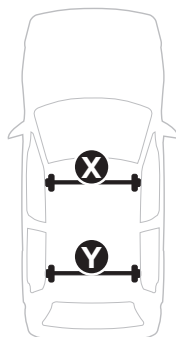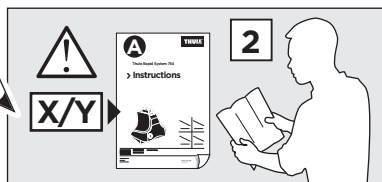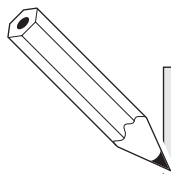


	Y (scale)	Y (mm)	Y (inch)
RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-13	27	921	36 1/4

2

RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-13

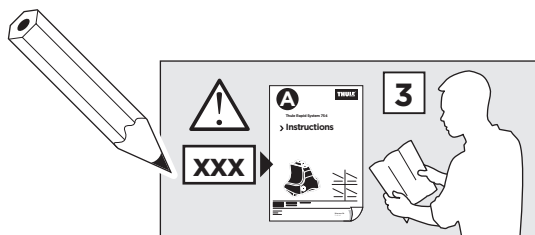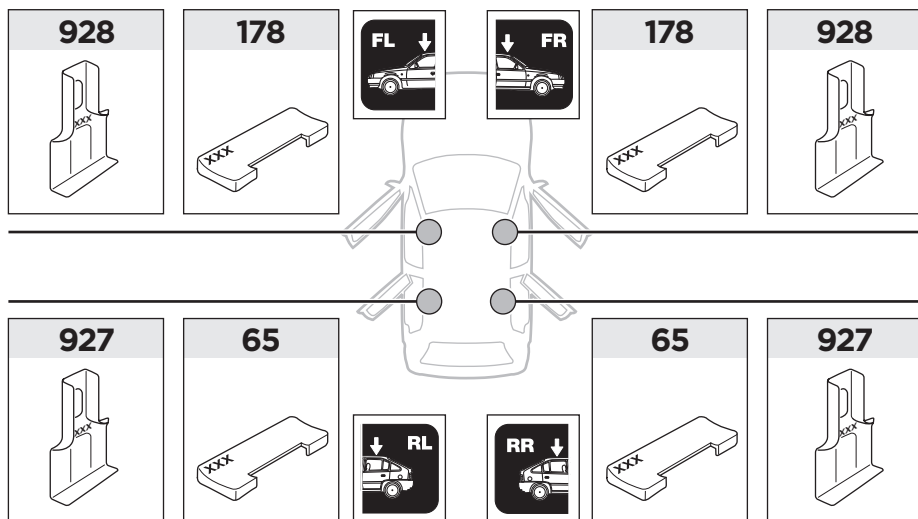

3

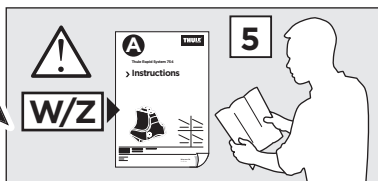

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Twingo (Mk.II.), 3-dr Hatchback, 07-13	226	650	8 ⁷/₈	25 ⁵/₈

