
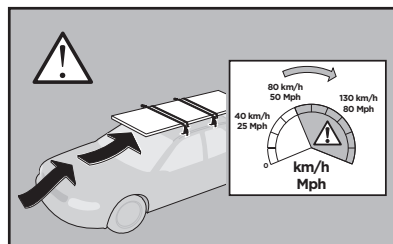
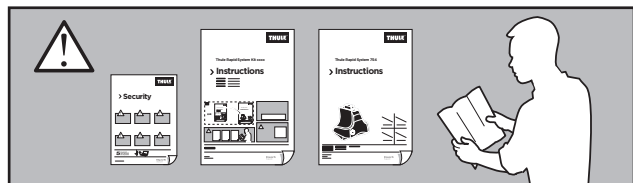
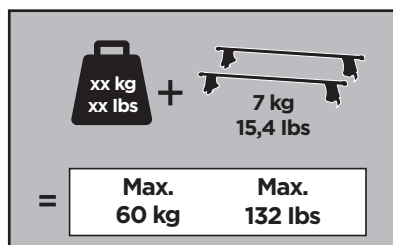


Thule Rapid System Kit 1470

> Instructions

CHRYSLER Voyager LX, 5-dr MPV, 08-15

LANCIA Voyager, 5-dr MPV, 08-15

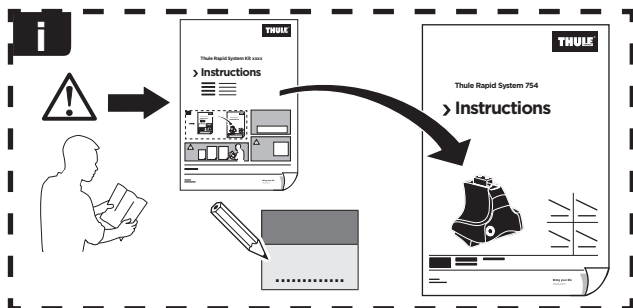

ISO 11154-E


141470
C.20160713
519-1470-03

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com




288 x4



952 x4





x1



x1

1

	X (scale)	X (mm)	X (inch)
CHRYSLER Voyager LX , 5-dr MPV, 08-15	55	1201	47 ¹ / ₄
LANCIA Voyager , 5-dr MPV, 08-15	55	1201	47 ¹ / ₄

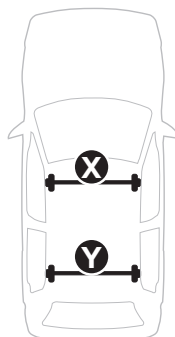
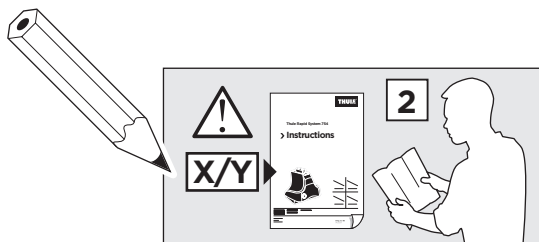


	Y (scale)	Y (mm)	Y (inch)
CHRYSLER Voyager LX , 5-dr MPV, 08-15	51	1161	45 ³ / ₄
LANCIA Voyager , 5-dr MPV, 08-15	51	1161	45 ³ / ₄


2

CHRYSLER Voyager LX, 5-dr MPV, 08-15

LANCIA Voyager, 5-dr MPV, 08-15

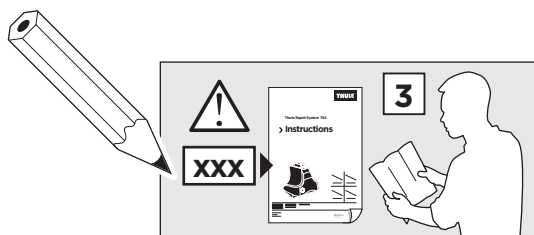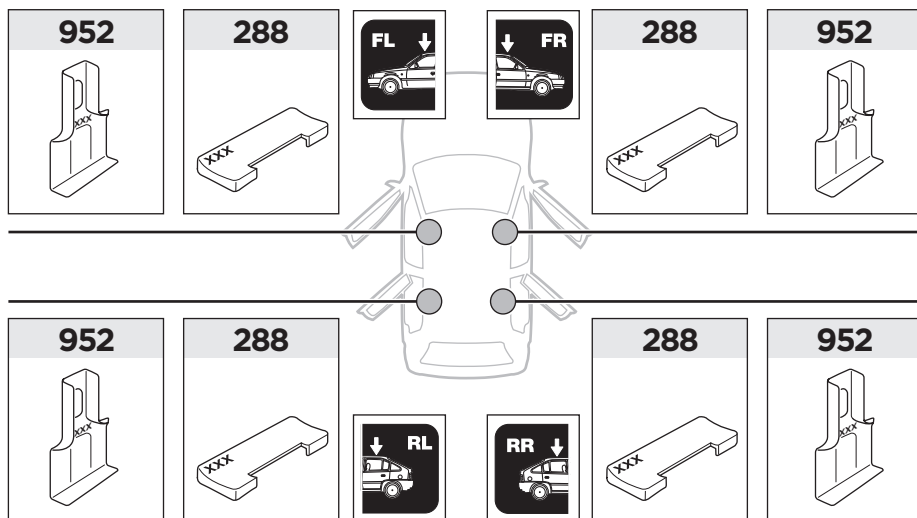

3

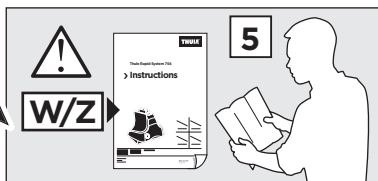

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHRYSLER Voyager LX , 5-dr MPV, 08-15	635	760	25	29 ⁷ / ₈
LANCIA Voyager , 5-dr MPV, 08-15	635	760	25	29 ⁷ / ₈

