
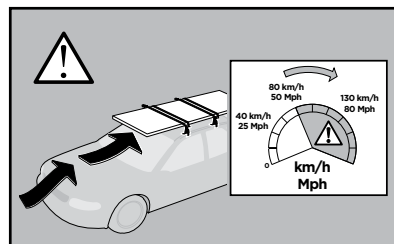
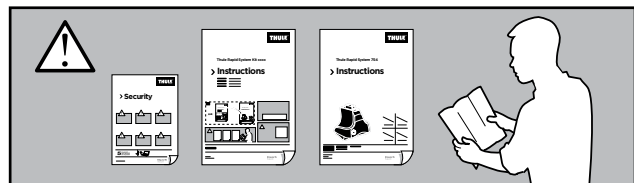
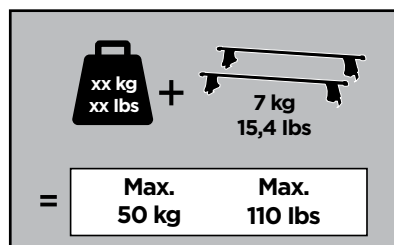


Thule Rapid System Kit 1471

> Instructions

HYUNDAI i10, 5-dr Hatchback, 08–

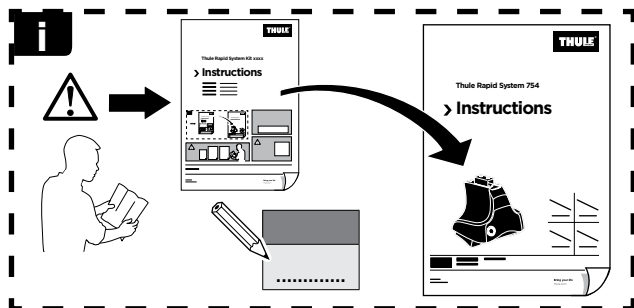

ISO 11154-E

141471


C.20121015
519-1471-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com




120 x1



121 x1



137 x2




829 x2



954 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
HYUNDAI i10, 5-dr Hatchback, 08-	30,5	956	37 ⁵ / ₈

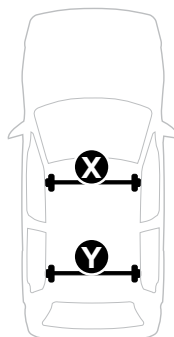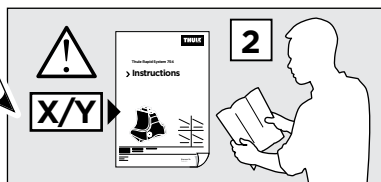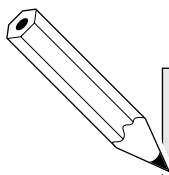



	Y (scale)	Y (mm)	Y (inch)
HYUNDAI i10, 5-dr Hatchback, 08-	26,5	916	36 ¹ / ₈

2

HYUNDAI i10, 5-dr Hatchback, 08-

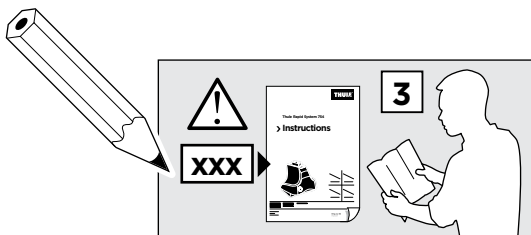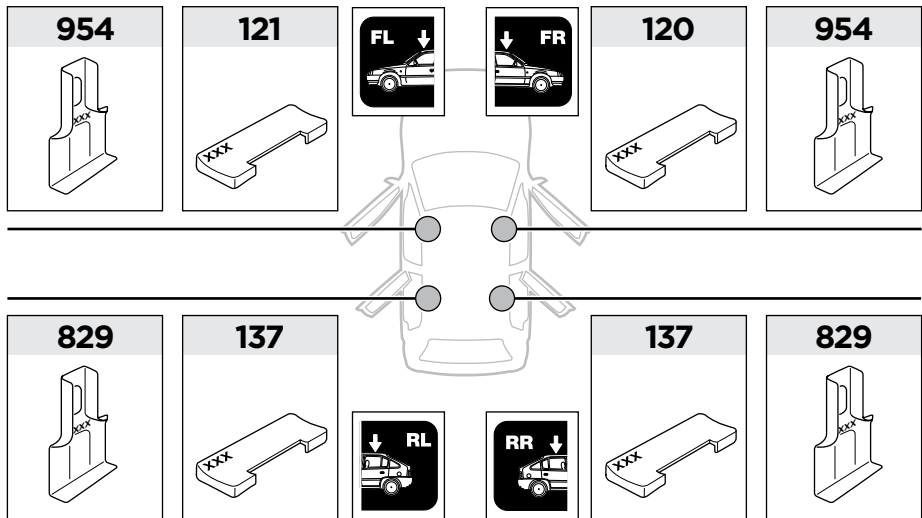

3

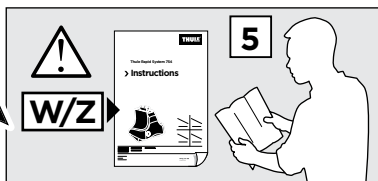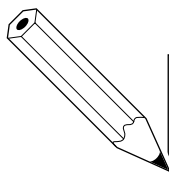

	W (mm)	Z (mm)	W (inch)	Z (inch)
HYUNDAI i10, 5-dr Hatchback, 08-	210	700	8 1/4	27 1/2

