

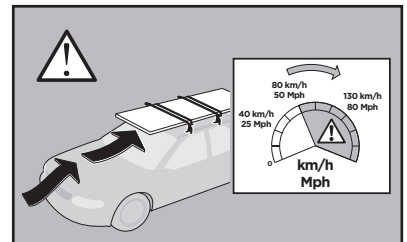
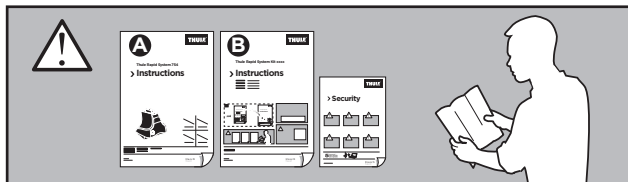


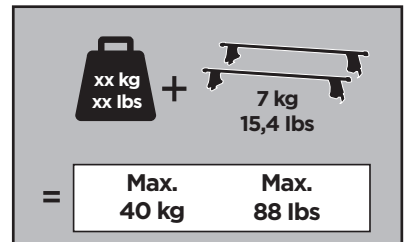

Thule Rapid System Kit 1573

> Instructions

SUZUKI Wagon R, 5-dr MPV, 08–

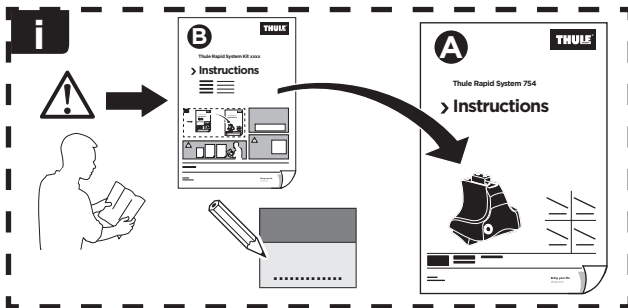

ISO 11154-E


141573
C.20130617
519-1573-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



1076 x2



1077 x2



03 x2



248 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
SUZUKI Wagon R, 5-dr MPV, 08-	31	961	37 ⁷ / ₈

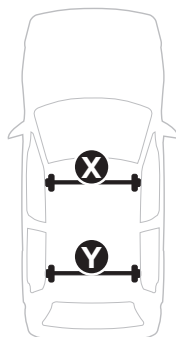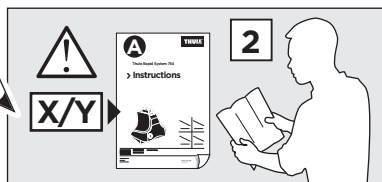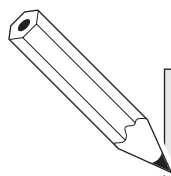


	Y (scale)	Y (mm)	Y (inch)
SUZUKI Wagon R, 5-dr MPV, 08-	28	931	36 ⁵ / ₈

2

SUZUKI Wagon R, 5-dr MPV, 08-

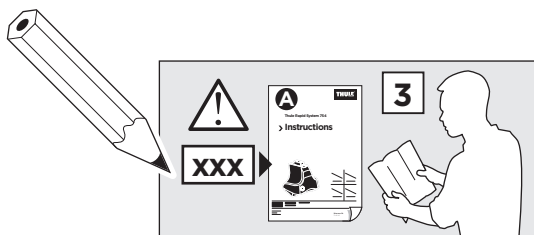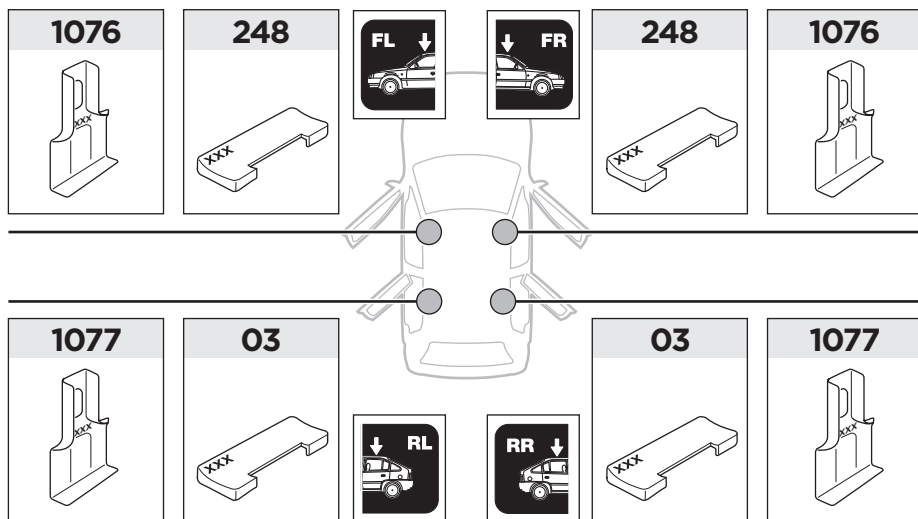

3

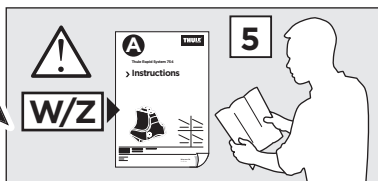

	W (mm)	Z (mm)	W (inch)	Z (inch)
SUZUKI Wagon R, 5-dr MPV, 08-	440	700	17 ³/₈	27 ¹/₂

