

Thule Rapid System Kit 1596

> Instructions

VOLVO 850, 4-dr Sedan, 92-96 / *93-97

VOLVO 850, 5-dr Estate, 93-96





VOLVO 850, 5-dr Wagon, *94-97

VOLVO S70, 4-dr Sedan, 97-00 / *98-00

VOLVO V70, 5-dr Estate, 97-99

VOLVO V70, 5-dr Wagon, *98-00

*North America

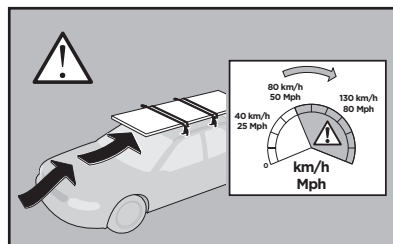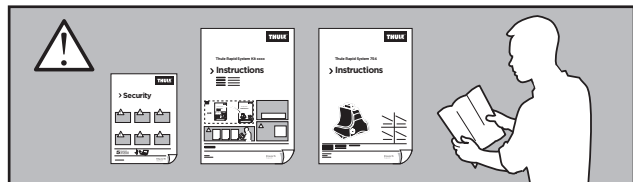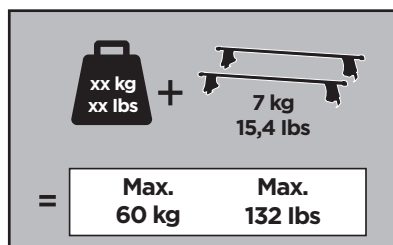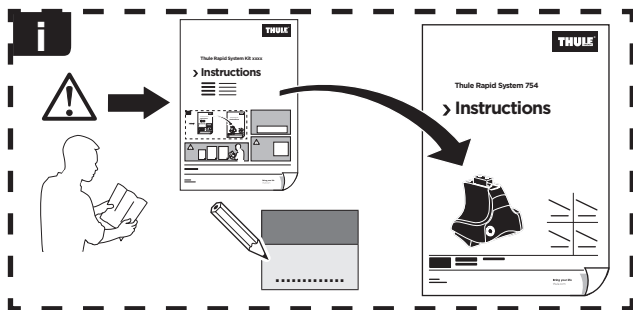



ISO 11154-E

141596


C.2013.0117
519-1596-02

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

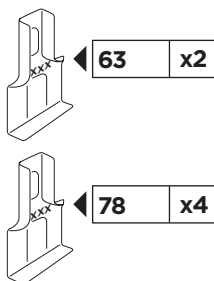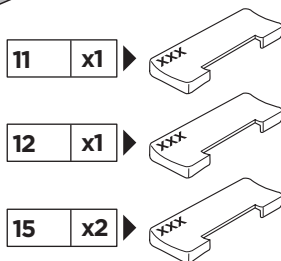



x1



x1







1

	X (scale)	X (mm)	X (inch)
VOLVO 850 , 4-dr Sedan, 92-96 / *93-97	47,5	1126	44 ³ / ₈
VOLVO 850 , 5-dr Estate, 93-96	46,5	1116	43 ⁷ / ₈
VOLVO 850 , 5-dr Wagon, *94-97	46,5	1116	43 ⁷ / ₈
VOLVO S70 , 4-dr Sedan, 97-00 / *98-00	47,5	1126	44 ³ / ₈
VOLVO V70 , 5-dr Estate, 97-99	46,5	1116	43 ⁷ / ₈
VOLVO V70 , 5-dr Wagon, *98-00	46,5	1116	43 ⁷ / ₈

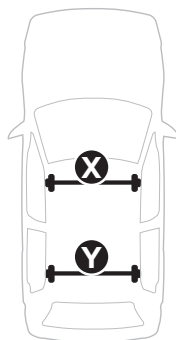
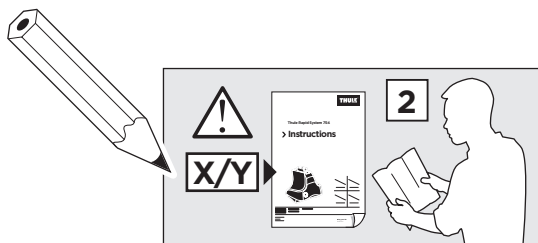


	Y (scale)	Y (mm)	Y (inch)
VOLVO 850 , 4-dr Sedan, 92-96 / *93-97	41,5	1066	42
VOLVO 850 , 5-dr Estate, 93-96	42	1071	42 ¹ / ₈
VOLVO 850 , 5-dr Wagon, *94-97	42	1071	42 ¹ / ₈
VOLVO S70 , 4-dr Sedan, 97-00 / *98-00	41,5	1066	42
VOLVO V70 , 5-dr Estate, 97-99	42	1071	42 ¹ / ₈
VOLVO V70 , 5-dr Wagon, *98-00	42	1071	42 ¹ / ₈



2

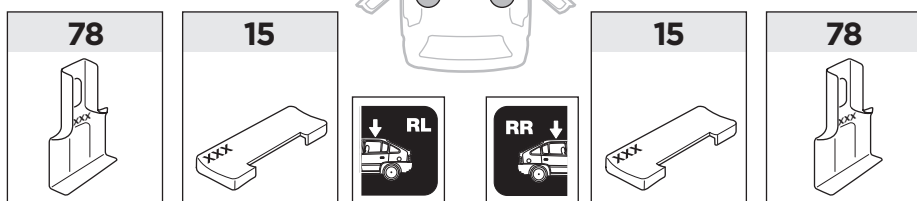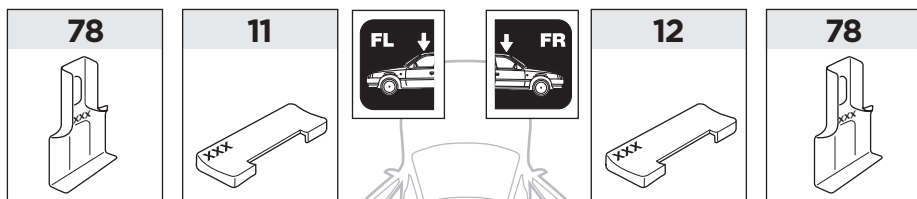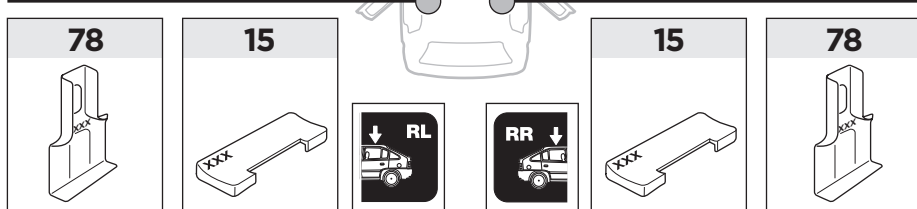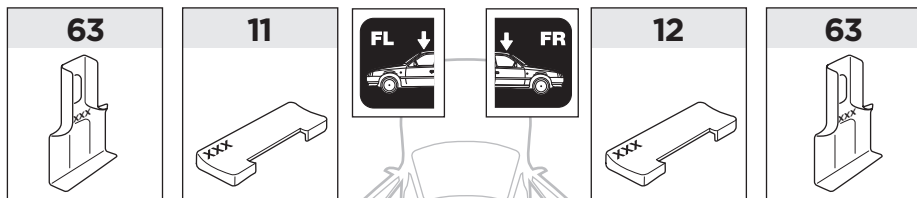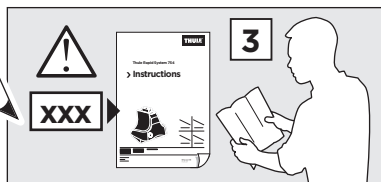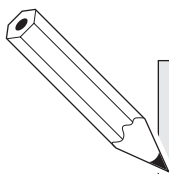


3

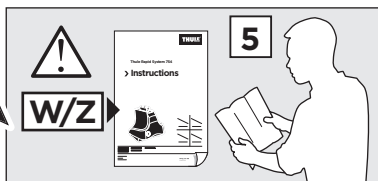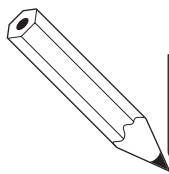

i* = information

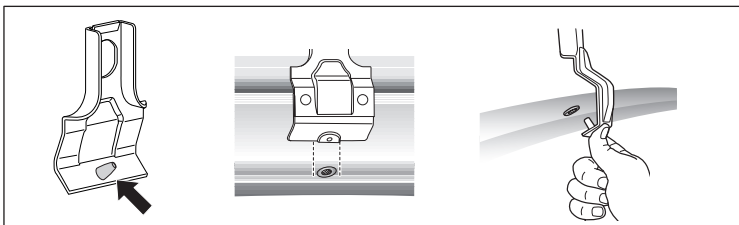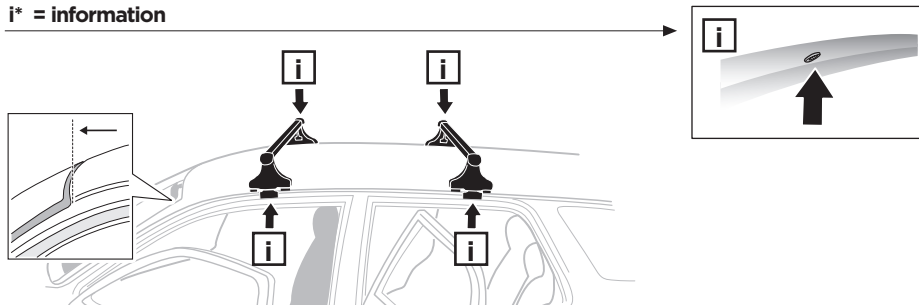

VOLVO 850, 4-dr Sedan, 92-96 / *93-97
VOLVO S70, 4-dr Sedan, 97-00 / *98-00

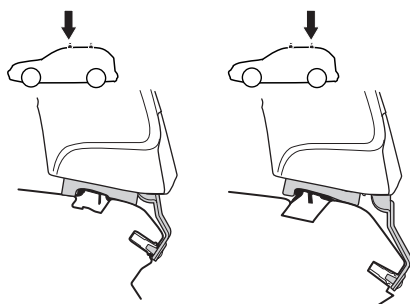

VOLVO 850, 5-dr Estate, 93-96
VOLVO 850, 5-dr Wagon, *94-97
VOLVO V70, 5-dr Estate, 97-99
VOLVO V70, 5-dr Wagon, *98-00

