







Thule Rapid System Kit 1658

> Instructions

DODGE Journey, 5-dr SUV, 12- / *13- (Without railing)

FIAT Freemont, 5-dr SUV, 12- (Without railing)

*North America

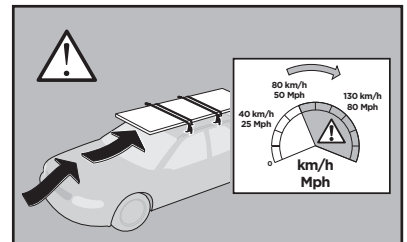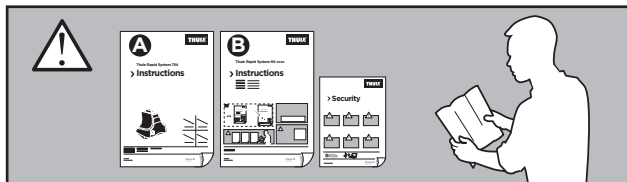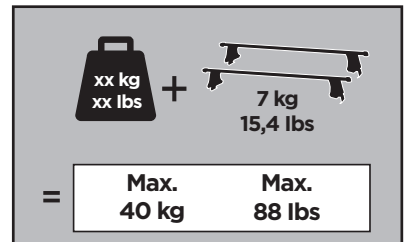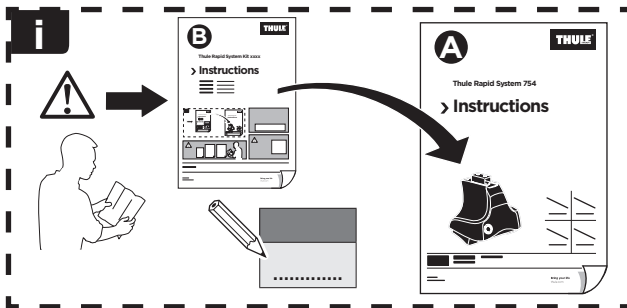

ISO 11154-E

141658



C.20130704
519-1658-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



239 x4



1195 x2



1196 x2






x1



x1

1

	X (scale)	X (mm)	X (inch)
DODGE Journey , 5-dr SUV, 12- / *13-	53	1181	46 1/2
FIAT Freemont , 5-dr SUV, 12-	53	1181	46 1/2

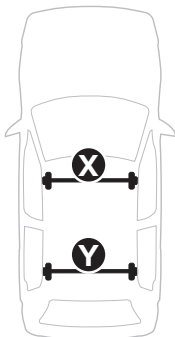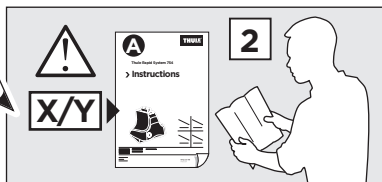
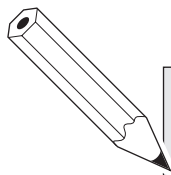


	Y (scale)	Y (mm)	Y (inch)
DODGE Journey , 5-dr SUV, 12- / *13-	49,5	1146	45 1/8
FIAT Freemont , 5-dr SUV, 12-	49,5	1146	45 1/8


2

DODGE Journey, 5-dr SUV, 12- / *13-

FIAT Freemont, 5-dr SUV, 12-

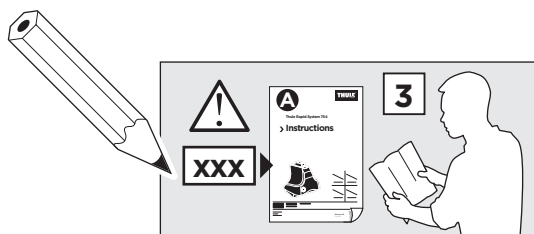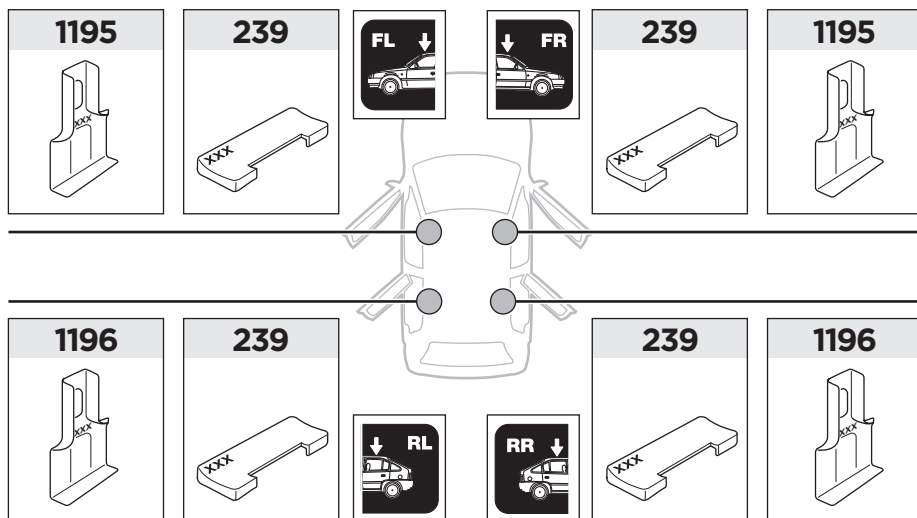

3

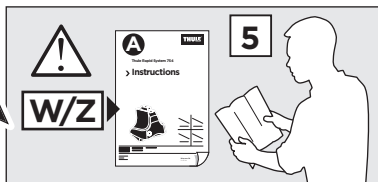

	W (mm)	Z (mm)	W (inch)	Z (inch)
DODGE Journey , 5-dr SUV, 12- / *13-	438	711	17 1/4	28
FIAT Freemont , 5-dr SUV, 12-	438	711	17 1/4	28

