

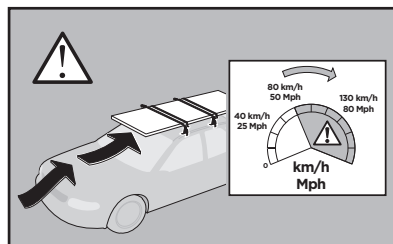
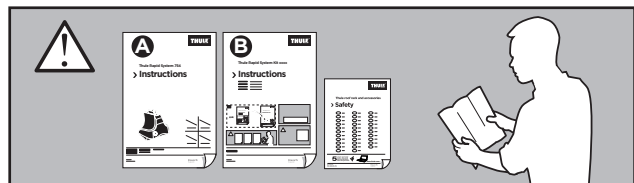
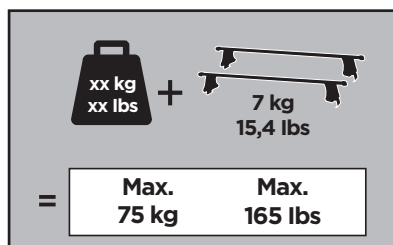


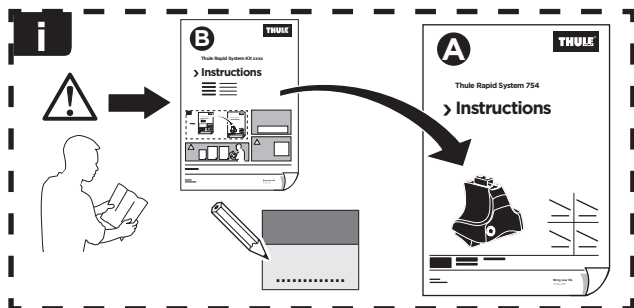

Thule Rapid System Kit 1783

> Instructions

CHEVROLET Colorado, 4-dr Crew Cab, 15-
CHEVROLET S10, 4-dr Double Cab, 12-
GMC Canyon, 4-dr Crew Cab, 15-
HOLDEN Colorado, 4-dr Double Cab, 12-
ISUZU D-Max, 4-dr Crew Cab, 12-

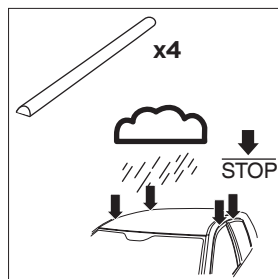

ISO 11154-E


141783
C.20160707
519-1783-02

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com





390 x2




391 x1



392 x1



1234 x4

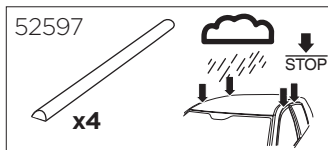




x1



x1

1



	X (scale)	X (mm)	X (inch)
CHEVROLET Colorado , 4-dr Crew Cab, 15-	38	1031	40 ⁵ / ₈
CHEVROLET S10 , 4-dr Double Cab, 12-	38	1031	40 ⁵ / ₈
GMC Canyon , 4-dr Crew Cab, 15-	38	1031	40 ⁵ / ₈
HOLDEN Colorado , 4-dr Double Cab, 12-	38	1031	40 ⁵ / ₈
ISUZU D-Max , 4-dr Crew Cab, 12-	38	1031	40 ⁵ / ₈

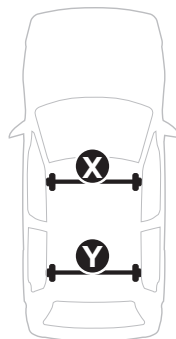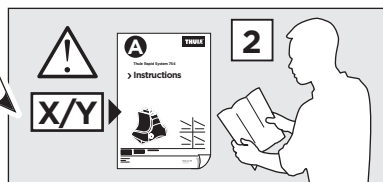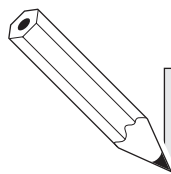


	Y (scale)	Y (mm)	Y (inch)
CHEVROLET Colorado , 4-dr Crew Cab, 15-	35.5	1006	39 ⁵ / ₈
CHEVROLET S10 , 4-dr Double Cab, 12-	35.5	1006	39 ⁵ / ₈
GMC Canyon , 4-dr Crew Cab, 15-	35.5	1006	39 ⁵ / ₈
HOLDEN Colorado , 4-dr Double Cab, 12-	35.5	1006	39 ⁵ / ₈
ISUZU D-Max , 4-dr Crew Cab, 12-	35.5	1006	39 ⁵ / ₈

2


CHEVROLET Colorado, 4-dr Crew Cab, 15-
CHEVROLET S10, 4-dr Double Cab, 12-
GMC Canyon, 4-dr Crew Cab, 15-
HOLDEN Colorado, 4-dr Double Cab, 12-
ISUZU D-Max, 4-dr Crew Cab, 12-

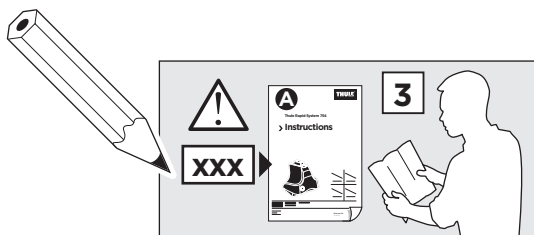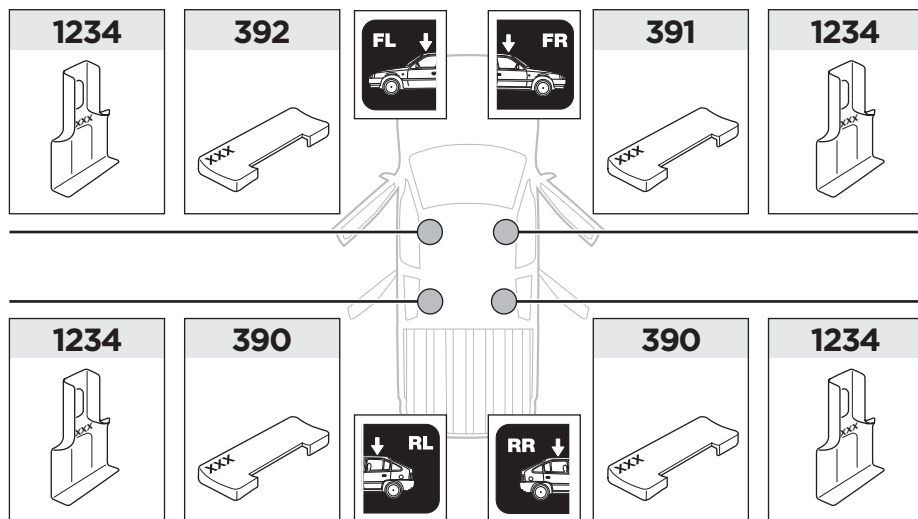


3

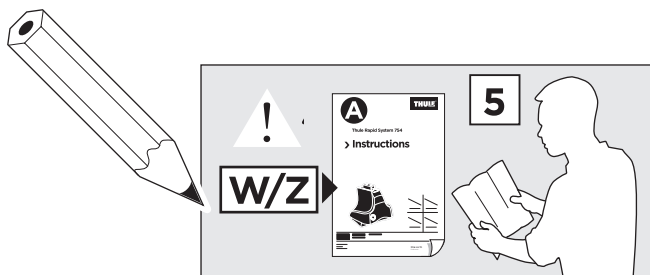


	W (mm)	Z (mm)	W (inch)	Z (inch)
CHEVROLET Colorado , 4-dr Crew Cab, 15-	250	700	9 ⁷ / ₈	27 ¹ / ₄
CHEVROLET S10 , 4-dr Double Cab, 12-	250	700	9 ⁷ / ₈	27 ¹ / ₄
GMC Canyon , 4-dr Crew Cab, 15-	250	700	9 ⁷ / ₈	27 ¹ / ₄
HOLDEN Colorado , 4-dr Double Cab, 12-	250	700	9 ⁷ / ₈	27 ¹ / ₄
ISUZU D-Max , 4-dr Crew Cab, 12-	250	700	9 ⁷ / ₈	27 ¹ / ₄

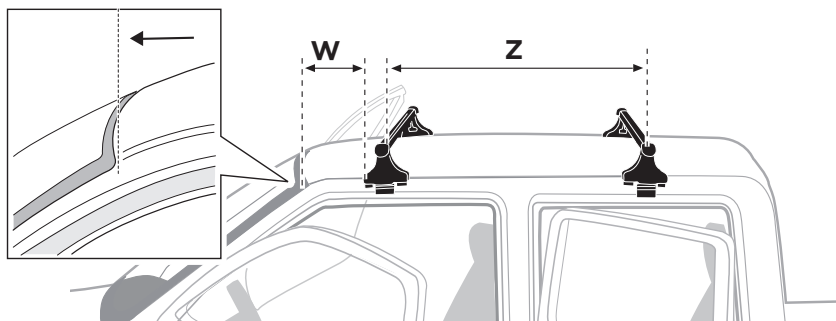


4

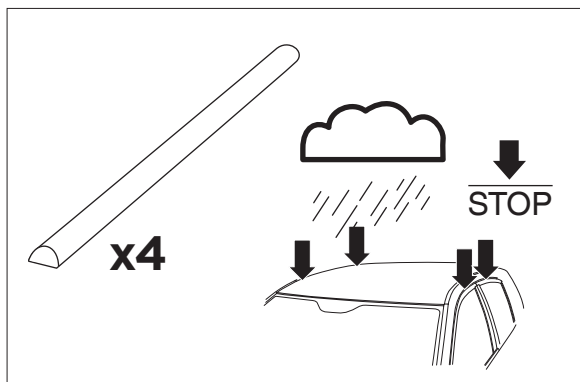


1

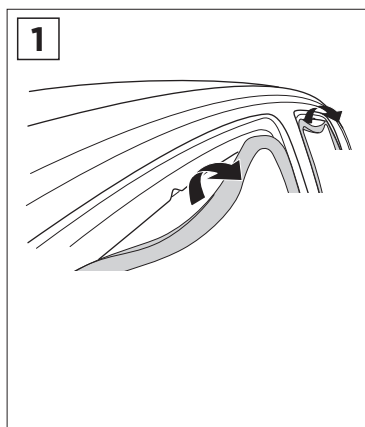


2

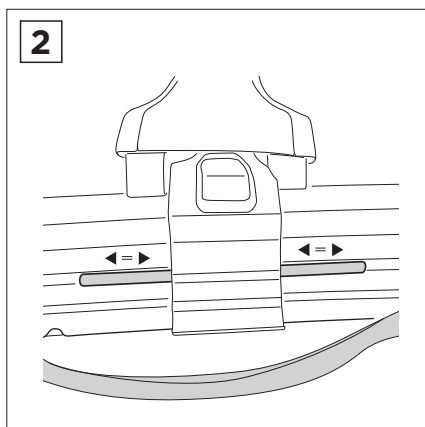

3


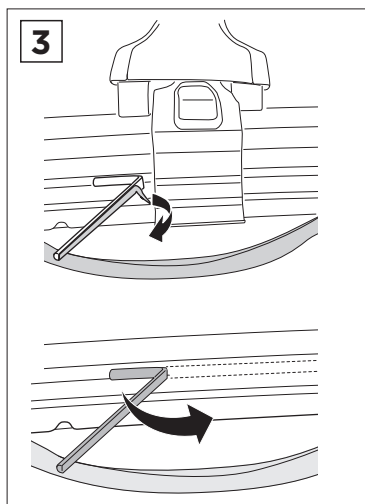


4


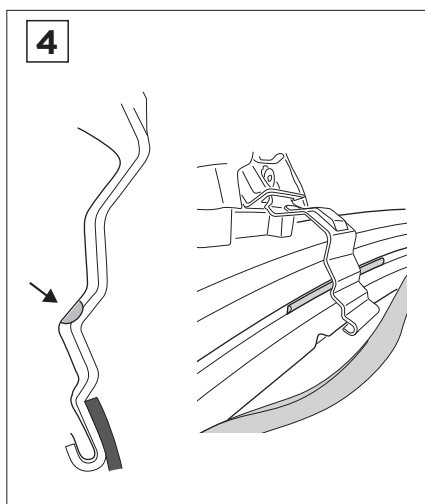




5



1

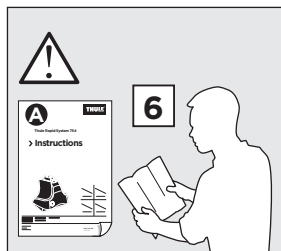
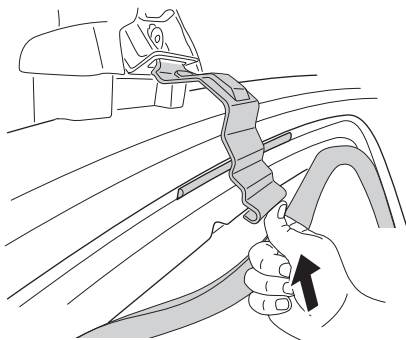







2

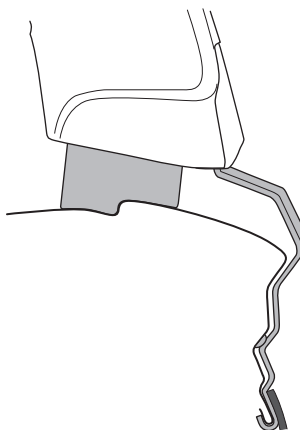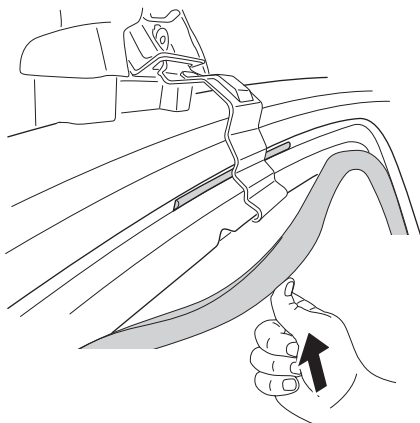


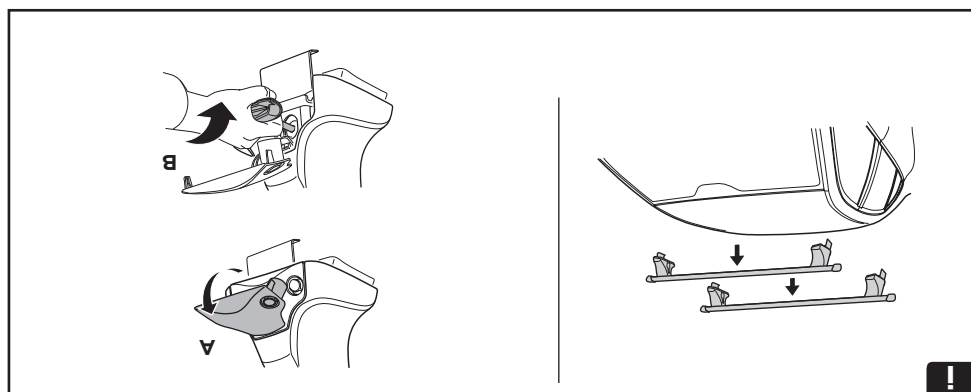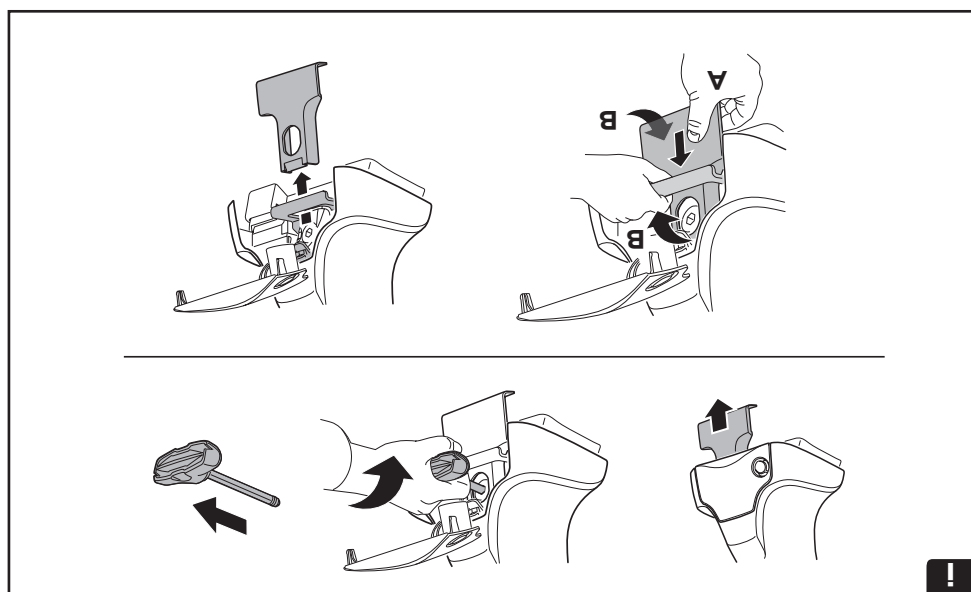

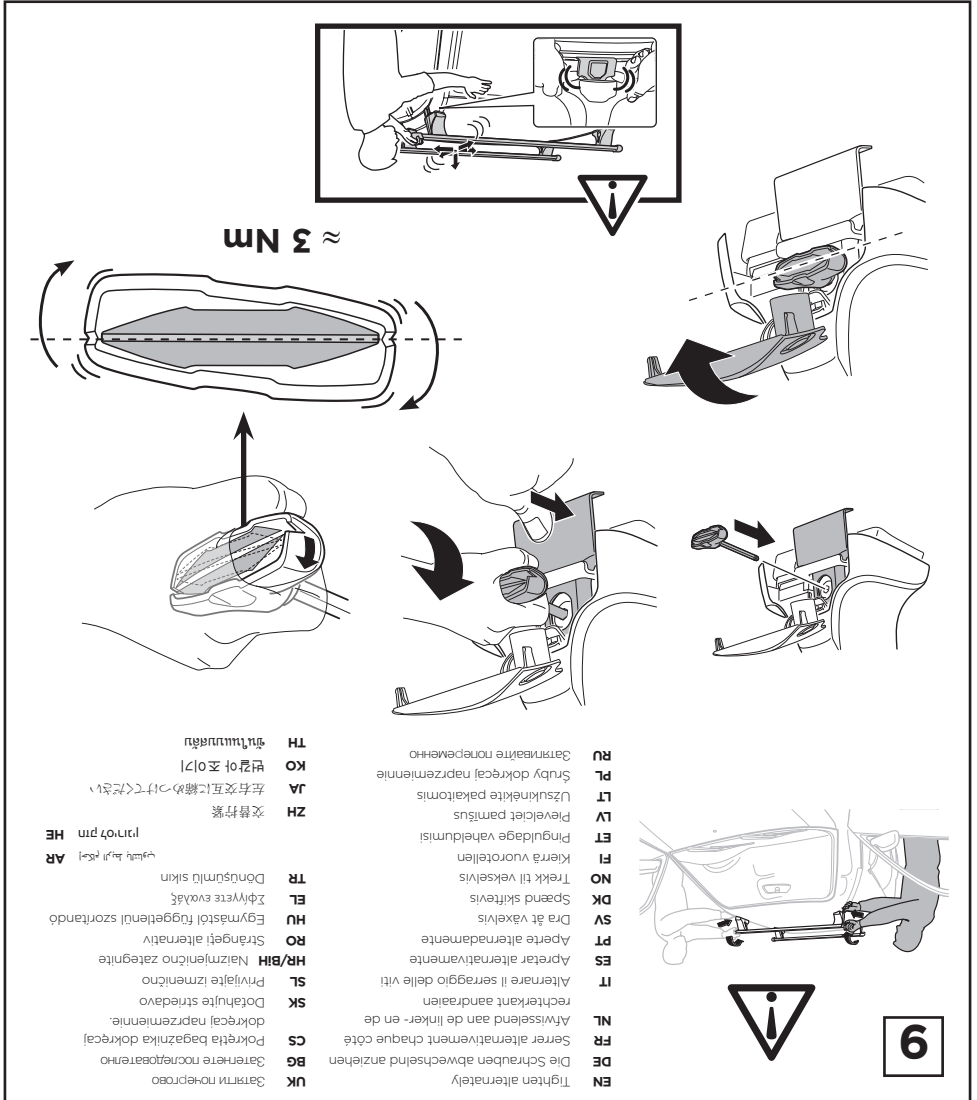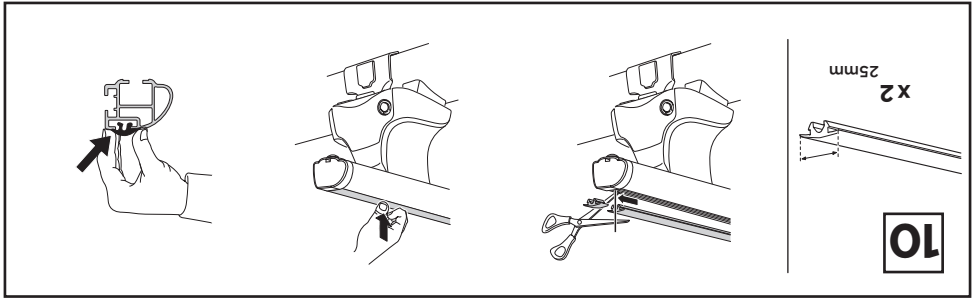

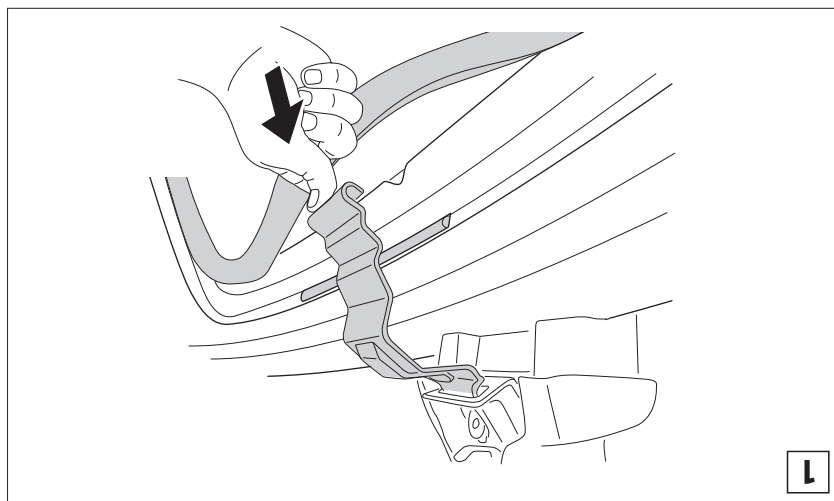
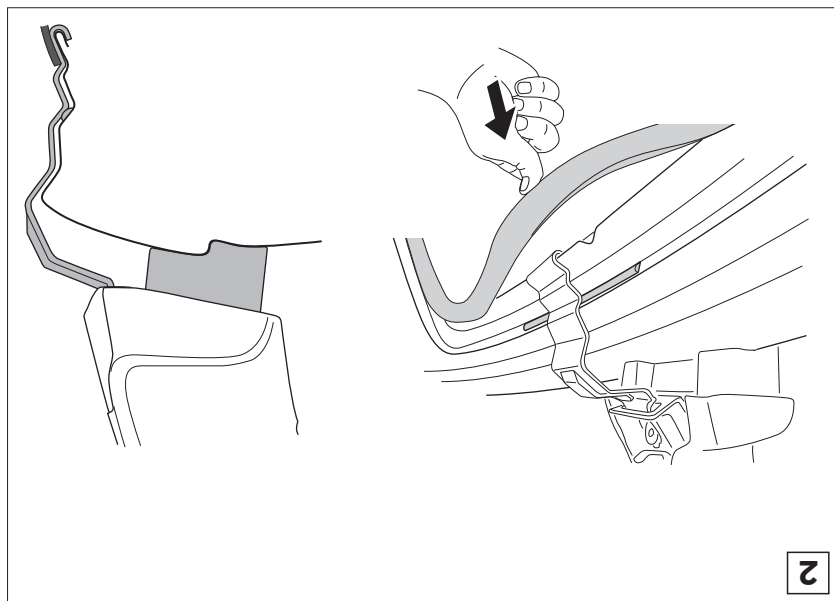


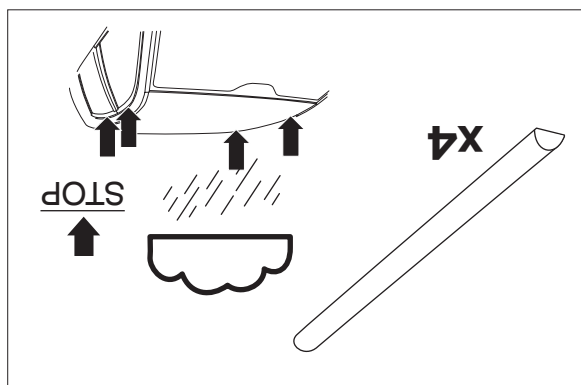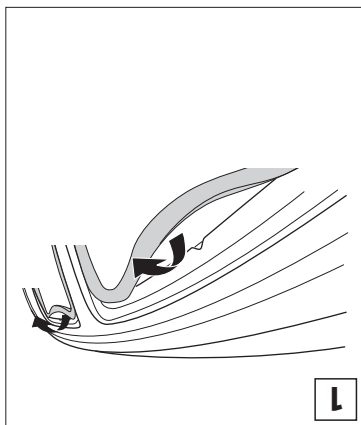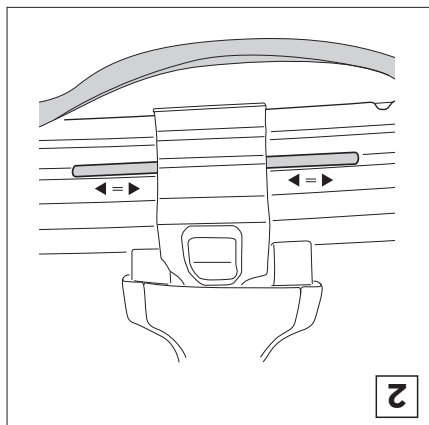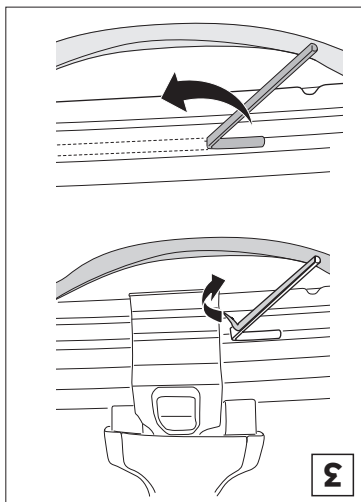
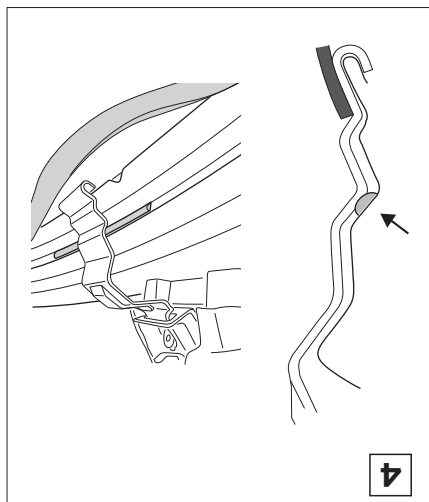


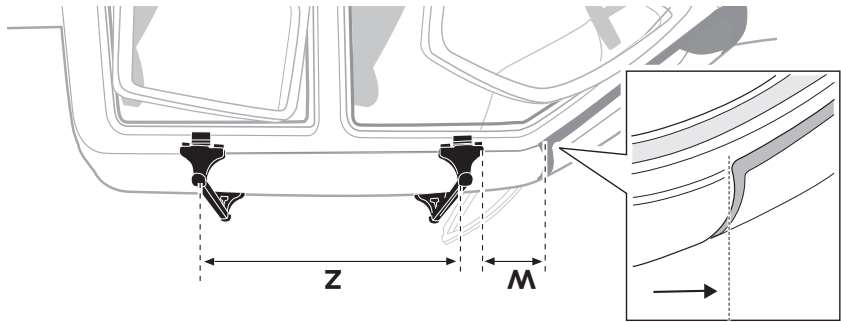


CHEVROLET Colorado, 4-dr Crew Cab, 15-	250 mm	700 mm	9 7/8"	27 1/2"
CHEVROLET S10, 4-dr Double Cab, 12-	250 mm	700 mm	9 7/8"	27 1/2"
GMC Canyon, 4-dr Crew Cab, 15-	250 mm	700 mm	9 7/8"	27 1/2"
HOLDEN Colorado, 4-dr Double Cab, 12-	250 mm	700 mm	9 7/8"	27 1/2"
ISUZU D-Max, 4-dr Crew Cab, 12-	250 mm	700 mm	9 7/8"	27 1/2"

X mm Y mm X inch Y inch

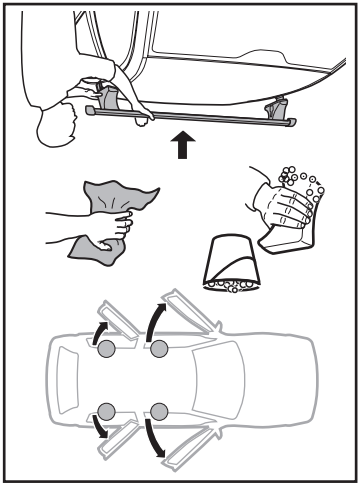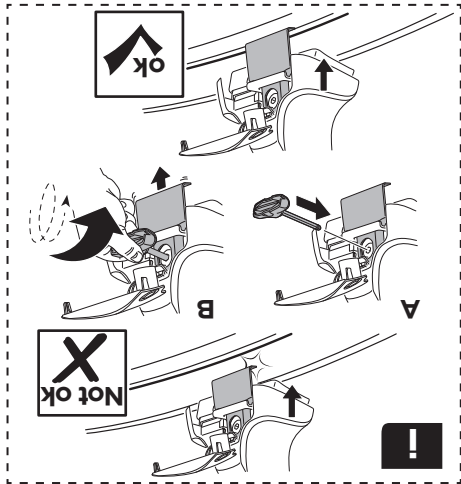

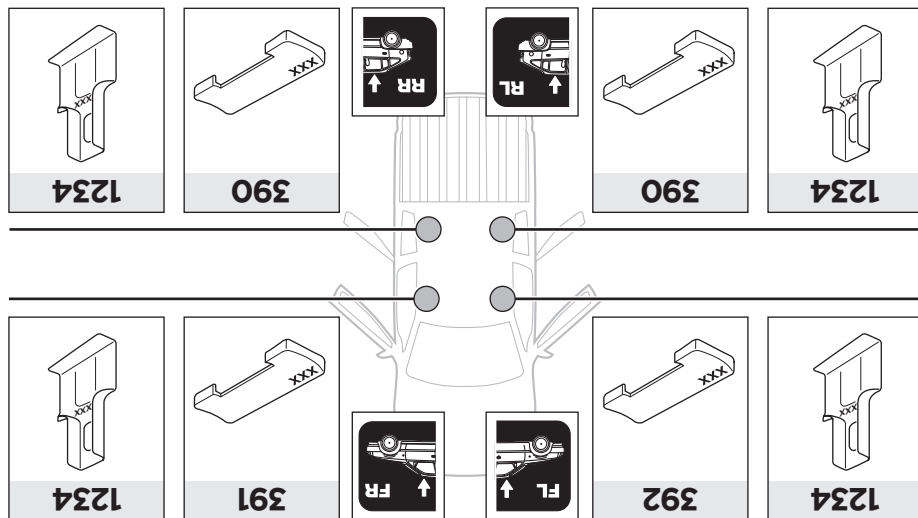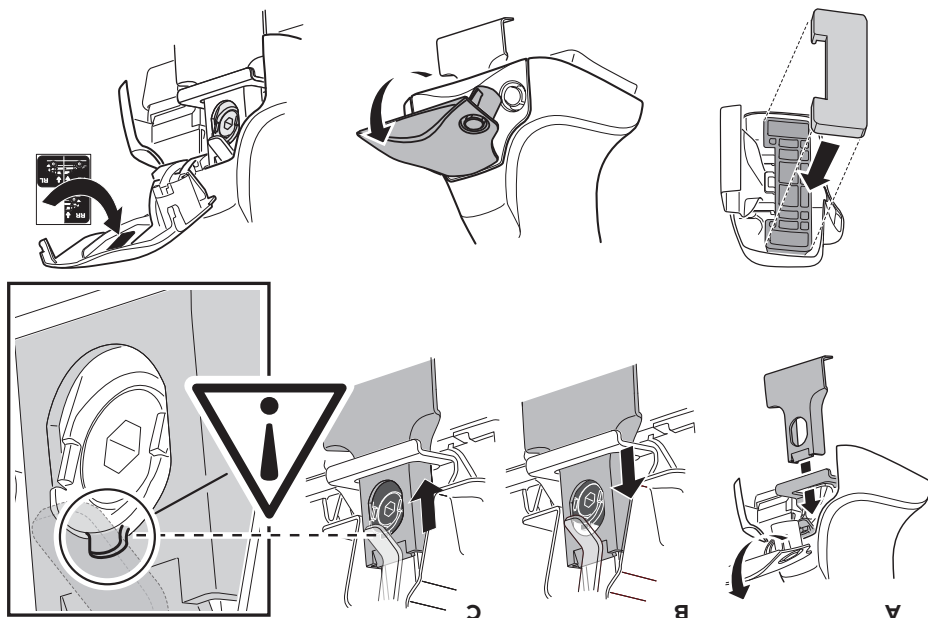

CHEVROLET Colorado, 4-dr Crew Cab, 15-
CHEVROLET S10, 4-dr Double Cab, 12-
GMC Canyon, 4-dr Crew Cab, 15-
HOLDEN Colorado, 4-dr Double Cab, 12-
ISUZU D-Max, 4-dr Crew Cab, 12-

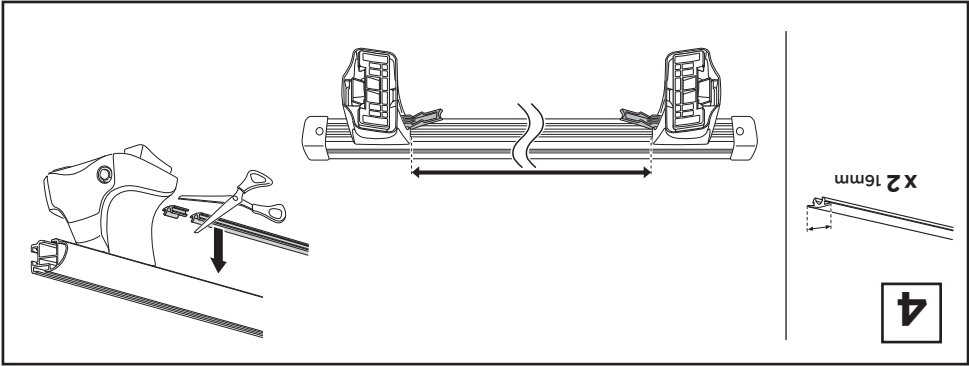

1006	35,5	ISUZU D-Max, 4-dr Crew Cab, 12-
1006	35,5	HOLDEN Colorado, 4-dr Double Cab, 12-
1006	35,5	GMC Canyon, 4-dr Crew Cab, 15-
1006	35,5	CHEVROLET S10, 4-dr Double Cab, 12-
1006	35,5	CHEVROLET Colorado, 4-dr Crew Cab, 15-

Y inch Y mm

Diagram 1: Side view of the crossbar with dimension Y. A detail shows the crossbar being inserted into the rail. A box with the number 1 is in the bottom right corner.

Diagram 2: Top view of the crossbar with dimension Y. A detail shows the crossbar being inserted into the rail. A box with the number 2 is in the bottom right corner.

Diagram 3: Top view of the vehicle showing the crossbar installation. A box with the number 3 is in the bottom right corner.




1031	38	ISUZU D-Max, 4-dr Crew Cab, 12-
1031	38	HOLDEN Colorado, 4-dr Double Cab, 12-
1031	38	GMC Canyon, 4-dr Crew Cab, 15-
1031	38	CHEVROLET S10, 4-dr Double Cab, 12-
1031	38	CHEVROLET Colorado, 4-dr Crew Cab, 15-

X inch X mm


Diagram 1: Side view of the crossbar with dimension X. A detail shows the crossbar being inserted into the rail. A box with the number 1 is in the bottom right corner.

Diagram 2: Top view of the crossbar with dimension X. A detail shows the crossbar being inserted into the rail. A box with the number 2 is in the bottom right corner.







Diagram 3: Top view of the vehicle showing the crossbar installation. A box with the number 3 is in the bottom right corner.

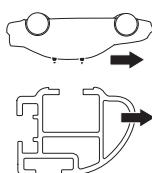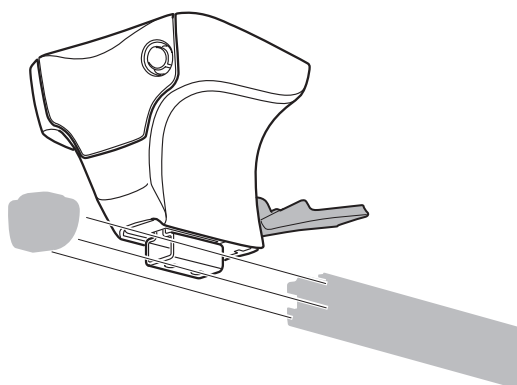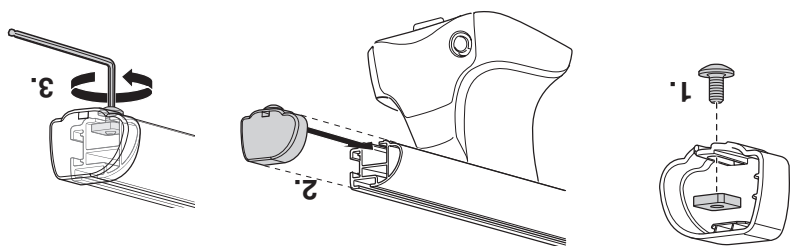

2

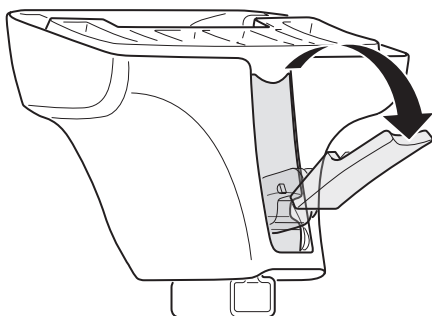


1

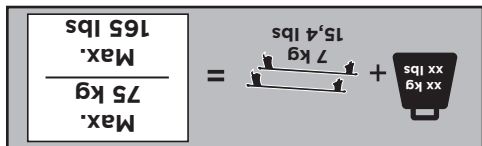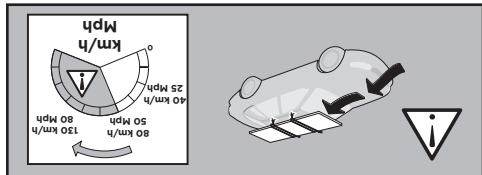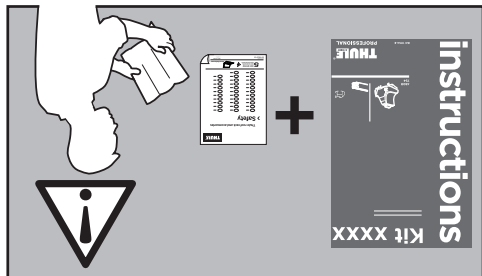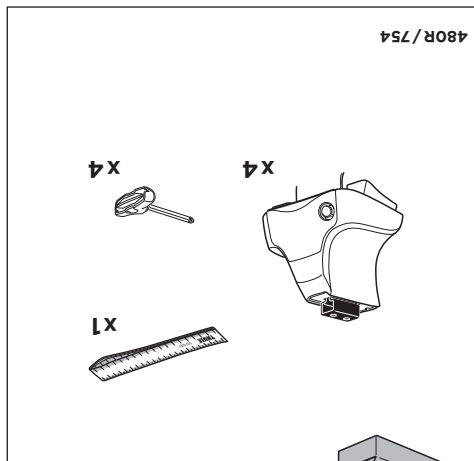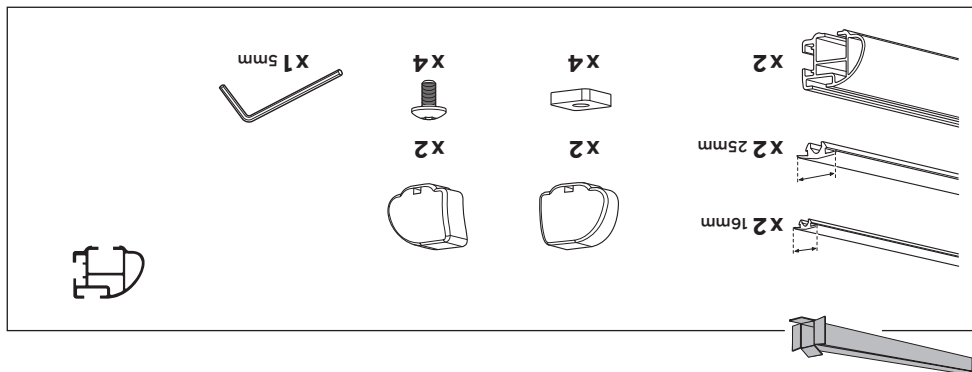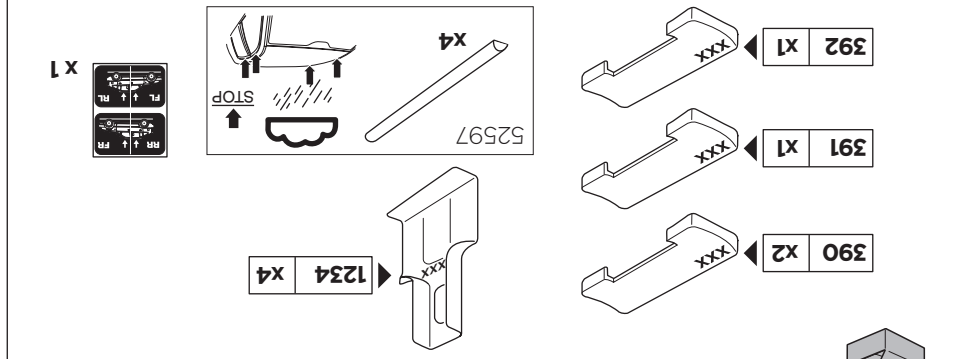


instructions

Kit 1783

CHEVROLET Colorado, 4-dr Crew Cab, 15-
CHEVROLET S10, 4-dr Double Cab, 12-
GMC Canyon, 4-dr Crew Cab, 15-
HOLDEN Colorado, 4-dr Double Cab, 12-
ISUZU D-Max, 4-dr Crew Cab, 12-

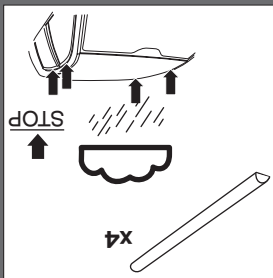

480R
754

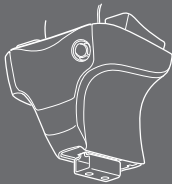

ISO 11154-E

PROFESSIONAL

THULE
SWEDEN