

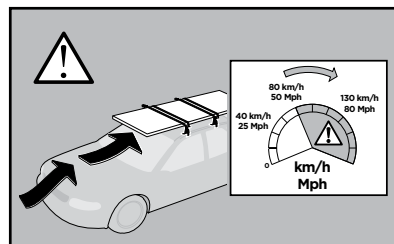
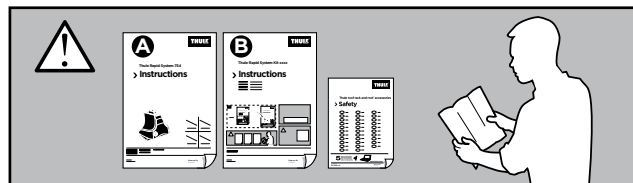


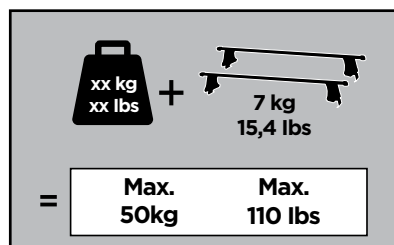

Thule Rapid System Kit 1805

> Instructions

SSANGYONG Tivoli, 5-dr SUV, 15-

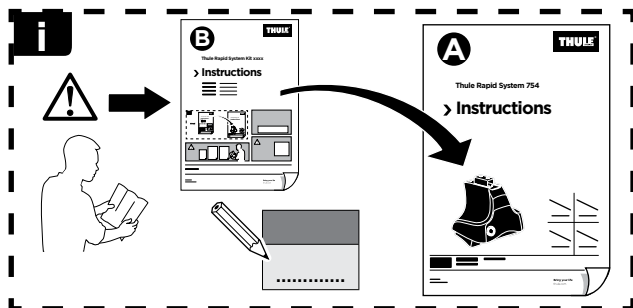

ISO 11154-E

141805

C.20151026

519-1805-01


Herbály Autó www.herbalyauto.hu

Bring your life


thule.com





149 x2




23 x1



24 x1



1215 x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
SSANGYONG Tivoli, 5-dr SUV, 15-	36	1011	39 ³/₄

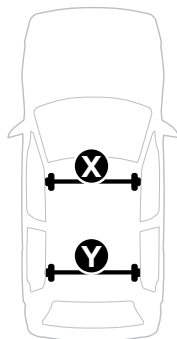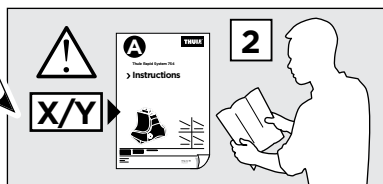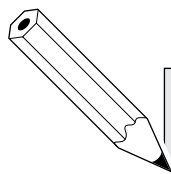



	Y (scale)	Y (mm)	Y (inch)
SSANGYONG Tivoli, 5-dr SUV, 15-	33	981	38 ⁵/₈

2

SSANGYONG Tivoli, 5-dr SUV, 15-

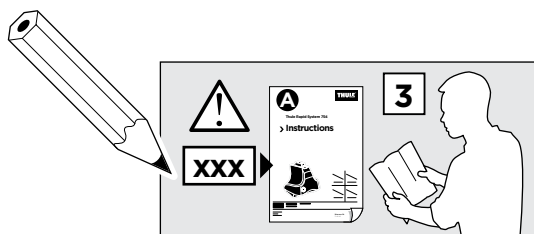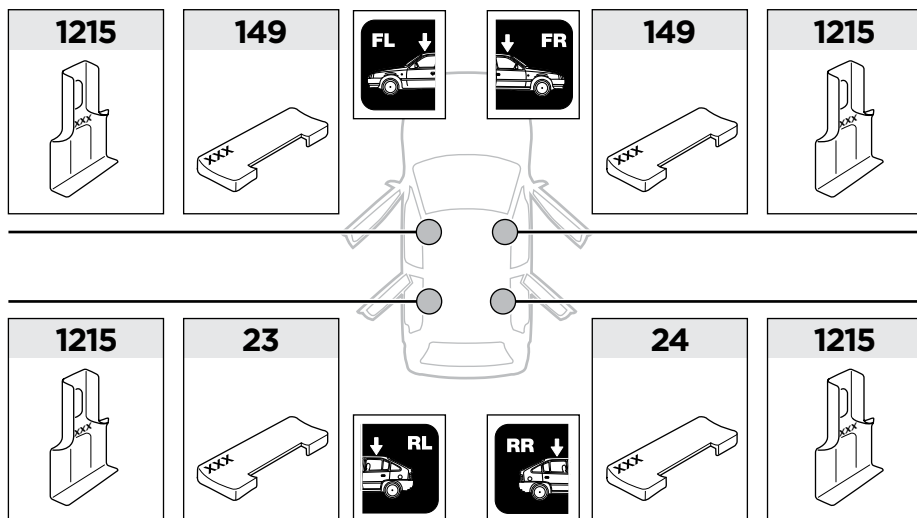

3

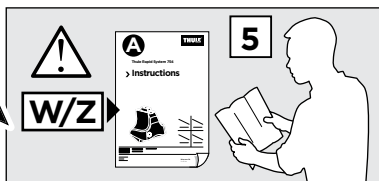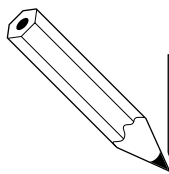

	W (mm)	Z (mm)	W (inch)	Z (inch)
SSANGYONG Tivoli , 5-dr SUV, 15-	380	750	15	29 1/2

