

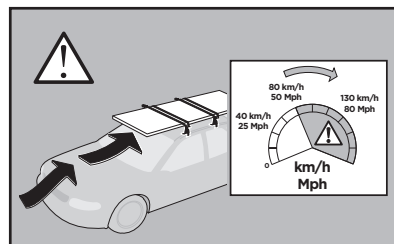
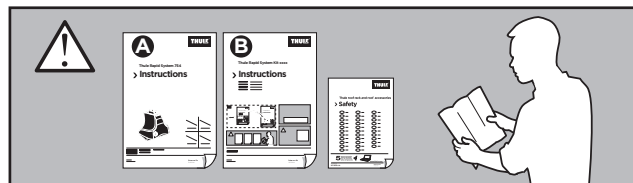


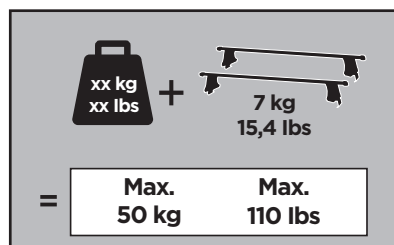

Thule Rapid System Kit 1822

> Instructions

RENAULT Twingo, 5-dr Hatchback, 14-

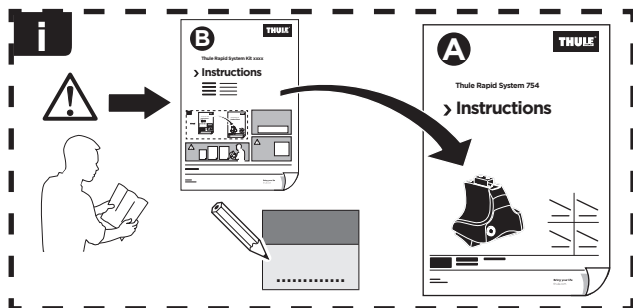

ISO 11154-E

141822

C.20160226

519-1822-01


Herbály Autó www.herbalyauto.hu

Bring your life


thule.com





179 x1



181 x1



248 x2



1377 x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
RENAULT Twingo, 5-dr Hatchback, 14-	32,5	976	38 ³ / ₈

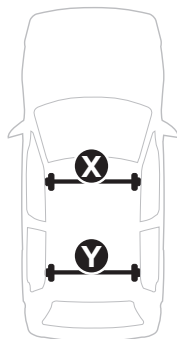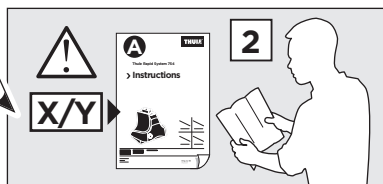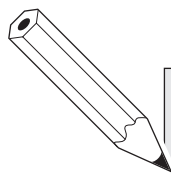



	Y (scale)	Y (mm)	Y (inch)
RENAULT Twingo, 5-dr Hatchback, 14-	28	931	36 ⁵ / ₈

2

RENAULT Twingo, 5-dr Hatchback, 14-

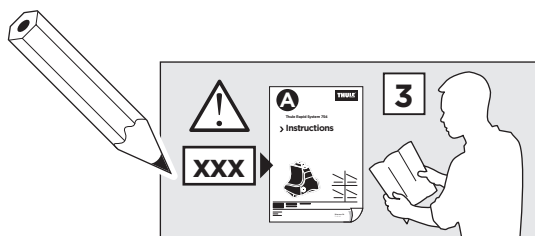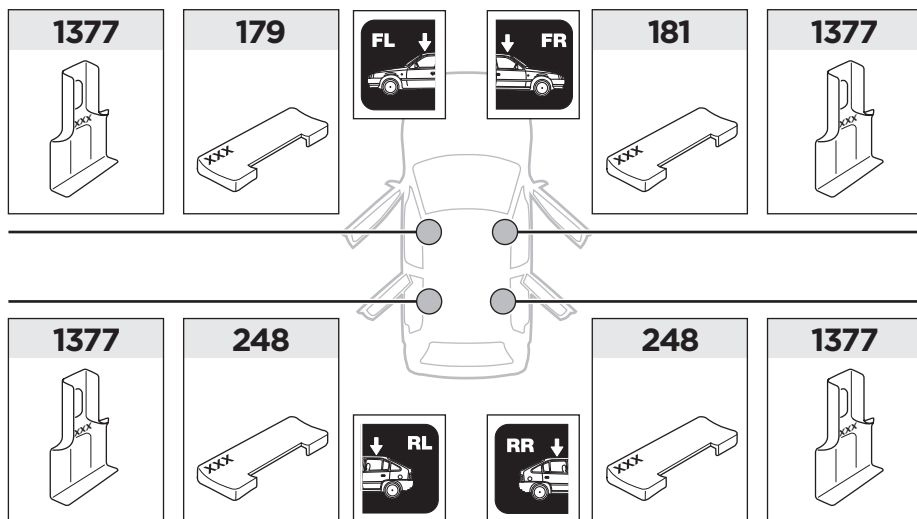

3

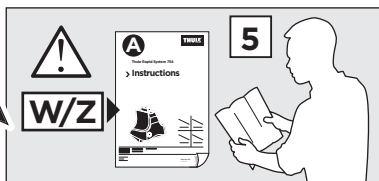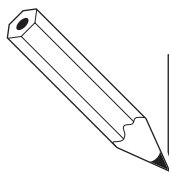

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Twingo, 5-dr Hatchback, 14-	250	730	9 ⁷/₈	28 ³/₄

