

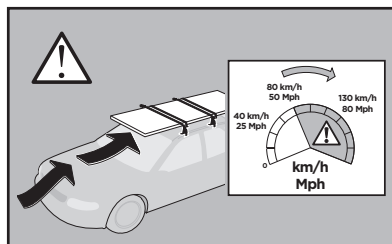
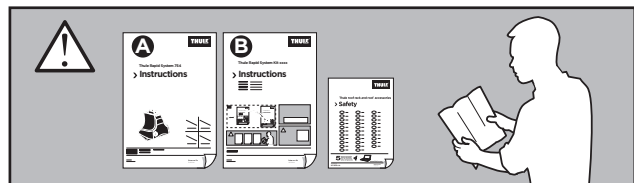


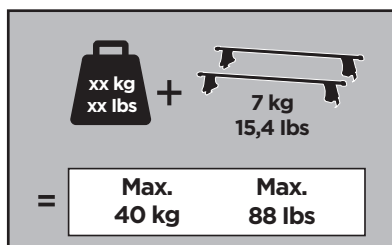

Thule Rapid System Kit 1830

> Instructions

BMW X1, 5-dr SUV, 16-

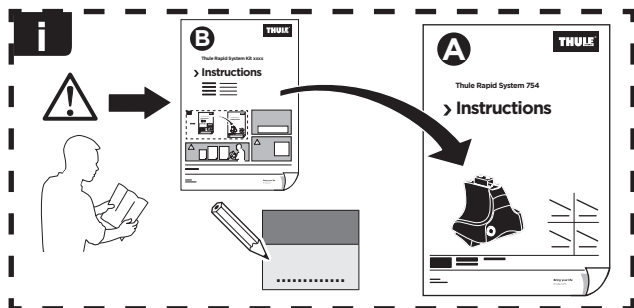

ISO 11154-E

141830

C.20160410

519-1830-01


Herbály Autó www.herbalyauto.hu

Bring your life


thule.com





348 x1




349 x1



404 x2



225 x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
BMW X1, 5-dr SUV, 16-	42	1071	42 ¹ / ₈

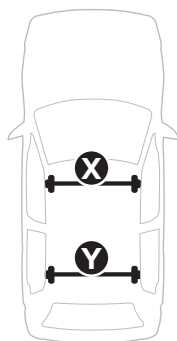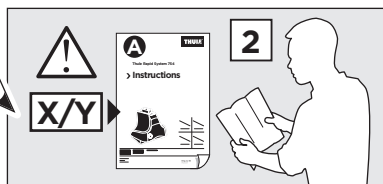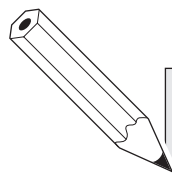


	Y (scale)	Y (mm)	Y (inch)
BMW X1, 5-dr SUV, 16-	40,5	1056	41 ⁵ / ₈

2

BMW X1, 5-dr SUV, 16-

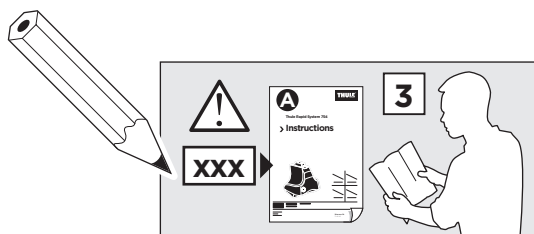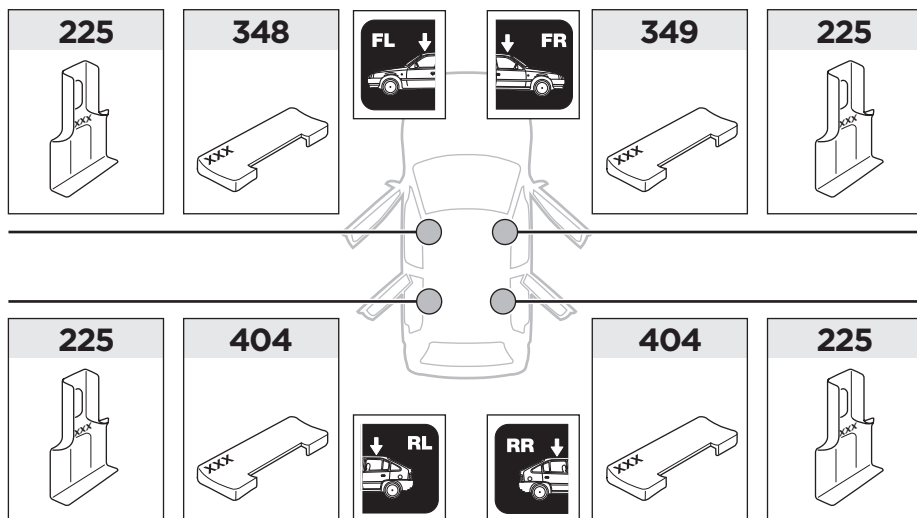

3

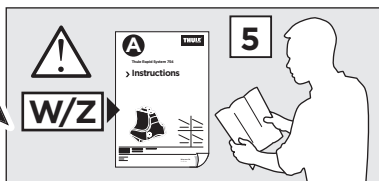

	W (mm)	Z (mm)	W (inch)	Z (inch)
BMW X1, 5-dr SUV, 16-	320	700	12 ⁵/₈	27 ¹/₂

