

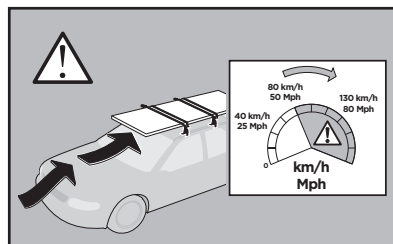
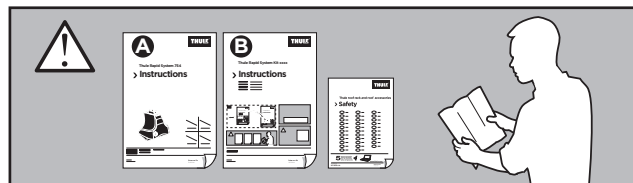


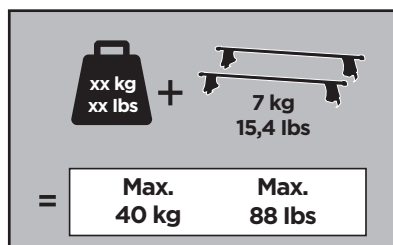

Thule Rapid System Kit 1831

> Instructions

BMW 2-Series Gran Tourer, 5-dr MPV, 15-

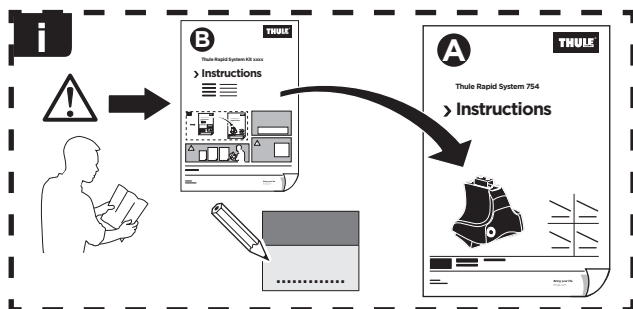

ISO 11154-E

141831

C.20160419

519-1831-01



Herbály Autó www.herbalyauto.hu

Bring your life


thule.com




454 x4



1343 x2



1384 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
BMW 2-Series Gran Tourer, 5-dr MPV, 15-	34,5	996	39 1/4

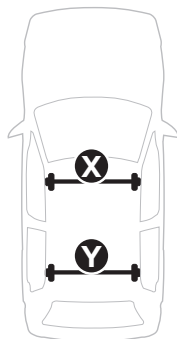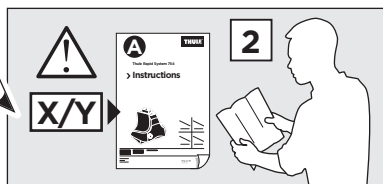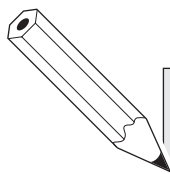


	Y (scale)	Y (mm)	Y (inch)
BMW 2-Series Gran Tourer, 5-dr MPV, 15-	31,5	966	38

2

BMW 2-Series Gran Tourer, 5-dr MPV, 15-

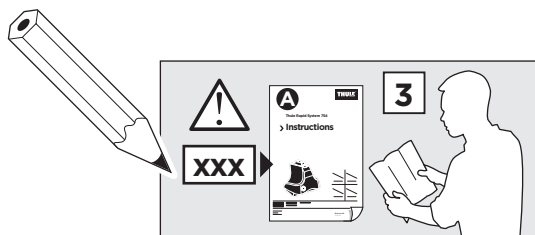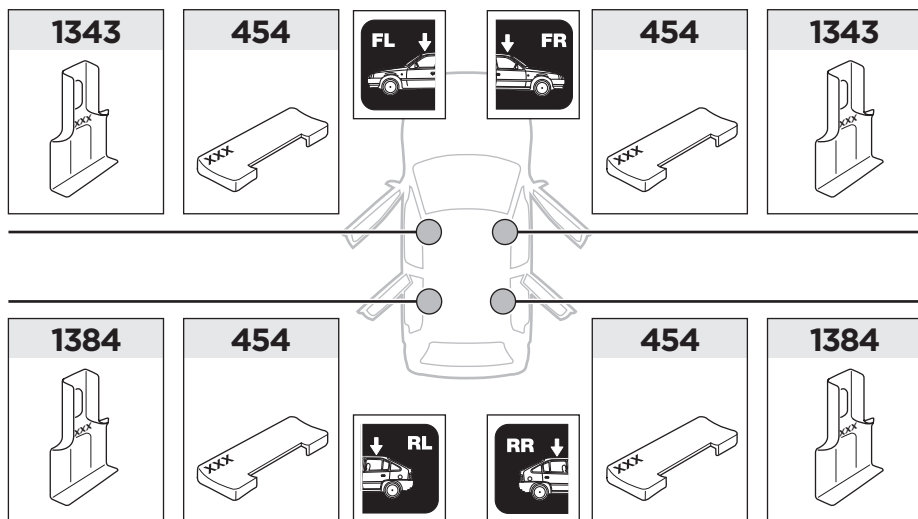

3

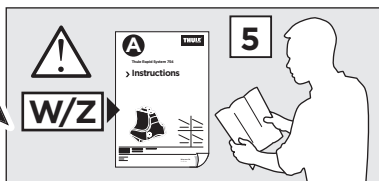

	W (mm)	Z (mm)	W (inch)	Z (inch)
BMW 2-Series Gran Tourer, 5-dr MPV, 15-	470	700	18 1/2	27 1/2

