






Thule XT Kit 3155

> Instructions

CITROËN Dispatch, 4-dr Van, 16-
CITROËN Jumpy, 4-dr Van, 16-
CITROËN SpaceTourer, 5-dr Bus, 16-
OPEL Vivaro, 4-dr Van, 19-
OPEL Zafira Life, 5-dr Bus, 19-
PEUGEOT Expert, 4-dr Van, 16-
PEUGEOT Traveller, 5-dr Bus, 16-
TOYOTA ProAce, 4-dr Van, 16-
TOYOTA ProAce Verso, 5-dr Bus, 16-
VAUXHALL Vivaro, 4-dr Van, 19-
VAUXHALL Vivaro Life, 5-dr Bus, 19-

This kit is only for vehicles with fixpoint mounting.

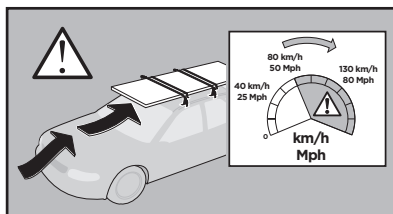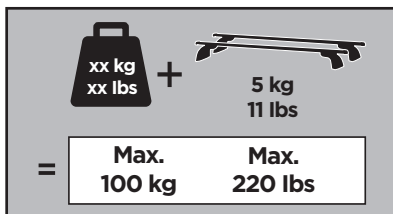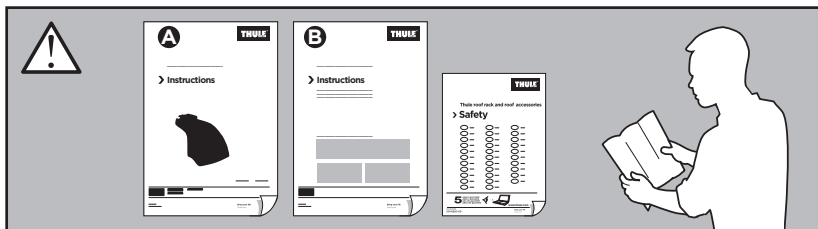


ISO 11154-E

183155

C.20191210
509-3155-03

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

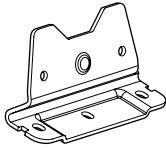


◀ **07** x4




50030
20 mm x4



31310 x4




x1

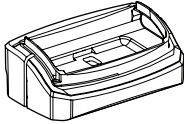

◀ **16** x4



52821 x4

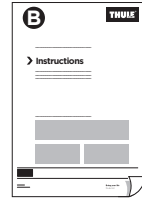


x1

A




12 mm x8




x1

1


07




16



16





07




07




16








16



07




2

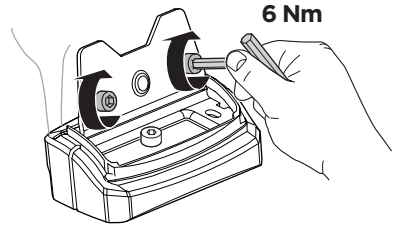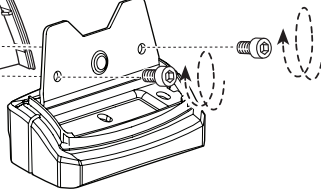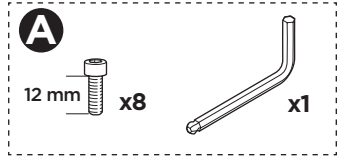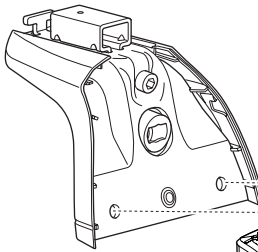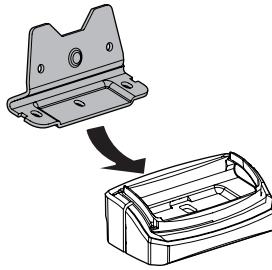



3




x1

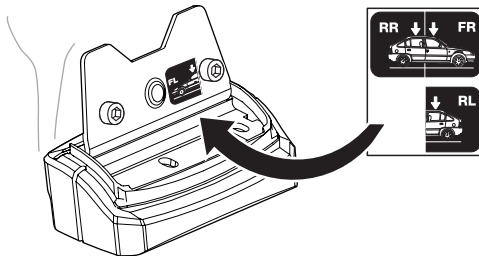


4




A

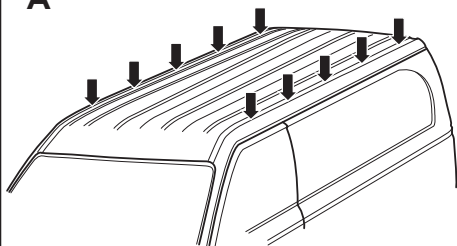


B

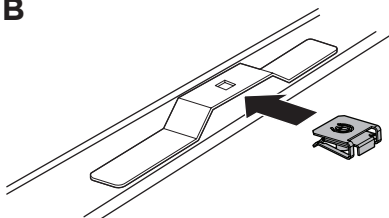

C

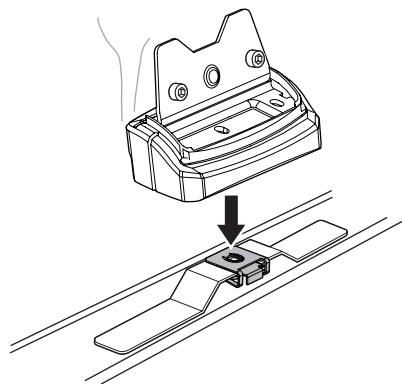

D

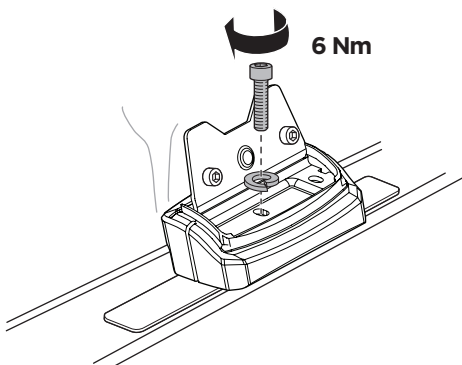

5

