







Thule XT Kit 3149

> Instructions

- VW California, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Caravelle, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Multivan, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Shuttle, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Transporter, 2-dr Single Cab, (T5) 03-15, (T6) 15-
- VW Transporter, 4-dr Double Cab, (T5) 03-15, (T6) 15-
- VW Transporter, 4-dr Van, (T5) 03-15, (T6) 15-

This kit is only for vehicles with fixpoint mounting or T-profile.

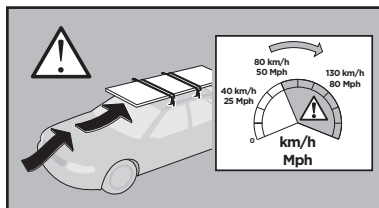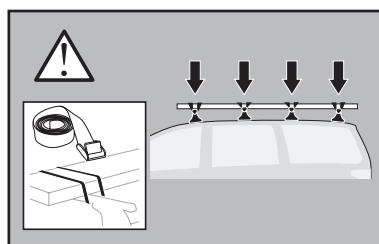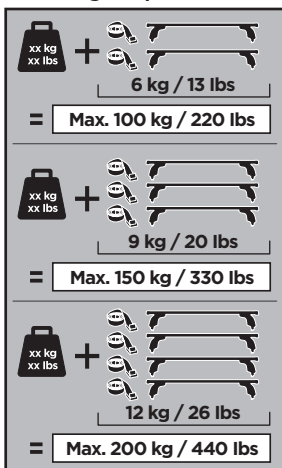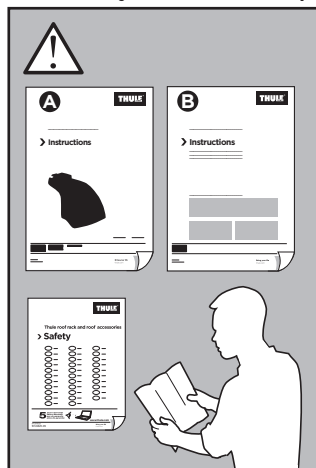






ISO 11154-E

183149

C.20150810
509-3149-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

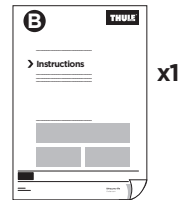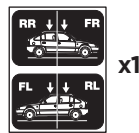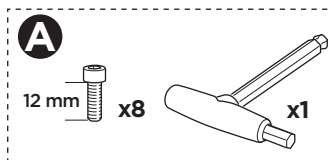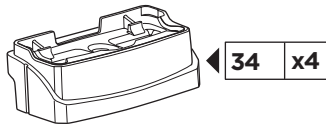

1

